


USER MANUAL

ENGLISH

eaglestrike

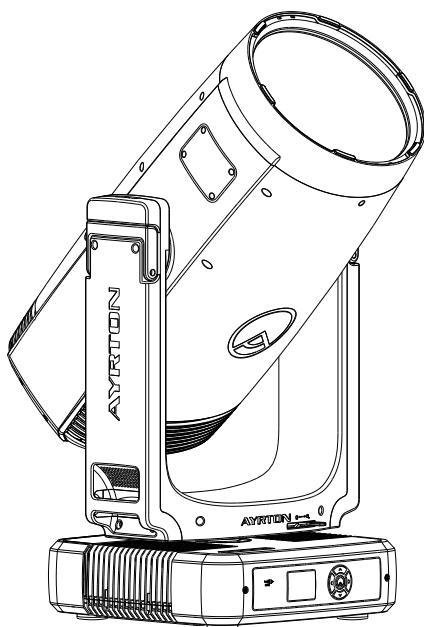

AYRTON
Digital Lighting

SCAN
FOR
MORE
ayrton.eu



2 Rue de Vitruve,
91140 Villebon-sur-Yvette,
France

CONTENTS

1. SAFETY INSTRUCTIONS	3
2. FEATURES	4
3. FIXTURE OVERVIEW	4
4. DRAWINGS	4
5. INSTALLATION INSTRUCTIONS	6
6. DMX-512 CONTROL CONNECTION	7
7. DMX-512 CONNECTION WITH DMX TERMINATOR	7
8. DEVICE DMX START ADDRESS SELECTION	7
9. OPERATING INSTRUCTIONS OF THE INTERNAL DMX WIRELESS SYSTEM	7
10. DISPLAY	8
11. NFC	12
12. DMX PROTOCOL	12
13. ERROR MESSAGES	12
14. CLEANING AND MAINTENANCE	14

Keep this manual for future needs.

Errors and omissions for all information given in this user manual are possible.
All information is subject to change without prior notice.



1. SAFETY INSTRUCTIONS

1.1 > IMPORTANT SAFETY WARNINGS

This device has left the factory in perfect condition. In order to maintain this condition and to ensure safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this user manual.

In order to install, operate and maintain the lighting fixture safely and correctly we suggest that the installation and operation be carried out by qualified technicians and these instructions be carefully followed.

CAUTION

	High voltage. Risk of severe or fatal electric shock.
	Always disconnect mains supply before removing any fixture covers.
	Never look directly into the light source. Sensitive persons may suffer an epileptic shock.
	Blue light hazard: risk group 2.
	Fixture exposed to salt water should not be stored in its foam insert without being cleaned with fresh water first. It is best practice that fixture be stored dry.
	Never touch the device during operation. covers may be hot.
	Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
	Note: This equipment has been tested and found to comply with the limits for a class a digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Damage caused by the disregard of this user manual is not subject to warranty. The dealer and manufacturer will not accept liability for any resulting defects or problems.

- If the device has been exposed to temperature changes due to environmental conditions, do not power on immediately. The resulting condensation could damage the device. Leave the device powered off until it has reached room temperature.
- Ensure the sealing rubber covers of powerCON TrueOne and XLR connectors are fitted properly when the device is not in use, to

avoid water ingress.

- This device falls under protection-class I. Therefore, it is essential that the device be earthed.
- If either lenses or display are damaged (damage may include cracks or gashes in the material) they must be replaced.
- Electrical connections, such as replacing the power plug, must be performed by a qualified person.
- Make sure that the available voltage is not higher than that which is stated in this manual.
- Make sure the power cord is never crushed or damaged by sharp edges. If this should be the case, replacement of the cable must be done by an authorized dealer.
- If the external flexible power cord of this device is damaged, it shall be exclusively replaced by the manufacturer or their service agent or a similar qualified person in order to avoid injury.
- When the device is not in use or before performing maintenance, always disconnect the device from the mains. Only handle the power cord from the plug. Never pull the plug out of a socket by tugging the power cord.
- When powered on for the first time, some smoke or smell may occur. This is caused by coating on metal parts when heated and is normal. If you are concerned, please contact your distributor.
- Do not focus the beam onto flammable surfaces. The minimum distance between the exiting lens of the device and the illuminated surface must be greater than 6 meters.

CAUTION

Please be aware that damage caused by any modifications to the device are not subject to warranty. Keep away from children and non-professionals.

1.2 > GENERAL GUIDELINES

- This device is a lighting effect for professional use on stages, in discotheques, theatres, etc. The device was designed for indoor and outdoor use.
- This fixture is only allowed to be operated within the maximum alternating current as stated in the technical specifications in section 2 of this manual.
- Handle the device with care avoid shaking or using force when installing or maintaining the device.
- If you use the quick lock cam when rigging the device, make sure the quick lock fasteners are located in the quick lock holes correctly and securely.
- Operate the device only after having familiarized yourself with its functions. Do not permit operation by persons not qualified for operating the device. Most damage is the result of unprofessional operation.
- Please use the original packaging if the device is to be transported.
- The applicable temperature for the device is between -20°C to 45°C. Do not use the device outside of this temperature range.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

CAUTION

For safety reasons, please be aware that all modifications to the device are forbidden. If this device is operated in any way different to the ones described in this manual, the product may suffer damage and the warranty becomes void. Furthermore, any other operation may lead to short-circuits, burns, electric shocks, etc...

2. FEATURES

POWER SUPPLY

- AC100-240 V~, 50/60 Hz
- Power Consumption: 1450 W maximum

OPTICS

- Beam aperture: 2.9° to 43°
- 270 mm frontal lens

LIGHT SOURCE

- 1200 W LED white light engine
- Colour temperature output: 6500 K
- CRI: 70

MOVEMENT

- Pan and tilt automatic repositioning
- Range: infinite pan rotation & 270° tilt rotation

COLOURS

- Sophisticated CMY Colour mixing
- Variable CTO 2900 to 6500 K
- Two static colour wheels with 11 colour filters

GOBOS

- 7 indexable gobos: 5 glass gobos & 2 beam reducers
- 7 indexable gobos: 5 metal gobos & 2 multicolours
- Adjustable-speed rotating gobo

FRAMING SYSTEM

- 4 individually shutter blades
- Rotation of the module: +/- 90°

IRIS DIAPHRAGM

- 15-blade iris diaphragm
- Range: 15% to 100% open

FROST

- 2 frost filters: one light, one heavy

PRISMS

- 2 combinable rotating and indexable prisms
- One 5-facet circular, one 4-facet linear

EFFECTS

- Focusable graphic animation effect-wheel
- Continuous rotation in both directions

DIMMER / STROBE

- Electronic dimmer from 0 to 100%
- Strobe effect: 1 to 25 flashes per second

HARDWARE FEATURES

- Graphic LCD display with flip function
- 5 menu buttons to set functions
- Integrated wireless LumenRadio™ receiver
- IP65 XLR 5 pin connectors
- IP65 RJ45 connectors
- IP65 powerCON TRUE1 TOP connectors

CONTROL

- DMX 512 protocol
- DMX-RDM compatible
- Stand-alone mode, local control panel
- ArtNet™ & sACN protocol
- 66/44 DMX channels

COOLING SYSTEM

- Advanced liquid cooling system
- Selectable ventilation user modes
- Excess temperature protection

HOUSING

- Skeleton made of aluminium

- Base in die-cast composite alloy
- Heatsinks in aluminium and copper
- Moulded covers ABS PC (VO class)
- 4 handles on the yoke
- 4 heavy-duty feet
- IP65 protection rating (IP66 optional)

INSTALLATION

- 2 Omega ¼ turn brackets
- 8 ¼ turn mounting points
- Safety cable attachment point

OPERATING PARAMETERS

- Maximum permitted: 45 °C (113 °F)
- Minimum permitted: -20 °C (-4 °F)
- Minimum usage distance: 6 m (19.69 ft)

COMPLIANCE

- CE, UKCA, ETL


SIZE

- Product: 450 x 898 x 413 mm (l x h x d)
- Foam: 770 x 690 x 560 mm (l x h x d)

WEIGHT

- Product: 54.7 kg





3. FIXTURE OVERVIEW

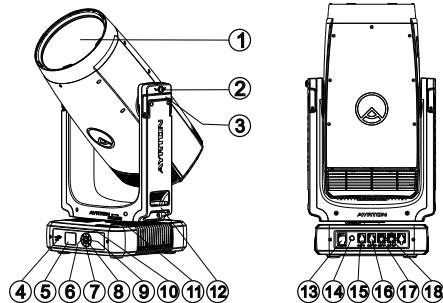



1. Front Lens	7. Down-button	13. Power In
2. Tilt Lock	8. Center-button	14. Valve
3. Handle	9. Right-button	15. RJ45 In
4. NFC	10. Up-button	16. RJ45 Out
5. Display	11. Pan Lock	17. DMX In
6. Left-button	12. Handle	18. DMX Out

4. DRAWINGS

4.1 FIXTURE DIMENSION

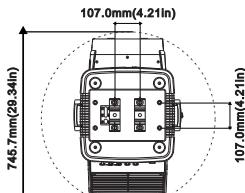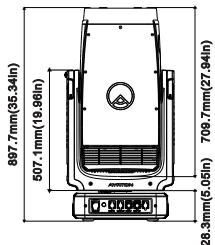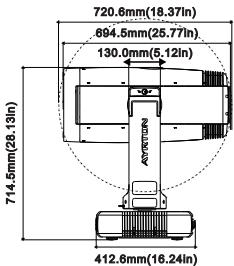
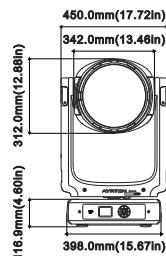


4.2 > COLOUR WHEEL

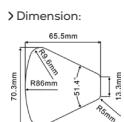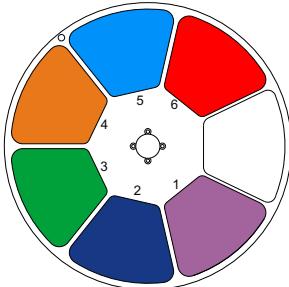

COLOUR WHEEL 1



1	Magenta	GGP0100732
2	Congo Blue	GGP0100733
3	Green	GGP0100735
4	Orange	GGP0100734
5	Blue	GGP0100736
6	Red	GGP0100797

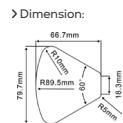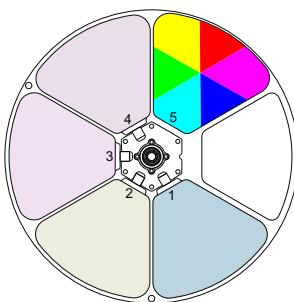

COLOUR WHEEL 2

1	Gobo correction (CTB)	GGP0100755
2	Daylight CRI 80	GGP0100860
3	Half Minus Green	GGP0100729
4	High CRI 90	GGP0100724
5	Multi-colour	GGP0100789



4.3 > ROTATING GOBO WHEEL

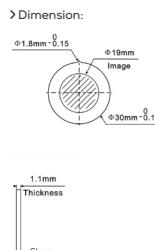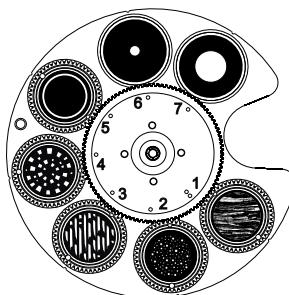

GOBO WHEEL 1

Rotating Gobo

1	105	Tree Bark	GGP0501308
2	075	Star Field	GGP0501307
3	278	Bread Stix	GGP0501306
4	070	Circle of Squares	GGP0501305
5	410	Conical Tunnel Effect	GGP0501304
6	307	Beam Reducer 0.9° 30% Iris Beam	GPB0004659
7	302	Beam Reducer 2.5° 80% Iris Beam	GPB0004661

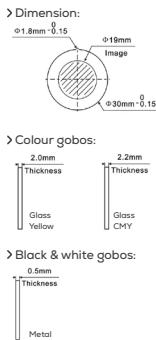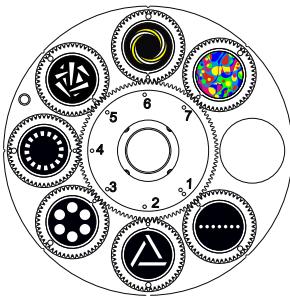


GOBO WHEEL 2


Rotating Gobo

1	131	Dot Line 7	GGP0501218
2	427	Split Triangle 2	GGP0501309
3	320	Dot Ring 6	GGP0501227
4	369	Trapezium Ring 16	GGP0501221
5	266	Breaking Glass	GGP0501246
6	112Y	Nested Rings Yellow	GGP0501303
7	042	CMY Liquid Effect	GGP0501302

4.4 > ANIMATION WHEEL

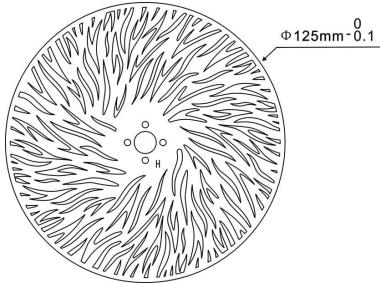

4.5 > ACCESSORIES

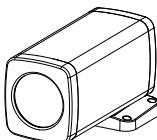

Camera Enclosure



Omega Bracket

ACCESSORIES

1	Camera Enclosure	042840
2	Omega Bracket	GP50501990353

5. INSTALLATION INSTRUCTIONS

5.1 > RIGGING THE DEVICE

CAUTION

Please consider the respective national norms during the installation. The installation must only be carried out by a qualified person.


- The installation of the effect has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.
- The installation must always be secured with a secondary safety attachment, e.g. an appropriate safety rope.
- Never stand directly below the device when mounting, removing or servicing the fixture.
- The operator has to make sure the safety relating and machine technical installations are approved by an expert before taking the device into operation for the first time.
- These installations have to be approved by a skilled person once a year.
- Overhead mounting requires extensive experience, including amongst others calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the device. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury.

5.2 > RIGGING USING THE OMEGA BRACKETS

CAUTION

This step is very important to ensure safe rigging of the fixture.

- Fix the clamp to the bracket by tightening the M12 nut and bolt to the bracket through the Ø13 hole in the middle of the bracket.
- Insert the quick lock fasteners of the first Omega holder into the respective holes on the bottom of the device. Tighten the quick lock fasteners fully clockwise.
- Install the second Omega holder.
- Pull the safety cable through the handle of the base and over the trussing system or another suitable rigging point. Insert the end into the carabiner and tighten the safety screw.

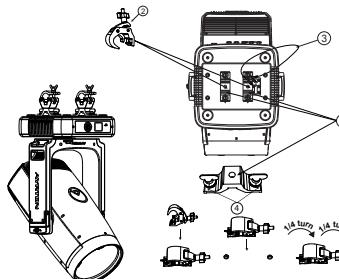

1. Omega bracket

2. Clamp


3. Safety rope

4. Quick-lock fastener

5.3 > RIGGING DRAWINGS

CAUTION


Overhead rigging requires extensive experience, including (but not limited to) calculating working load limits, specifying installation/rigging materials, and periodic safety inspection of all installation material as well as the device. If you lack these qualifications, do not attempt the rigging of this device yourself. Improper installation/rigging can result in serious bodily injury.

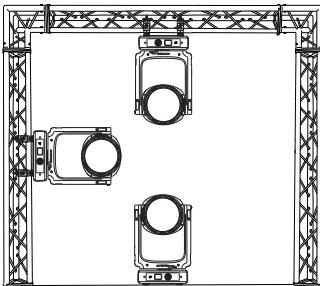

- **WARNING!** When the fixture is at side-hang position, its center of gravity is in the worst-case scenario, which would generate significant stress on the yoke than at other positions; in this case, P/T movement may produce some random noise, which is considered normal and not affect the performance of the fixture.
- **WARNING!** Please ensure that under no circumstances should the lens be placed face down on any surface, including the ground, as this may cause damage to the lens or impair its optical performance.
- Be sure this fixture is kept at least 0.1 m away from any flammable materials (decoration etc.).
- Always use and install a safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.
- **WARNING!** Always use and install original Ayrton accessories to ensure a safe installations and use of the unit. Ayrton WILL NOT be responsible for the use of third party accessories.
- Rig the projector high enough to provide clearance for people who may walk beneath the beam path or establishing a restricted access area that extends beyond the beam hazard distance.
- **WARNING!** Please DO NOT let other external intense lights to shine through the fixture front lens, it may cause significant internal damages.
- When install fixture outdoor at day time, please make sure that the fixture front lens is NOT facing the sun.
- When fixture is on standby outdoor at day time, please make sure the «Sun Protection» mode is ON (default).

6. DMX-512 CONTROL CONNECTION


Connect the provided male side of the XLR cable to the female XLR output of your controller and the female side of the XLR cable to the male XLR input of the device. You can connect multiple devices together in a serial fashion. The cable needed should be two core screened cable with XLR input and output connectors. Please refer to the diagram below.

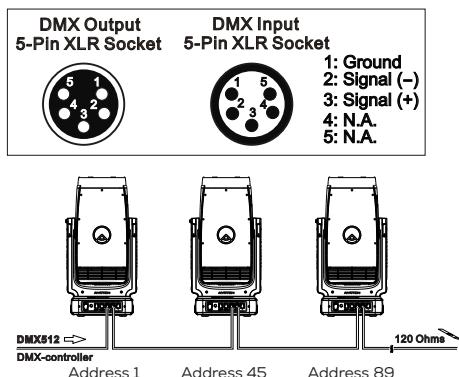

7. DMX-512 CONNECTION WITH DMX TERMINATION

For installations where the DMX cable has to run over a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal caused by electrical noise. The DMX terminator is an XLR plug with a 120 Ω resistor connected between pins 2 and 3, which is then plugged into the output (female) XLR socket of the last fixture in the chain.

Please see illustrations below.

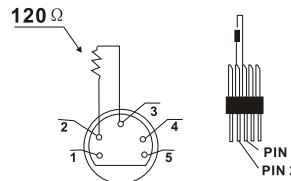

8. DEVICE DMX START ADDRESS SELECTION

All fixtures should be given a DMX starting address when using a DMX signal, so that the correct fixture responds to the correct control signals. This digital starting address is the channel number from which the fixture starts to "listen" to the digital control information sent out from the DMX controller. The allocation of this starting address is achieved by setting the correct address number on the display located on the base of the device.

You can set the same starting address for all fixtures or a group of fixtures, or set different addresses for each fixture individually.

If you set the same address on all devices, all the devices will start to "listen to" the same control signal from the same channel number. In other words, changing the settings of one channel will affect all the fixtures simultaneously.

If you set a different address, each unit will start to "listen" to the channel number you have set, based on the quantity of control channels of the unit. That means changing the settings of one channel will affect only the selected device.

In the case of the LED moving head, in 44 channel modes, you should set the starting address of the first unit to 1, the second unit to 45 (44 + 1), the third unit to 89 (44 + 45), and so on.

9. OPERATING INSTRUCTIONS OF THE INTERNAL DMX WIRELESS SYSTEM

9.1 > EQUIPMENTS

This product is equipped with a Lumen radio Timo DMX receiver

9.2 > MESSAGE FROM THE LED INDICATOR

- Solid Green: Logged on to a transmitter and actively receiving DMX data.
- Solid Red: Not logged on to any transmitter (available) or not receiving DMX data.

9.3 > WDMX IN THE MENU OF THE FIXTURE

In the shortcut menu, you'll find the option "Unlink W-DMX." Selecting this will disconnect the fixture from its current transmitter.

9.4 > SET UP THE WIRELESS SYSTEM

To connect the fixture to a transmitter, the transmitter must be in pairing mode.

You can activate this mode by selecting "Unlink W-DMX" from the fixture's menu or by performing a factory reset on the fixture. Once the transmitter is ready, press its pairing button to link the devices.

Important Notes:

- After each job, please log out all receivers from the transmitter. This ensures the receivers return to an unassigned state and are ready for future pairings.
- Do not connect a fixture that is wirelessly linked to a transmitter to a DMX controller via cable. Doing so may cause signal interference.

10. DISPLAY

- The Display offers several features: you can set the starting address run the pre-programmed program or reset the device.
- The main menu is accessed by double clicking  button until the display starts flashing.
- Browse through the menu by pressing , , , or  button.
- Press  for 2 seconds in order to exit menu, double click  for confirm. After accessing the edit mode, the unit will automatically exit to the main menu after 15 seconds from the last button press.
- When the unit is powered on if no data signal is connected after 1 minute then the display will switch off automatically.

DEFAULT SETTINGS SHADED - V1

Options			
Fans Control	Fans Speed	 Stage  Super Silence	Fans Speed select
	Constant Fans	 	Constant Fans
Disp. Setting	Shutoff Time	02-60m 	Display shutoff time
	Flip Display	 	Reverse 180 degree
	Key Lock	 	Key Lock
	DispFlash	 	DispFlash
Temp. C/F	Celsius 		Temperature switch between °C / °F
Initial Pos.	PAN =XXX		Initial effect position
Dim Curve	 Linear Linear Low		Dim Curve
Refresh Select	 24K 16K 25K		Refresh Select
Defog	  		Defog off Defog auto Defog on
Gobo Correction	 		Gobo Correction
Reset P/T Fade	 		Reset P/T Fade
Frost (Progressive)	 		Frost (Progressive)
Trigger	DMX Value Disp. Set to Follower  Follower 2, Follower 3 Leader/Alone	PAN... 	DMX Value Disp. Set to Follower Auto Program
Reset Default	 		Restore factory set.
Reset Options	 		Reset Options
Reset User Set	Address	DMX address: 001-XXX Decimal Universe: XXXXX Net: XX Sub-Net: X Universe: X Signal:  /WDMX/Art-Net/sACN	DMX Address Decimal Universe Net Sub-Net Universe Signal
Mode	 		User's mode to change channel numbers
Fans Speed	 Stage  Super Silence		Fans Speed select
Constant Fans	 		Constant Fans
Info			
Time Info.	Current Time Ttl Life Hrs Lost Run Hrs LED Hours Current SW Hrs Timer PIN Clr Lost Run		XXXX(Hours) XXXX(Hours) XXXX(Hours) XXXX(Hours) Password = XXX  
Temp. Info	Temp	L: XXX °C / °F Max: XXX °C / °F B: XXX °C / °F Max: XXX °C / °F Min: XXX °C / °F H: XXX °C / °F Max: XXX °C / °F Min: XXX °C / °F	Reset Temp

Info		
Humidity	x%	Humidity
Fan Info.	xxxx RPM	Fan information
LED Type	xxx	LED Type
Software Ver	V1.0.....	Software version
Signal Quality	xxx	Signal Quality Information
Network	IP, Mask, Mac	Network
Error Info.	Error Record 1	Error Info.
SN	Product:xxxxx... LED:xxxxx...	SN
RDM UID	UID: xxxx-xxxxxx	RDM UID

Test		
Home	All Pan&Tilt Colour Gobo Other	All Pan&Tilt Colour Gobo Other
Test Channel	PAN	Test function

Test		
Manual Ctrl.	PAN =XXX	Fine adjustment of the lamp
Calibration	-Password- PAN	Password "050" Calibrate and adjust the effects to standard/right position
Gobo Replace	Gobo Wheel 1 Gobo Wheel 2	Gobo Replace

Preset		
Select Prog.	Prog. Part 1 = Program 1 ~ 10 Program 1 Prog. Part 2 = Program 1 ~ 10 Program 2 Prog. Part 3 = Program 1 ~ 10 Program 3	Select programs to be run
Edit Prog.	Program 1 Program 10	Program Test Step 01=SCxxx Step 64=SCxxx Program in loop Save and exit
Edit Scenes	Edit Scene 001 ~ Edit Scene 250	Pan,Tilt..... --Fade Time-- --Scene Time-- Input By Outside Save and automatically return manual scenes edit
Scenes Input	XX-XX	Scenes Input

10.1 > ADDRESS

10.1.1. Address

With this function, you can adjust the DMX address, the Universe and the selection of the control signal

10.2 > MODE

10.2.1. User Mode

With this function, you can choose user defined channel orders.

10.3 > OPTIONS

10.3.1. Status

No DMX Status

With this function, you can choose the unit behavior in case no signal is detected between Close (all dmx value to 0), Hold (keep the last dmx value), and Auto (start auto mode).

Sun Protection

When this function is activated, the unit will automatically tilt down its head toward the ground when no signal is detected.

Pan Reverse

With this function you can reverse the Pan-movement.

Tilt Reverse

With this function, you can reverse the Tilt-movement.

Pan Degree

With this function, you can select the total Pan degree range between 630, 540 or 360SC.

360SC

This mode limits the total range of movement (pan or tilt) to a maximum of 360°. Since the fixture supports continuous rotation, it automatically selects the shortcut (SC) or fastest path between two position commands. For example, if transitioning from a pan position of 359° to 4°, the fixture will take the direct route, preventing unnecessary flips or spinouts.

Feedback

This function allows you to activate or deactivate the automatic repositioning of the Pan & Tilt in case of an accidental/manual move of the yoke.

Init PAN

This function allows you to deactivate the Pan movement.

Init TILT

This function allows you to deactivate the Tilt movement.

Prerig INIT

Allows you to activate a special init process: Pan init then Tilt init process when unit is used in prerig trusses

Reset Mode

This function allows you to choose the reset process for the gobo.

- Fast : The fixture only check the direction of the first gobo
- All Rot Gobo : The fixture is checking all the position of each gobo to make sure all the gobo are in the same position (Useful if using a custom Gobo)

Pan/Tilt Spd

With this function, you can select Pan & Tilt speed from "Fast", "Medium", "Slow", "FS Mode", "Tracking 360".

▪ Tracking 360 Mode

- Visual Feedback – When activated, the fixture will pan 90 degrees from its normal position to indicate the mode is enabled.
- Pan & Tilt Adjustments – In this mode, the pan range is limited to 360 degrees with a shortcut (-180 ° to +180 °) for smoother control. The tilt range remains unchanged. Make sure the correct tilt setting is selected (default is 270 °, with an option for '540 °').
- Enhanced Responsiveness – Acceleration and deceleration are optimised for quicker, more precise tracking performance.
- FS Mode
- Enhanced Responsiveness – Acceleration and deceleration are highly reactive to improve tracking performance.

CMY Spd

With this function, you can select CMY speed from "Fast", "Medium", "Slow".

Zoom/Focus Spd

With this function, you can select Zoom/Focus speed from "Fast", "Medium", "Slow".

Reset LED Fade

Allows the Light output to fade out and in during the reset process.

Hibernation

The device and stepper motors will be powered off if the unit stays without DMX signal for the User defined times (in Minutes). The fixture will perform a reset sequence once DMX is back.

DMX Output

With this function, the unit can transmit the signal received via WDMX or ArtNet/sACN through the DMX output.

Data Collect

With this Function, you can activate the collection of data information for the IoT (The optional board is needed to use this option).

4G/Wifi

With this function, you can select between Wifi or 4G.

Wifi Info

This feature allows you to view the WiFi status and disconnect the current network using the «Clear» option.

10.3.2. Service PIN

Password

The Password for this function is "050".

Set IP

This function allows you to set the IP of the Unit.

Set Mask IP

This function allows you to set the IP Mask of the Unit.

Reset From Mac

This function allows the Unit to take its IP automatically using its Mac address.

DHCP.

This function allows you to enable or disable the DHCP.

IoT Lock Enable

Enable or Disable the IoT Lock function (The optional board is needed to use this option).

Cross Load SW

This function allows you to upload the current SW version to other units using a DMX connection. Do not disconnect the units before the process is complete.

Clr Error Info

This function allows you to clear the error info list.

10.3.3. Fans Control

Fans Speed

With this function, you can set the fans speed. Settings are Auto, Stage, Silence, and Super Silence.

- Auto: The LED module delivers **high** output and the fans ramp up and down depending on the ambient temperature and the temperature of the LED module itself.
- Stage: The LED module delivers **full** output and the fans remain at full speed regardless of the temperature of the LED module.
- Silence: The LED module is limited to **medium** output and the fans rotate at a slower speed.
- Super Silence: The LED module is limited to a **lower** output and the fans rotate at the slowest speed.

For specific output details, refer to photometry document.

Constant Fans

Enables you to set the fans to run continuously, even when the LED is off.

10.3.4. Disp. Setting

Shut off Time

With this function, you can select the delay before the LCD display turns off. Choose between 2 to 60 minutes. The default is 5 minutes.

Flip Display

With this function you can rotate the display by 180° (when the unit is rigged).

Key Lock

With this function you can activate the automatic key lock function. If this function is activated, the keys will be locked automatically after exiting the edit mode for 15 seconds. Keeping press the <MODE/ESC> key for 3 seconds if you do not need this function.

DispFlash

With this function activated, display will flash if no signal is detected.

10.3.5. Temperature C/F

 
With this function you can display the temperature in Celsius or Fahrenheit.

10.3.6. Initial Pos.

With this function you can display initial effect position.

10.3.7. Dim Curve

With this function you can select the Dimmer Curve.



10.3.8. Refresh Select

With this function you can select the PWM rate.

- 12K & 2.4K : provides superior dimming quality, especially for smooth fadeouts at lower levels
- 16K & 25K : are ideal for broadcast use

10.3.9. Defog

This function allows you to set the defog mode as follows:

- **ON**: Activates the defog fan (excluding the LED module cooling fans), sets the dimmer to full, and zoom to minimum. This function should only be used when necessary.
- **AUTO**: Activates the defog fan (excluding the LED module cooling fans) when temperature and humidity reach a certain level. Zoom and dimmer are not affected.
- **OFF**: No defogging actions are performed, the defog fan will not rotate and the heaters are turned off.

If ON or AUTO are selected, the heater plate will turn on when the unit is powered on. The Heater will turn on and off as necessary to maintain a constant internal temperature of 45 C

10.3.10. Gobo Correction

This function allows you to enable or disable the Gobo Correction. The Unit will automatically insert a correction filter when a glass gobo is inserted.

10.3.11. Reset P/T Fade

This function allows you to choose the reset speed of the pan/tilt motors to avoid fast movement.

10.3.12. Frost (Progressive)

This function allows you to enable or disable the progressive insertion of the frost.

10.3.13. Trigger

DMX Value Disp.

With this function you can display the DMX 512 value of each channel. The display automatically shows the channel with a value changing.

Set to Follower

With this function, you can define the device as follower.

Auto Program

With this function, you can run the internal program. You can select the desired program under "Select program". You can set the

number of steps under "Edit program". You can edit the individual scenes under "Edit scenes". With this function, you can run the individual scenes either automatically, i.e. with the adjusted Step-Time.

10.3.14. Reset Default

With this function, you can select restore factory set for ON or OFF. the default is OFF.

10.3.15. Rst Options

This function restores only the altered options settings (highlighted values in the chart above) to their default state.

10.3.16. Reset User Set

With this function, you can define the following "restore user" values:

- Address
- Mode
- Fans Speed
- Constant Fans

10.4 > INFO

10.4.1. Time Info.

Current Time

With this function, you can display the temporary running time of the device from the last power on. The display shows "XXXX". "XXXX" stands for the number of hours. The counter is reset after turning the device off.

Ttl Life Hrs

With this function, you can display the running time of the device. The display shows "XXXX". "XXXX" stands for the number of hours.

Last Run Hrs

With this function, you can display last the running time of the device. The display shows "XXXX". "XXXX" stands for the number of hours.

LED Hours

With this function, you can display the time of LED. The display shows "XXXX". "XXXX" stands for the time of LED.

Current SW Hrs

With this function, you can read the software running time of the device. The display shows "XXXX", "XXXX" stands for the number of hours.

Timer PIN

With this function, you can display the timer password.

Clr Last Run

With this function, you can clear last run time of the fixture. The display shows "ON" or "OFF". Press "Enter" to confirm.

10.4.2. Temp.Info

With this function you can display the different temperature of the fixture.

- L: Light engine
- B: Base
- H: Head

10.4.3. Humidity

With this function you can display all the different humidity values available in the fixture

- B: Base
- H: Head

10.4.4. Fan Info.

With this function, you can display all the fan speed values available in the unit.

10.4.5. LED Type

With this function, you can display the Led Type, S/TC/ST

10.4.6. Software Ver

With this function, you can display the software version of the device.

10.4.7. Signal Quality

When IOT Board is connected, this menu shows the signal quality (Wifi/4G).

10.4.8. Network

With this function, you can display the Network information.

10.4.9. Error Info

With this function, you can read the error record of the Unit.

10.4.10. SN

With this function, you can read the serial number of the Unit.

10.4.11. RDM UID

With this function, you can display the RDM UID of the Unit.

10.5 > TEST

10.5.1. Home

With this function you can reset the device. You can select which functions you want to reset by using the submenu.

10.5.2. Test Channel

With this function you can test each channel's function to ensure correct operation.

10.5.3. Manual Control

Allows you to manually control each feature of the unit

10.5.4. Calibration

With this function, you can calibrate and adjust the effect wheels to their correct positions. The password of calibrate values is 050.

10.5.5. Gobo Replace

This function allows you to select the gobo you want to replace. The chosen gobo will be rotated into position, making it easy to swap out.

10.6 > PRESET

Run the auto program: A leader fixture can output to three different program signals to the follower fixture to operate. It means the host will send cyclically in the following orders (The host will keep operating the program of Part 1). Then the follower fixture will make the selectively receiving according to its own set.



- If the follower fixture chooses Run For Follower 1 from the menu of 1-3, then it will receive the part 1's automatic program from link, in the same way, when the follower fixture chooses Run For Follower 2, then it will receive the part 2's automatic program from link.
- Enter the menu of 1-3 Function Mode---Set To Follower. Here to set machine operate which part of the program during the host-follower connection
- Enter the menu of 1-4, 1-5 Function Mode---Set To Leader
- Enter the menu of 8-1 Edit Program---Auto Program Part1. The host outputs three groups driven program---Part1, Part2, Part3 (Part1 program runs the same effect as the host)
- Enter the menu of 8-2 Edit Program---Edit Program. Edit the program's connection, connect the scene in order
- The editor of the scene, there are as many as 250 scenario editors, and every scene can have a program connection of 10.

Note:

Part 2, Part 3 repeat in accordance with the Part1's repeat. For example: When Part 1 uses Program 2, Part 2 uses Program 4,

Part 3 uses Program 6, Assume:Program 2 includes scene of 10, 11, 12, 13. Program 4 includes scene of 8, 9, 10; Program 6 includes scene of 12, 13, 14, 15. Then it will run as below.

Example:

Part 1:

Scene 10	Scene 11	Scene 12	Scene 13
----------	----------	----------	----------

Part 2:

Scene 8	Scene 9	Scene 10	Scene 8
---------	---------	----------	---------

Part 3:

Scene 12	Scene 13	Scene 14	Scene 15
----------	----------	----------	----------

10.7 > SHORTCUT MENU

10.7.1. Flip display

With this function you can rotate the display by 180° (when the unit is rigged)

10.7.2. Restore Factory

With this function, you can restore default setting (highlighted value in the above chart).

10.7.3. Rst Options

This function restores only the altered options settings (highlighted values in the chart above) to their default state.

10.7.4. Rst User

With this function, you can restore User settings (Setting can be edit under Options/Reset User Set).

10.7.5. Rst DMX Addr 1

With this function you can only set the address to 1.

10.7.6. Product SN

With this function, you can display the serial number of the Unit.

10.7.7. LED SN

With this function, you can display the serial number of the LED.

10.7.8. RDM UID

With this function, you can display the RDM UID of the Unit (Also QRCode)

10.7.9. Pressure

Under this menu, you can manage the pressure of the Unit :

- Pressure Test : Under this menu you can Run the Pressure test
- Test Result : Under this menu you can display the result of the last pressure test
- Head/Base Pres : Under this menu you can display the value of the Head and Base Pressure

10.7.10. Unlink WDMX

This function allows you to disconnect the fixture from its current WDMX transmitter.

11. NFC

When the fixture is powered on, you can use a NFC smartphone installed with the Ayrton App to scan the NFC tag area of the fixture to read some of the information or settings inside the display menu, such as product name, software version, UID, DMX Start Address, Universe, User Mode, Options, Information, etc. You can also change some of the settings and push to write inside the fixture menu.

When the fixture is not powered on, you can still use the App to read the NFC info and write the settings into the NFC tag.

the written data will be automatically synchronized into the fixture menu at next time the fixture is powered on.

Note:

- Before using, make sure there is NFC function on your smartphone and it is activated, Download and install the Ayrton App;
- The NFC tag on the fixture is right under the LCD window;
- The NFC reader area vary on different smartphones, identify the correct area on your smartphone before scanning the NFC tag on the fixture;
- When scanning, make sure the NFC reader area of your smartphone close enough to the LCD window and hold still the smartphone for 3 seconds until reading successfully

Link to download the application: <https://qrstud.io/ayrtonnfc>

12. DMX PROTOCOL

Scan the QR code on the cover page to download the DMX CHART.

13. ERROR MESSAGES

When you turn on the device, it will first perform a reset. The display may show "Err channel is XX" should there be problems with one or more functions. "XX" stands for channel 1, 2, 3, 4, 5, 6 etc whose sensor has encountered a problem. For example, when the display shows "Err channel is Pan movement", it means there is an error on channel 1. If there are errors on channel 1, channel 3, channel 6 at the same time, you may see the error message, "Err channel is Pan movement", "Err channel is Tilt movement", "Err channel is Shutter", flash twice, and then the device will generate a second reset. If the error messages persist after performing a reset more than twice, the channels which have errors may not work properly however, all other functions can work as usual. Please contact your dealer or manufacturer for service. Self repair is not allowed.

PAN- movement Er

(PAN- yoke movement error) This message will appear after the reset of the fixture if the yoke's magnetic-indexing circuit malfunction (Optical Sensor or Magnetic Sensor fails) or the stepper motor is defective (or its driving IC on the main PCB). The PAN-movement is not located in the default position after the reset.

TILT- movement Er

(TILT- head movement error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions ((Optical Sensor or Magnetic Sensor fails) or the stepper motor is defective (or its driving IC on the main PCB). The TILT-movement is not located in the default position after the reset.

Zoom wheel Er

(Zoom wheel error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (Optical Sensor or Magnetic Sensor fails) or the stepper motor is defective (or its driving IC on the main PCB). The Zoom -movement is not located in the default position after the reset.

Focus wheel Er

(Focus wheel error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (Optical Sensor or Magnetic Sensor fails) or the stepper motor is defective (or its driving IC on the main PCB). The Focus -movement is not located in the default position after the reset.

Colour wheel Er

(Colour wheel- error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB). The Colour - movement is not located in the default position after the reset.

Frost 2 wheel Er

(Frost 2 wheel - error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB). The Frost 2 - movement is not located in the default position after the reset.

Animation_Rot wheel Er

(Animation_Rot wheel- error) This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepper motor is defective (or its driving IC on the main PCB). The Animation_Rot - movement is not located in the default position after the reset.

14. CLEANING AND MAINTENANCE

CAUTION

Disconnect from mains before starting maintenance operation



Do not place the fixture with its lens/glass facing any people while doing the IP test!



Never use alcohol or solvent to clean the lenses.



Always run an IP test using the Ayrton IP test kit following any maintenance operation! Failure to comply with this clause will void the warranty!



Ayrton IP Kit

	Minimum value		Maximum value		Steady time (Hold time)
	Kpa	Psi	Kpa	Psi	
Vacuum	-30	-4.35	-35	5.08	10
Pressure	25	3.63	30	4.35	10

To ensure that the cover is pressed evenly all around the seal, we recommend following the attached tightening order:



- Check the seal, it must be clean and undamaged, properly seated to avoid any damage when tightening.
- First lightly tighten the screws into position and then tighten with a torque screwdriver.

Torque value : 14Kgf.cm for metal cover or 7Kgf.cm for plastic cover.

The following points have to be considered during inspection:

- All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- There must not be any deformations to the housing, lenses,

rigging and installation points (ceiling, suspension, trussing).

- Motorized parts must not show any signs of wear and must move smoothly without issue.
- The power supply cables must not show any damage, material fatigue or sediment.

Checking and replacing the desiccant

The desiccant is used as humidity indication in the fixture. Dry desiccant is in blue colour, if it is saturated with water, its colour changes to light red. If the desiccant colour changes to pink, the desiccant is losing efficacy, it must be replaced.

CAUTION

Unplug the fixture from mains before checking or replacing desiccant!

Do not check or replace desiccant in a damp environment!

Further instructions depending on the installation location and usage have to be adhered to by a qualified installer and any safety concerns have to be removed.

We recommend frequent cleaning of the device. Please use a moist, lint-free cloth. Never use alcohol or solvents.

Please refer to the instructions under "Installation instructions".

Should you need any spare parts, please order genuine parts from your local dealer.

