





Outdoor-rated networkable Pixel-mappable lighting system.

dreampix DRIVERIP

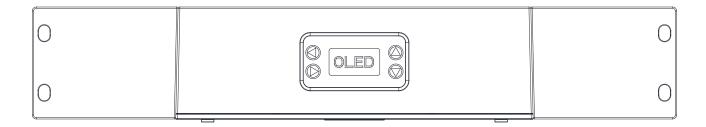

dreampix STRIPIP

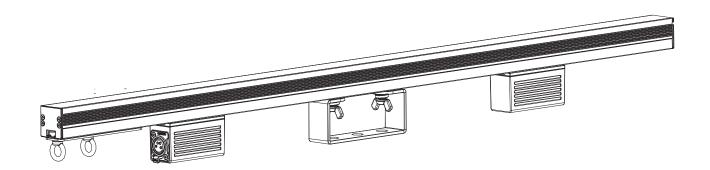

CONTENT

SAFETY	01
DIMENSION	02
DESCRIPTION	03
NTRODUCTION:	04
CONNECTION	05
MENU	06
DMX CHANNEL	- 08
TROUBLE SHOOTING	- 12





WARNING! Before carrying out any operations with the unit, carefully read this instruction manual and keep it with cure for future reference. It contains important information about the installation, usage and matenance of the unit.

SAFETY

General instruction


- The products referred to in this manual conform to the European Community Directives and are therefore marked with c∈.
- The unit is supplied with hazardous network voltage (230V~). Leave servicing to skilled personnel only. Never makeany modifications on the unit not described in this instruction manual, otherwise you will risk an electric shock.
- Connection must be made to a power supply system fitted with efficient earthing (Class I appliance according to standard EN 60598-1). It is, moreover, recommended to protect the supply lines of the units from indirect contact and/or shorting to earth by using appropriately sized residual current devices.
- The connection to the main network of electric distribution must be carried out by a qualified electrical installer. Check that the main frequency and voltage correspond to those for which the unit is designed as given on the electrical data label.
- This unit is not for home use, only professional applications.
- Never use the fixture under the following conditions:
 - in places subject to vibrations or bumps;
 - in places with a temperature of over 40 °C.
- Make certain that no inflammable liquids, water or metal objects enter the fixture.
- Do not dismantle or modify the fixture.
- All work must always be carried out by qualified technical personnel. Contact the nearest sales point for an inspection or contact the manufacturer directly.
- If the unit is to be put out of operation definitively, take it to a local recycling plant for a disposal which is not harmful to the environment.

X


Warnings and installation precautions

- If this device will be operated in any way different to the one described in this manual, it may suffer damage and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short circuit, burns, electric shock, etc.
- Before starting any maintenance work or cleaning the projector, cut off power from the main supply.
- Always additionally secure the projector with the safety rope. When carrying out any work, always comply scrupulously with all the regulations (particularly regarding safety) currently in force in the country in which the fixture's being used.
- Install the fixture in a well ventilated place.
- Keep any inflammable material at a safe distance from the fixture.
- Shields, lenses or ultraviolet screens shall be changed if they have become damaged to such an extent that their effectiveness is impaired.
- The lamp (LED) shall be changed if it has beme damaged or thermally deformed.
- Never look directly at the light beam. Please note that fast changes in lighting, e. g. flashing light, may trigger epileptic seizures in photosensitive persons or persons with epilepsy.
- Do not touch the product's housing when operating because it may be very hot.

dreampix STRIPIP DIMENSION

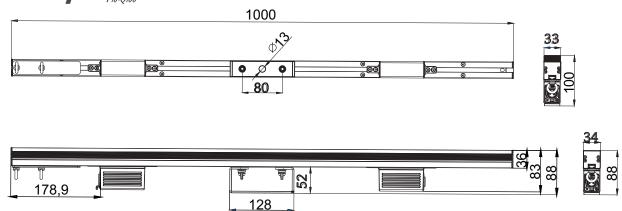

dreampix DRIVER IP DIMENSION

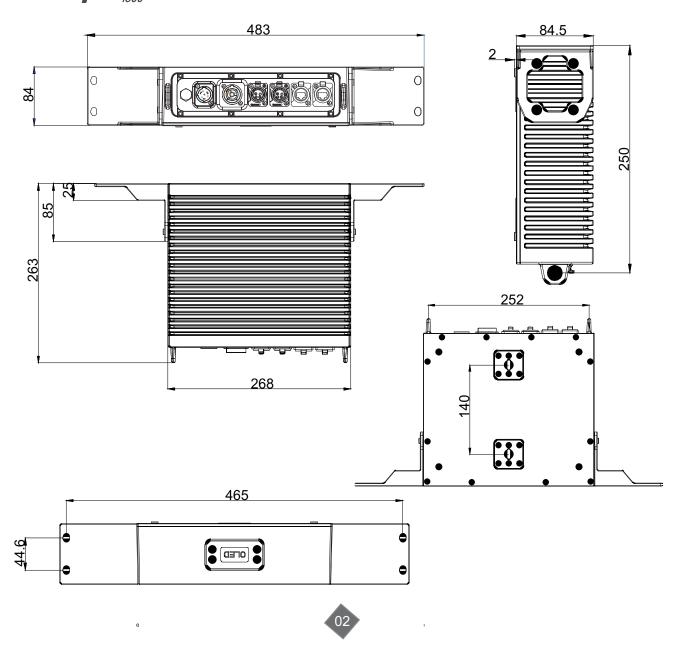



DESCRIPTION

dreampix STRIP IP

IP65 RGB PIXEL STRIP

- -Outdoor pixel map and video effects display surface
- -100 SMD 5050RGB LEDs (100 x 1 matrix)
- -Three lens options included:
- -Black matte flat diffusion panel
- -Rectangular block diffusion lens
- -Rounded dome diffusion tube
- -Optimized for pixel map and video effects
- -Endless possibilities for creative arrangements
- -High refresh rate for flicker-free video
- -Art-Net control via DREAMPIX DRIVER 1800 IP




dreampix DRIVER IP


DREAMPIX DRIVER & ARTNET INTERFACE - OUTDOOR RATED


Powers and controls up to 20 Dreampix Strip IP Fixtures (10 per output)


- -Rugged IP65 construction built to withstand weather & professional use
- -Easy-to-read OLED menu and intuitive touchscreen navigation
- -Auto-addressing feature for quick set-up and confguration
- -Artnet & RDM control

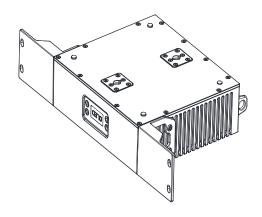


INTRODUCTION

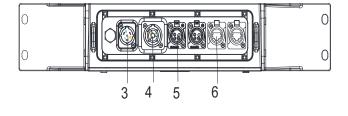

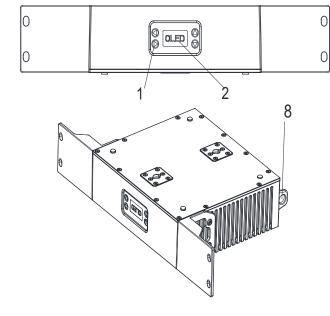

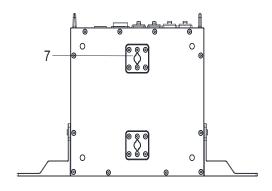

- 1 Button
- 2 OLED Display
- 3 Power In
- 4 Power Out
- 5 4-pin DMX Out
- 6 Ethernet In
- 7 Fast Lock Holder
- 8 Safety Roop

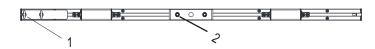

3






- 1 Interlocking Hardware
- 2 Bracket Position Adjustment Knob
- 3 Bracket
- 4 4-Pin Power/Data Out
- 5 4-Pin Power/Data In

dreampix

CONNECTION

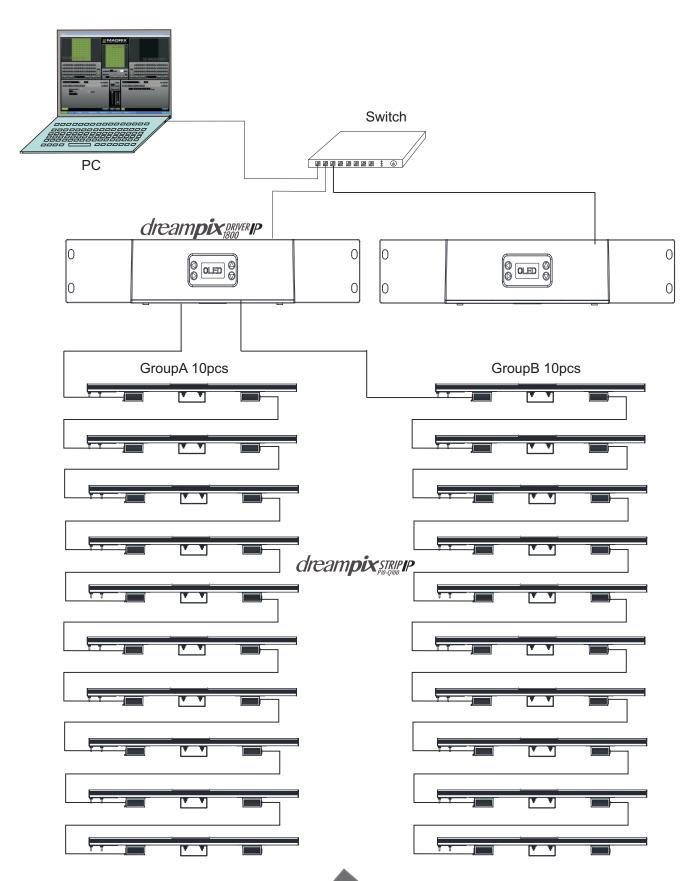

MENU

	Port A	IP Address	IP Address1-10	Art-net(IP 1-126.xxx.xxx.xxx) SACN(IP:1-255.xxx.xxx.xxx)
		DMX Address	1-512	Default : 1
7		Personality	Pixel 7-Channel 5-Section 10-Section 25-Section 50-Section	Default : Pixel
	Port B	Universe	0-246 (Art-net) 1-247 (sACN)	Default : 0 Default : 1
		IP Address	IP Address1-10	Art-net(IP 1-126.xxx.xxx.xxx) SACN(IP:1-255.xxx.xxx.xxx)
		Dmx Address	1-512	Default : 1
8	Screen Lock	No-Yes		Default : No
9	Software Version	Port A:V1.0		
		Port A:V1.0		



MENU

No.	Main Menu	Submenu	Submenu	Submenu	Remark			
号		No-Yes			Automatically nds and addresses			
1	Auto Address	s No-res			the products			
		Port A						
2	View Linked Fixture	s Port B			Displays the connected products			
		0						
		Red						
		Green						
3	LED Output	Blue						
		White						
		Fade						
		Scroll						
			Art-Net					
	Protocol	Port A	Port A	Kling-Net	Device ID	Default :Art-Net		
4		otocol	sACN					
'	1 1010001		Art-Net					
				Port B	Kling-Net	Device ID	Default :Art-Net	
			sACN					
5	Display Inverse	No-Yes			Default :NO			
6	Factory Reset	No-Yes			Default :O			
			Pixel					
	Port A	Personality	7-Channel					
			5-Section		Default : Pixel			
7			10-Section					
			25-Section					
			50-Section					
		Universe	0-246 (Art-net) 1-247 (sACN)		Default : 0 Default : 1			

	300CH				
-CH	Value	Setting/Percent	Remark		
1	000-255	Red1 0-100%			
2	000-255	Green1 0-100%	Pixel 1		
3	000-255	Blue1 0-100%			
4	000-255	Red2 0-100%			
5	000-255	Green2 0-100%	Pixel 2		
6	000-255	Blue2 0-100%			
*	***_***	**_***			
*	***_***	**_***			
*	***_***	**_***			
295	000-255	Red99 0-100%			
296	000-255	Green99 0-100%	Pixel 99		
297	000-255	Blue99 0-100%			
298	000-255	Red100 0-100%			
299	000-255	Green100 0-100%	Pixel 100		
300	000-255	Blue100 0-100%			



	7CH				
1	000-255	Master Dimmer 1-100%			
2	000-255	Red 0-100%			
3	000-255	Green 0-100%			
4	000-255	Blue 0-100%			
	000-022	NO Function			
	023-037	Auto 1			
	038-052	Auto 2			
	053-067	Auto 3			
	068-082	Auto 4			
	083-097	Auto 5			
	098-112	Auto 6			
5	113-127	Auto 7			
5	128-142	Auto 8			
	143-157	Auto 9			
	158-173	Auto 10			
	174-189	Auto 11			
	190-206	Auto 12			
	207-222	Auto 13			
	223-238	Auto 14			
	239-255	All Auto (Auto 1-14)			
6	000-255	Speed Slow to Fast 0-100%			
7	000-010	NO Function			
	011-255	Strobe Slow to Fast 0-100%			

		15CH	
1	000-255	Red1 0-100%	
2	000-255	Green1 0-100%	Pixel 1: 1-21
3	000-255	Blue1 0-100%	
4	000-255	Red2 0-100%	
5	000-255	Green2 0-100%	Pixel 2: 21-40
6	000-255	Blue2 0-100%	
7	000-255	Red3 0-100%	
8	000-255	Green3 0-100%	Pixel 3: 41-60
9	000-255	Blue3 0-100%	
10	000-255	Red4 0-100%	
11	000-255	Green4 0-100%	Pixel 4: 61-80
12	000-255	Blue4 0-100%	
13	000-255	Red5 0-100%	
14	000-255	Green5 0-100%	Pixel 5: 81-100
15	000-255	Blue5 0-100%	
		30CH	
1	000-255	Red1 0-100%	
2	000-255	Green1 0-100%	Pixel 1: 1-10
3	000-255	Blue1 0-100%	
4	000-255	Red2 0-100%	
5	000-255	Green2 0-100%	Pixel 2: 11-20
6	000-255	Blue2 0-100%	
*	***_***	**_***	
*	***_***	**_***	
*	***_***	**_***	
25	000-255	Red9 0-100%	_
26	000-255	Green9 0-100%	Pixel 9 81-90
27	000-255	Blue9 0-100%	
28	000-255	Red10 0-100%	
29	000-255	Green10 0-100%	Pixef10: 91-100
30	000-255	Blue10 0-100%	



		75CH	
1	000-255	Red 1 0-100%	
2	000-255	Green1 0-100%	Pixel1: 1-4
3	000-255	Blue1 0-100%	
4	000-255	Red2 0-100%	
5	000-255	Green2 0-100%	Pixel2: 5-8
6	000-255	Blue2 0-100%	
*	***_***	**_***	
*	***_***	**_***	
*	***_***	**_***	
70	000-255	Red24 0-100%	
71	000-255	Green24 0-100%	Pixel24: 93-96
72	000-255	Blue24 0-100%	
73	000-255	Red25 0-100%	
74	000-255	Green25 0-100%	Pixel25: 97-100
75	000-255	Blue25 0-100%	
		15001	
	T	150CH	
1	000-255	Red1 0-100%	
2			
	000-255	Green1 0-100%	Pixel1: 1-2
3	000-255	Blue1 0-100%	Pixel1: 1-2
4	000-255 000-255	Blue1 0-100% Red2 0-100%	
<u>4</u> 5	000-255 000-255 000-255	Blue1 0-100% Red2 0-100% Green2 0-100%	Pixel1: 1-2 Pixel 2 3-4
4 5 6	000-255 000-255 000-255 000-255	Blue1 0-100% Red2 0-100% Green2 0-100% Blue2 0-100%	
4 5 6 *	000-255 000-255 000-255 000-255 ***_***	Blue1 0-100% Red2 0-100% Green2 0-100% Blue2 0-100% **-***	
4 5 6 *	000-255 000-255 000-255 000-255 ***_***	Blue1 0-100% Red2 0-100% Green2 0-100% Blue2 0-100% **-***	
4 5 6 * *	000-255 000-255 000-255 000-255 ***_*** ***_***	Blue1 0-100% Red2 0-100% Green2 0-100% Blue2 0-100% **_**** **_**** **_****	
4 5 6 * * 145	000-255 000-255 000-255 000-255 ***_*** ***_*** 000-255	Blue1 0-100% Red2 0-100% Green2 0-100% Blue2 0-100% **-*** **-*** Red49 0-100%	Pixel 2 3-4
4 5 6 * * 145 146	000-255 000-255 000-255 ***_*** ***_*** 000-255 000-255	Blue1 0-100% Red2 0-100% Green2 0-100% Blue2 0-100% **-*** **-*** Red49 0-100% Green49 0-100%	
4 5 6 * * 145 146 147	000-255 000-255 000-255 000-255 ***-*** ***-*** 000-255 000-255 000-255	Blue1 0-100% Red2 0-100% Green2 0-100% Blue2 0-100% **-*** **-*** Red49 0-100% Green49 0-100% Blue49 0-100%	Pixel 2 3-4
4 5 6 * * 145 146 147 148	000-255 000-255 000-255 000-255 ***-*** ***-*** 000-255 000-255 000-255	Blue1 0-100% Red2 0-100% Green2 0-100% Blue2 0-100% **-*** **-*** Red49 0-100% Green49 0-100% Blue49 0-100% Red50 0-100%	Pixel 2 3-4 Pixel 2 3-4 Pixel 49: 97-98
4 5 6 * * 145 146 147	000-255 000-255 000-255 000-255 ***-*** ***-*** 000-255 000-255 000-255	Blue1 0-100% Red2 0-100% Green2 0-100% Blue2 0-100% **-*** **-*** Red49 0-100% Green49 0-100% Blue49 0-100%	Pixel 2 3-4

TROUBLESHOOTING

Problems	Possible causes	Checks and remedies
Fixture does not light up	 No mains supply Dimmer fader set to 0 All color faders set to 0 Faulty LED Faulty LED board 	 Check the power supply voltage Increase the value of the DMX channels Increase the value of the color channels Replace the LED board Replace the LED board
General low light intensity	Dirty lens assemblyMisaligned lens assembly	Clean the fixture regularlyInstall lens assembly properly
Fixture does not power up	No powerLoose or damaged power cordFaulty internal power supply	Check for power on power outletCheck power cordReplace internal power supply
Fixture does not respond to DMX	Wrong DMX addressingDamaged DMX cablesBouncing signals	Check control panel and unit addressingCheck DMX cablesInstall terminator as suggested