

## **User Manual**



www.showtech.com.au

## **Table of Contents**





1.	Safety instructions	3
	1.1 Power Connection	4
	1.2 Overhead Rigging	4
	1.3 Cleaning and Maintenance	6
2.	Menu Navigation	7
3.	DMX Allocation	11
4.	Technical Specifications	15





### 1. Safety Instructions

#### FOR SAFE AND EFFICIENT OPERATION

Be careful with heat and extreme temperature. Avoid exposing it to direct to rays of sun. Operate only between 41°F/5°C and 95°F/35°C.

Keep away from humidity, water and dust. Do not place the use in a location with high humidity or lots of dust.

It is ideal to use the Hercules away from such equipment: Transformer motor, tuner, TV set and amplifier.

Avoid placing on un-stable location Select a level and stable location to avoid vibration.

Do not use chemicals or volatile liquids for cleaning Use a dry cloth to wipe off dust, or a wet soft cloth for stubborn dirt.

NO USER SERVICABLE PARTS INSIDE. If unit is out of service, please contact your point of purchase.

If any troubles arise, remove the power plug and contact your ShowPro representative for repair. Do not open the machine by yourself, it might result a danger of electric shock.

Take care with the power cable. Never pull the power cable to remove the plug from the receptacle, be sure to hold the plug.

When not using the unit for an extended period of time be sure to disconnect the plug form the receptacle.





#### **1.1 Power Connection**

**AC Power** This product has an auto-ranging power supply that can work with an input voltage range of 100–240 VAC

AC Plug

Connection	Wire
AC Live	Brown
AC Neutral	Blue
AC Ground	Green/Yellow

### **1.2 Overhead Rigging**

This item must be built in a way that it can hold 10 times more of its weight for 1 hour without causing any damage. The installation must be secured with a secondary safety attachment. The Safety attachment has to be constructed in a way that no part of the installation can fall. When rigging, de-rigging or servicing the fixture ensure that the area below is secure. Before putting the device into operation, the installation must be approved by an expert. The operator has to make sure that safety-relating and machine-technical installations are approved by a skilled person once a year.

**IMPORTANT!** OVERHEAD RIGGING REQUIRES EXTENSIVE EXPERIENCE. Including (but not limited to) calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the projector. If you lack these qualifications, do not attempt the installations yourself, but instead use a professional structural rigger. Improper installation can result in bodily injury and/or damage to property.

Use only professional trussing system if the item is to be lowered from the ceiling or high joists. Never let the device swing freely in a room.





CAUTION: Overhead Items may cause serious injuries when not installed correctly!! If there is concern about the safety DO NOT INSTALL the device.

#### DANGER OF FIRE!

When installing the device, make sure there is no highly-flammable material (decoration articles, etc.) within a distance of min. 0.5m.

Mount the projector with the mounting bracket to your trussing system using an appropriate clamp.

For overhead use, always install a rated safety - wire that can hold at least 10 times the weight of the fixture. You must only use rated safety – wire with quick links with screw cap. Pull the rated safety - wire through the hole in the mounting bracket and over the trussing system or a safe fixation spot. Insert the end in the quick link and tighten the safety screw. The maximum drop distance must never exceed 20cm A safety - wire which has already held the strain of a fall or which is defective must not be used again.

#### **IMPORTANT!**

Before taking into operation for the first time, the installation has to be approved by an expert.





### **1.3 Cleaning and Maintenance**

Please make sure that safety-relating and machine-technical installations are inspected by a skilled person once a year.

- 1. Make sure before installing that all screws are tightly connected and not corroded.
- 2. There must be no deformations on the housings, fixations and installations spots
- 3. Any defects on the electronics, power cables or housing must be repaired for safe use.

If the exterior of the unit is going to be cleaned, please use moist, lint free cloths. Never use alcohol or solvents.

The Cooling fan must be cleaned monthly and check to ensure it is free of obstructions.

To clean the interior of the device please use a vacuum cleaner or an air jet, however we recommend cleaning the lenses weekly to ensure the best output from your unit.





### 2.0 Menu Navigation

1 [ 2 [	4 - C H	d				
2		d	5	1	1 2	(Default:10CH, d 1)
	6 - C H	d d	5	1	1 2	
3	1 0 C H	d d	5	1	1 2	
4	C	C		1	1 2 3 4 5 6 7 8 9 0	1:R 2:G 3:B 4:W 5:GB 6:RB 7:RG 8:RGB 9:RW 10:GW 11:BW






		1 2	12:RGW
		1 3	13:RBW
		1 4	14:GBW
		1 5	15:RGBW (Default :
			RGBW)
		P 1	Default : P1
	P	P 2	
5	Programs		
		P 3	
		P 4	
	S	S 1	(Default : S100)
6	Program Speed	S 1 0 0	
	S n d		
7			
	Sound-Active Mode		
	S e n S	u 0	(Default : 80)
8	Sound	u 1 0 0	
	Sensitivity		





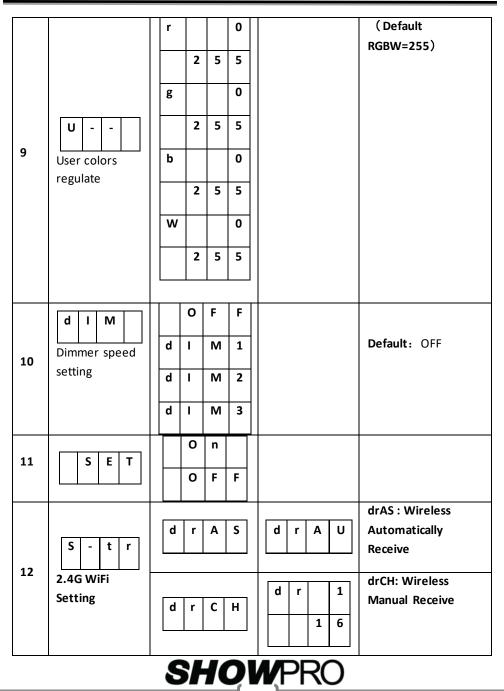

9



					(Default : dr 1)
d t A S	d	t	Α	U	dtAS
d t C H	d	t		1	dtCH
			1	6	
1) The signal poin screen, the status					right corner of display VIFI is flashing.
2) Automatic cod mode to be effect		ton	top	oroce	ed to the automatic





### **3.0 DMX Allocation**

4-CH	Function	Value	Percent/Setting
1	Red	000-255	0~100%
2	Green	000-255	0~100%
3	Blue	000-255	0~100%
4	White	000-255	0~100%

6-CH	Function	Value	Percent/Setting
1	Dimmer	000-255	0~100%
2	Red	000-255	0~100%
3	Green	000-255	0~100%
4	Blue	000-255	0~100%
5	white	000-255	0~100%
6	strobe	000-010	NO Function
	strobe	011-255	Strobe slow to fast

Function	Value	Percent/Setting
Dimmer	000-255	0~100%
Red	000-255	0~100%
Green	000-255	0~100%
Blue	000-255	0~100%
White	000-255	0~100%
Manual Color + Color Temperature	000~010 011~030 031~050 051~070 071~090 091~110 111~130 131~150 151~170 171~200	No Function R 100%, G 0~100%, B 0% R 100%~0%, G 100%, B 0% R 0%, G 100%, B 0~100% R 0% G 100%~0% B 100% R 0%~100% G 0% B 100% R 100% G 0% C 100% B 0%~100% R 100% G 100% C 100% R 100% G 100% C 100% R 100% C 100% C 100% R 100% C 100% C 100% R 100% C 100% C 100% C 100% C 100% C 100% C 100% C 100% C 100% C 100% C 100% C 10
	Dimmer Red Green Blue White Manual Color + Color	Dimmer 000-255   Red 000-255   Green 000-255   Blue 000-255   White 000-255   White 000~010   011~030 031~050   051~070 071~090   + Color 091~110   Temperature 131~150





		204-255	Dimmer speed mode3 (slow speed)			
		153-203	Dimmer speed mode2 (middle speed)			
10	Dim Mode	102-152	Dimmer speed mode1 (fast speed)			
		052-101	Dimmer speed mode off			
		000-051	Preset dimmer speed from display menu			
9	Auto Speed	000-255	Speed Slow to Fast			
		241-255	Sound Show			
	FIOSIAIIIS	181-240	Auto Program 4			
8	Programs	121-180	Auto Program 3			
	Sound	061-120	Auto Program 2			
	Auto/	011-060	Auto Program 1			
		000-010	No Function			
	sciobe	011-255	Strobe slow to fast			
7	strobe	000-010	NO Function			
		251-255	Color temperature11			
		246-250	Color temperature10			
		241-245	Color temperature9			
		236-240	Color temperature8			
		231-235	Color temperature7			
		226-230	Color temperature6			
		221-225	Color temperature5			
	216-220		Color temperature4			
		211-215	Color temperature3			
		206~210	Color temperature2			
6		201~205	Color temperature1			





N O.	KEY	FUNCTI ON	Step 1	Step 2	Ste p 3	Description
1	BLACKOUT	1	BLACKOUT	Any key-		Press "BLACKOUT", press other keys are
_	DERCROOT			press		invalid, power is not saved.
2	STROBE		STROBE	+/-		Strobe(power save) Available for : AUTO/SOUND/STOBE/FADE/MANUAL/RGBA UVW/Number : 0-9
3	SPEED		SPEED	+/-		Auto program speed
4	SENSITIVITY		SENSITIVITY	+/-		Available for Sound mode
5	%		%	+/-		Available for : AUTO/SOUND/STOBE/FADE/MANUAL/RGBA UVW/Number : 0-9
6	+/-		AUTO/SOU ND/ STOBE /SPEED/ SENSITIVITY /% /FADE/ MANUNAL/ RGBAUVW	+、-		
		Functio n 1	AUTO	+/-		Auto program mode
-	41170	Functio n 2	AUTO	SPEED	+/-	Auto program speed
7	AUTO	Functio n 3	AUTO	STROBE	+/-	Auto program strobe
		Functio n 4	AUTO	%	+/-	
		Functio n 1	SOUND	+/-		Sound mode
8	SOUND	Functio n 2	SOUND	SENSITIVIT Y	+/-	
0	SOUND	Functio n 3	SOUND	STROBE	+/-	
		Functio n 4	SOUND	%	+/-	
		Functio n 1	FADE	+/-		Fade mode
9	FADE	Functio n 2	FADE	SPEED	+/-	
3	PADE	Functio n 3	FADE	STROBE	+/-	
		Functio n 4	FADE	%	+/-	
		Functio n 1	MANUAL			R/G/B/A/UV/W
		Functio n 2	MANUAL	+/-		Display your current R/G/B/A/UV/W value
10	MANUAL	Functio n 3	MANUAL	R/G/B/A/ P/W	+/-	Choose your desire R/G/B/A/UV/W value
		Functio n 4	MANUAL	STROBE	+/-	Strobe speed





		Functio n 5	MANUAL	%	+/-	
		Functio n 1	R/G/B/A/U V/W	+/-		
11	R/G/B/A/U V/W	Functio n 2	R/G/B/A/U V/W	STROBE	+/-	
		R : red ;	G : green ; B :	blue; A: an	nber; U	V : purple ; W : white ;
12	Number:0-9	Functio n 1	Number:0-9			The color on IRC is match with the lighting color.
		Functio n 2	Number:0-9	STROBE		
		Functio n 3	Number:0-9	%	+/-	





## 4.0 Technical Specifications

	OPTICS
LED Specification	4x10W RGBW
LED quantity	4
Field Angle	30°
Beam Angle	15°
Output	10W
	Control
Control method	DMX
WDMX Compatibility	N/A
DMX Channels	4,6 and 10
Dimming Curves	4 Modes
<b>Dimming Resolution</b>	16 bit
Data Connections	3 Pin XLR
	Electrical
Dattany Crasifications	
Battery Specifications	14.8V, Lithium 12 hours (color change
Working Hours	mode), 8 hours (permanent white full-on)
Charging hours	5 Hours
Input Voltage AC	100V-240V AC 50/60 Hz auto-ranging
Power Consumption	N/A
Fuse	T2A/250V
	-
	Physical
	o. #¥

Weight

3.4Kg





Size Cooling System IP Rating 137x191x145 mm N/A N/A

