


TRISTAN

825W LED FOLLOWSPOT

Manual

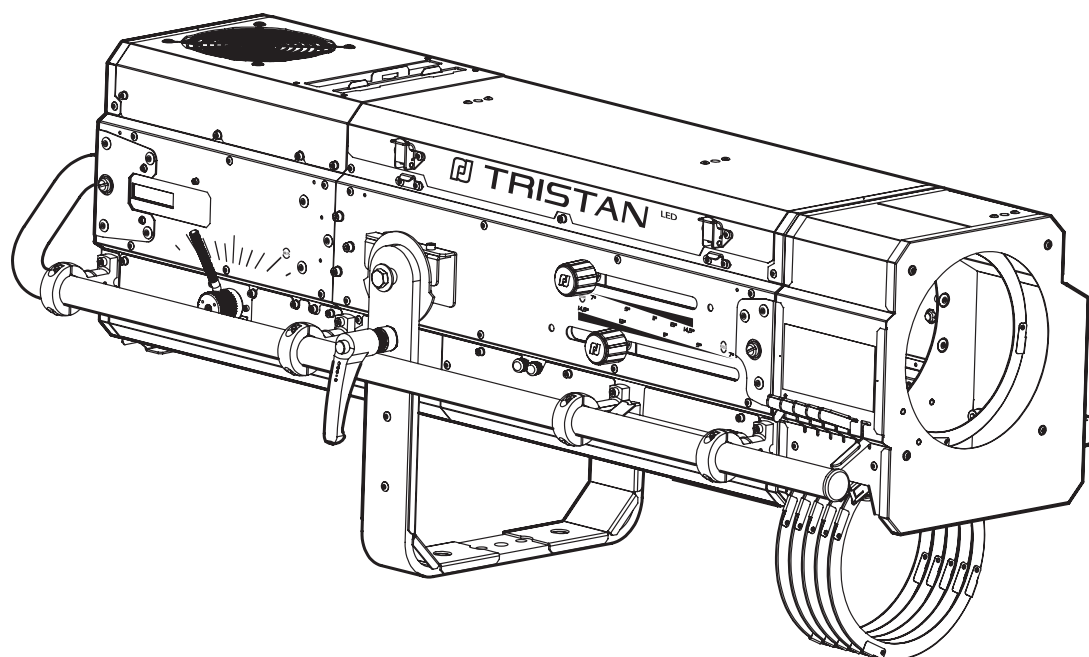

Angles	Standard / CE	North American
7 - 14,5°	1189	1189C

Product
Updates:



V1

- FIRMWARE: V4.x
- RJ-LED2 FIRMWARE PLATFORM (Node Mode) full manual is available for download at www.robertjuliatt.com/LED/PDF_PAGE

DN41241900 (EN)

Released: 13/05/25

Robert Juliatt S.A.S. 32, rue de Beaumont, F 60530 Fresnoy-en-Thelle - phone : +33 (0)3 44 26 51 89 - info@robertjuliatt.fr

www.robertjuliatt.com


ROBERT JULIAT

Table of Contents

1 User's instructions.....	1	4.8 Colour	27
2 Presentation.....	2	4.8.1 Range.....	27
2.1 Functions.....	2	4.8.2 Control	27
2.2 Identification label.....	3	4.9 Frost and correction filters	28
2.3 Accessories included.....	3	4.9.1 Range.....	28
2.4 Accessories.....	4	4.9.2 Control.....	28
3 Set-up	5	5 Controls and parameters	29
3.1 Mechanics.....	5	5.1 Local display and controls	29
3.1.1 Operating positions	5	5.1.1 Display.....	29
3.1.2 Minimum distance between a flammable material.....	5	5.1.2 Home screen	29
3.1.3 Instructions for use.....	5	5.1.3 Menus.....	30
3.1.4 Lifting	5	5.1.4 Parameters	31
3.1.5 Safety cable.....	5	5.2 DMX512 - A remote control.....	32
3.1.6 Stand set-up.....	6	5.2.1 Protocol	32
3.2 Electrical information.....	7	5.2.2 Configuration.....	32
3.2.1 LED source.....	7	5.2.3 Parameters.....	33
3.2.2 Power supply.....	7	5.2.3.1 DMX Hold	33
3.3 DATA	8	5.2.3.2 User ID	33
3.3.1 DMX 512-A / RDM.....	8	5.2.4 DMX chart.....	34
3.3.2 Art-Net / sACN / DUAL.....	9	5.2.5 DMX ranges	34
3.3.3 Ethernet / DMX node.....	9	5.2.5.1 Strobe duration	34
3.4 Accessories	10	5.2.5.2 Strobe speed.....	34
3.4.1 Colour changer unit - boomerang	10	5.2.5.3 Response time.....	34
3.4.2 Colour changer unit - push-pull (option).....	11	5.2.5.4 Control mode.....	35
3.4.3 Gobo holder.....	12	5.2.5.5 Iris.....	35
3.4.4 Frost / Correction filter.....	12	5.2.5.6 Iris mode.....	35
3.4.5 Internal glass holder 120 x 120 mm	13	5.2.6 RDM remote control	36
3.4.6 Remote controls	13	5.2.6.1 Protocol.....	36
3.4.7 Remote display.....	14	5.2.6.2 Functions.....	36
3.4.8 Top accessory plate	14	5.3 Home values	38
3.4.9 Double slot front cassette for accessories	15	5.4 Network.....	38
3.4.10 Counterweight.....	15	5.4.1 Art-Net remote control	40
3.4.11 Telrad followspot sight.....	16	5.4.1.1 Protocol.....	40
3.4.12 RJ cable strap (accessory).....	16	5.4.1.2 Configuration	40
3.4.13 Flight-case.....	17	5.4.1.3 Local set-up	41
4 Operations.....	18	5.4.2 sACN remote control.....	42
4.1 Light intensity.....	18	5.4.2.1 Protocol.....	42
4.1.1 Range.....	18	5.4.2.2 Configuration	42
4.1.2 Control.....	18	5.4.2.3 Local set-up	43
4.1.3 Parameters.....	19	5.4.3 Dual remote control	44
4.1.3.1 Dimming resolution - DMX only.....	19	5.4.3.1 Protocol.....	44
4.1.3.2 Dimming curve.....	19	5.4.3.2 Configuration	44
4.1.3.3 Master control.....	19	5.4.3.3 Local set-up	45
4.1.3.4 Set maximum position.....	20	5.4.4 Web interface	46
4.1.3.5 Dimming mode	20	5.4.4.1 Control.....	46
4.2 Strobe.....	20	5.4.4.2 Connection to the Web interface.....	46
4.2.1 Range	20	5.4.5 LLRP (Low-Level Reader Protocol).....	47
4.2.2 Control.....	20	5.5 Fan cooling modes.....	48
4.3 Response time	21	5.5.1 Range.....	48
4.3.1 Range.....	21	5.5.2 Control	48
4.3.2 Control.....	21	5.6 Local potentiometer.....	49
4.4 Beam size adjustment	22	6 Service	50
4.4.1 Range.....	22	6.1 Preventive maintenance	50
4.4.2 Control	22	6.1.1 Frequency.....	50
4.5 Pan / Tilt.....	23	6.1.2 General cleaning.....	50
4.5.1 Range.....	23	6.1.3 General visual check	50
4.5.2 Control.....	23	6.1.4 LED source.....	50
4.6 Iris.....	24	6.1.5 Optics.....	50
4.6.1 Range.....	24	6.2 Analysis	52
4.6.2 Control.....	24	6.3 Electronic thermal management system	52
4.6.3 Parameters.....	25	6.4 Firmware update	52
4.6.3.1 Iris mode.....	25	6.5 Factory defaults.....	53
4.6.3.2 Iris max	25	6.6 Selftest.....	53
4.6.3.3 Disable local.....	25		
4.6.3.4 Reset.....	26		
4.7 Gobo	26		
4.7.1 Range.....	26		
4.7.2 Control.....	26		

GENERAL INSTRUCTIONS

1. Not for residential use.
2. These fixtures must only be serviced by a qualified technician.
3. In addition to the instructions indicated on this page, relevant health and safety requirements of the appropriate EU Directives must be adhered to at all times.
4. This fixture is in compliance with section 17 - Lighting appliance for theatre stages, television, cinema and photograph studios.
Standards NF EN 60598-1, NF EN 60598-2-17, Low Voltage Directive 2014/35/UE & EMC Directive 2014/30/UE.
5. This fixture is rated as IP20, and is for indoor use only.

FIXTURE

6. Ensure fixture is correctly mounted on an appropriate support.
7. Protection screens and lenses must be replaced in the event of any damage, such as cracks or deep scratches, since these might reduce performance.
8. When hung or flown the fixture must be secured by an additional hanging accessory (such as a safety cable or bond) of suitable length.
9. Safety bonds or cables must be securely attached to the back of the fixture and be as short as possible, or rolled up as necessary, to minimise travel distance should the fixture be dislodged.
10. Movable accessories (scroller, etc.) must also be secured with a suitable safety cable or bond at the front of the fixture.
11. The combined weight of both the fixture and the accessories must be considered when choosing the load-bearing capability of safety cable or bond.
12. Do not open lighting fixture when the source is on.
13. WARNING: LED source become hot during use. Allow fixture to cool before servicing.
14. Do not tamper with design of fixture nor any of its safety features.
15. Tighten electrical mains cable connections regularly and replace with one of identical specification if damaged.
16. Use only with correct power supply.

VENTILATION

17. Keep well away from flammable material.
18. Not for outdoor use. Do not cover. Do not permit fixture to get wet.
19. To avoid overheating, do not obstruct air vents.
20. Ensure any cooling fans are in correct working order. If fans are not working, turn fixture off immediately and service as necessary.

CLEANING


21. Do not touch the LED source with your fingers.
22. To clean the optical parts, use a soft cloth in combination with distilled water or isopropyl alcohol recommended for coated optics. Do not use any cleaning product that contains solvents or abrasives, as these can cause surface damage. Dry with a soft lint-free cloth.
23. Regularly remove dust with a soft lint-free cloth.
24. If the fixture has filters, they must be cleaned frequently.

POWER SUPPLY

25. Disconnect from the mains before servicing.
26. Mains connection only. Do not connect to "electronic output" such as dimmer.
27. Ensure power supply circuit breakers, always remain accessible.


PLEASE NOTE

This product has been built to conform to European standards relating to professional lighting equipment. Any modification made to our products will void the manufacturers' warranty.

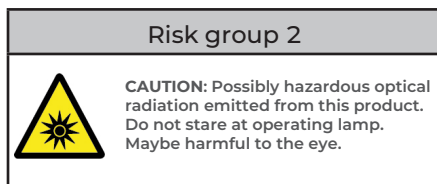


Risk group 2. Luminaires should be positioned so that prolonged staring into luminaire at a distance closer than 2.7 m is not expected.

Photobiological safety according to EN62471

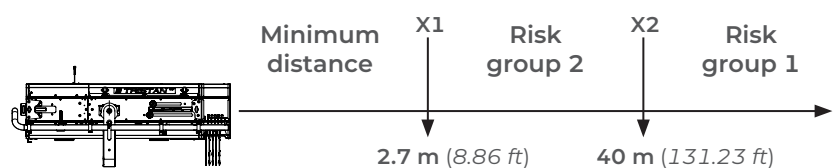


2.1 Functions

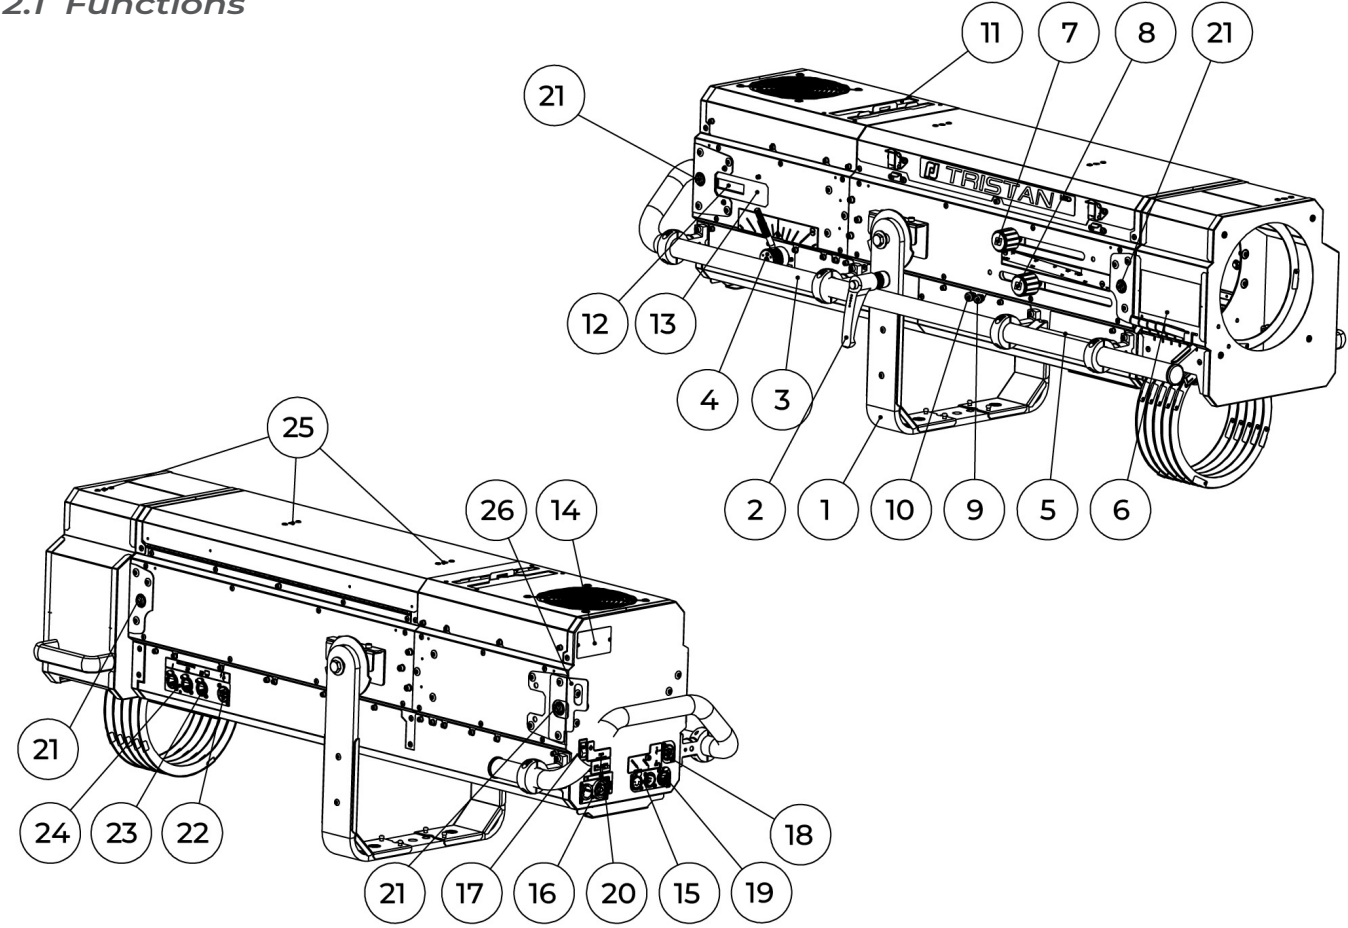

Description	
1. Yoke	15. Data connectors (IN and OUT)
2. Tilt locking handle	16. Power connectors (IN and OUT)
3. Side operating handle	17. Power switch
4. Iris control	18. USB connector (5W)
5. Dimming control	19. RJ45 connector
6. Colour changer	20. Fuses
7. Zoom adjustment	21. Lifting ring insert (M8)
8. Focus adjustment	22. USB connector (10W)
9. Frost glass	23. Remote display connector
10. Spare filter	24. Accessory connectors (x2)
11. Gobo slot	25. 1/4" Accessory mounting
12. Local display	26. Safety cable attachment point
13. Keypad	
14. Identification plate	


2.2 Identification label

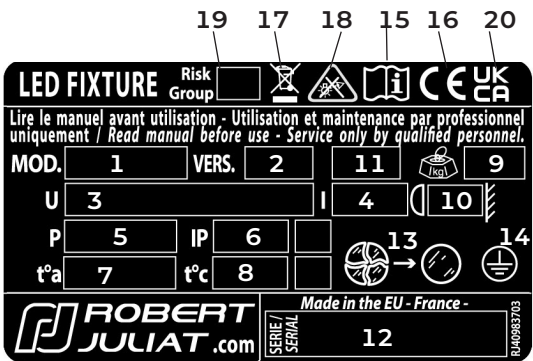Description	
 LED FIXTURE Risk Group       Lire le manuel avant utilisation - Utilisation et maintenance par professionnel uniquement / Read manual before use - Service only by qualified personnel. MOD. 1 VERS. 2 11  9 U 3 I 4  10 P 5 IP 6 t^a 7 t^c 8  13  14 ROBERT JULIAT .com <i>Made in the EU - France -</i>  12 	1. MOD. : Model 2. VERS. : Version 3. U : Nominal voltage input (V) 4. I : Nominal intensity (A) 5. P : Maximum power input (W) 6. IP : International Protection Rating 7. t^a : Maximum ambient temperature (°C) 8. t^c : Maximum external temperature of the unit (°C) 9. Net weight (kg) 10. Minimum distance between a flammable material and the lighting unit (m) 11. Colour temperature version 12. Serial number 13. Replace broken glass 14. Class 1 product label 15. Read manual first label 16. European conformity label 17. WEEE directive label 18. CEI-TR-62778 - Do not stare at light source 19. EN62471 - Risk group 20. UKCA (UK Conformity Assessed) label

Units:

- Weight = kilogram (kg).
- Intensity = Ampere (A).
- Voltage = Volt (V).
- Frequency = Hertz (Hz).
- Temperature = degree Celsius (°C).


2.3 Accessories included

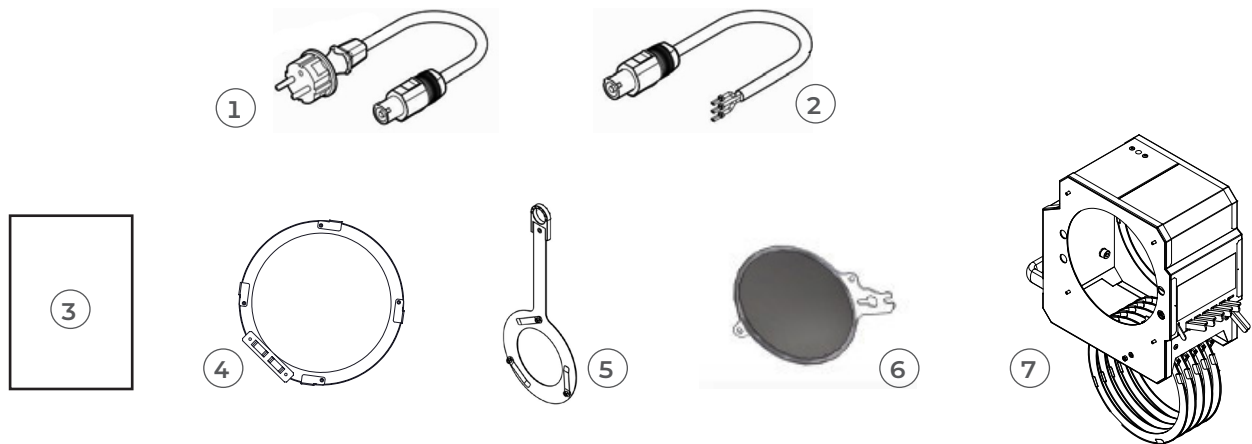

	Reference	Description
1	CAL03	3 meter power cable (3G1,5 HO7RNF) with Neutrik PowerCon® True1 TOP and CEE 7/7 (2P+T NF/SCHUKO) connectors (standard version)
2	CAL04	1,50m power cable UL/CSA with Neutrik® powerCON TRUE1 TOP connector (North American version)
3	DN41242200	Quick Start manual
4	PF1011	Ø210 mm metal filter holder (x6)
5	SGUP2	Universal "A" size gobo-holder (metal & glass)
6	VDM100	Ø100 mm frosted glass with holder
7	M270/2B	6-way "boomerang" colour changer

2.4 Accessories

EN

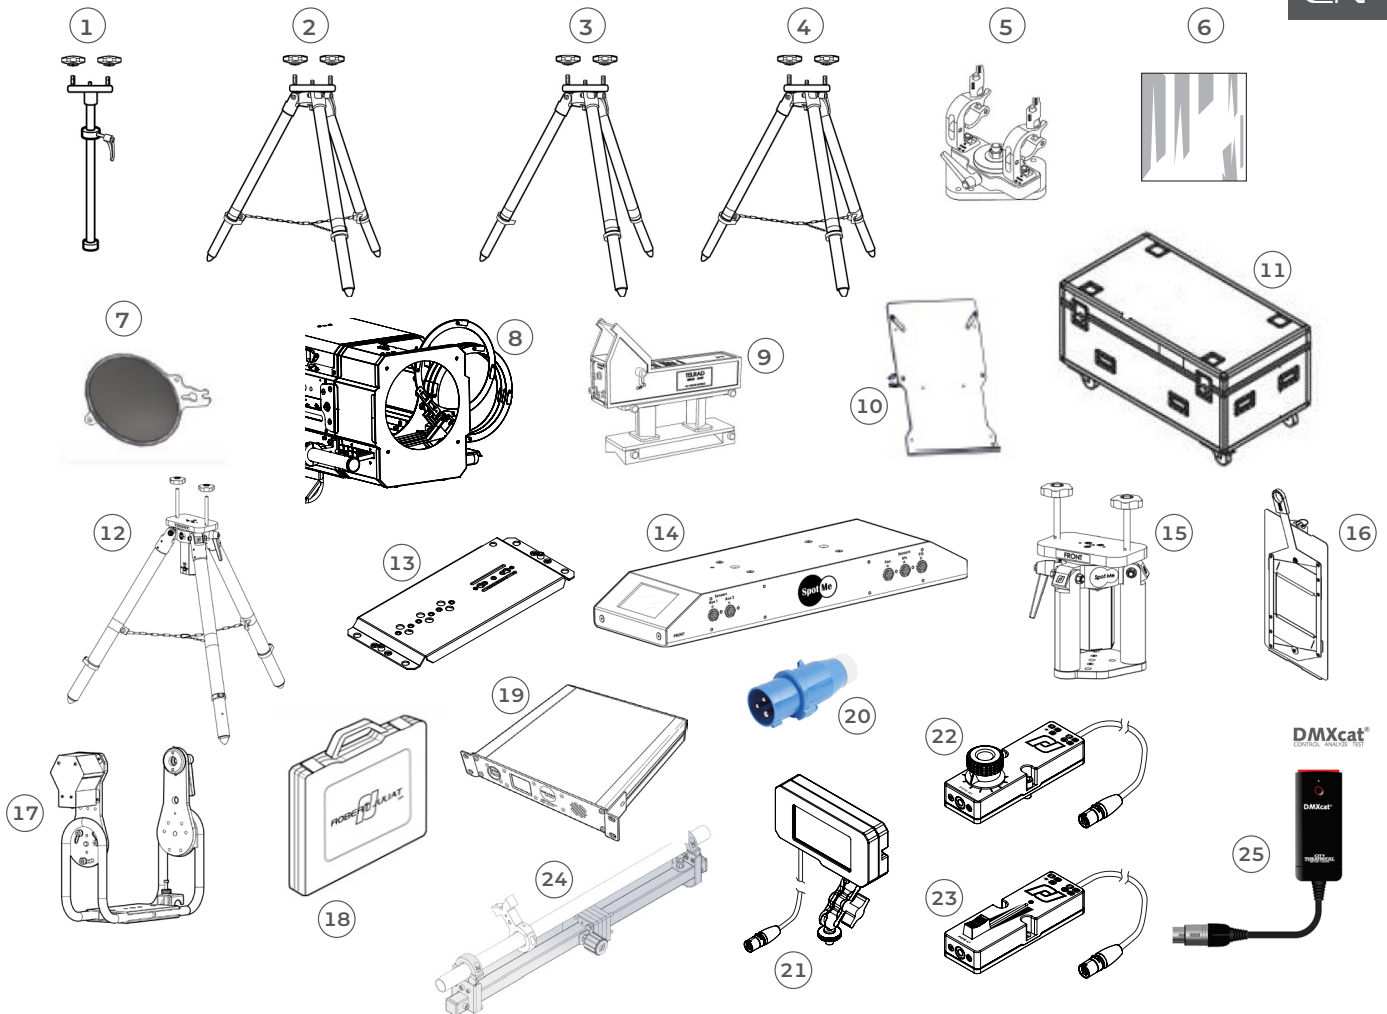


	Reference	Description
1	JPP	Monopod stand for overhead followspot
2	GT4000	Tripod stand with safety chain - SWL: 130 Kg - max. height: 1030 mm
3	GT4000S	Tripod stand without safety chain - SWL: 130 Kg - max. height: 1030 mm
4	GT4000R	Tripod stand with ball head rotation with security chain - SWL: 130 Kg - max. height: 1030 mm
5	T4000	Followspot mount for Ø50 mm pipe (suspension or overhead) - SWL= 100 Kg
6	VD120	120 x 120 mm frosted glass
7	FCM100R	Ø120 mm 1/2 CTO correction filter (Rosco #3408) with holder
8	M270/2TM	6-way "Push/Pull" colour changer
9	KIT TELRAD	Telrad followspot sight with raiser and universal mounting kit
10	SDUP	Followspot cue sheet holder with universal mounting kit
11	FC1189/S	Flight-case for LLT range / GT stand / accessories
12	GT4000RSM	Tripod stand with safety chain - SWL: 130 Kg - max. height: 1030 mm (equipped with PAN sensor)
13	PSA1	Support plate for 2x P1FE and 1/4" accessories
14	SMS	SpotMe server + 2 sensor cables + flight case
15	T4000RSM	Followspot mount with ball head rotation and SpotMe PAN sensor SWL = 100 Kg - Weight: 8,83 Kg
16		Horizontal chopper
17	FRO/SMCPD	Heavy duty adjustable yoke equipped with TILT SpotMe sensor (C type)
18	TCSM	SpotMe calibration tool kit
19	MAESTRO	Maestro server for SpotMe - rackable unit: 1U - half 19"
20	PCP1716A	16A blue 2P+E 6h IEC60309 power connector (option)
21	R-DISPE1	Remote display - Ethernet connector
22	P1FE-R1	One-function remote controller (with rotary potentiometer) - Ethernet connector
23	P1FE-L1	One-function remote controller (with linear potentiometer) - Ethernet connector
24	BK1	Followspot balancing kit (including 1 Kg counterweights) - Weight: 2.05 Kg
25	DMXcat	Bluetooth DMX/RDM Multifunction test tool - City Theatrical DMXcat®

3 Set-up


EN

3.1 Mechanics


3.1.1 Operating positions

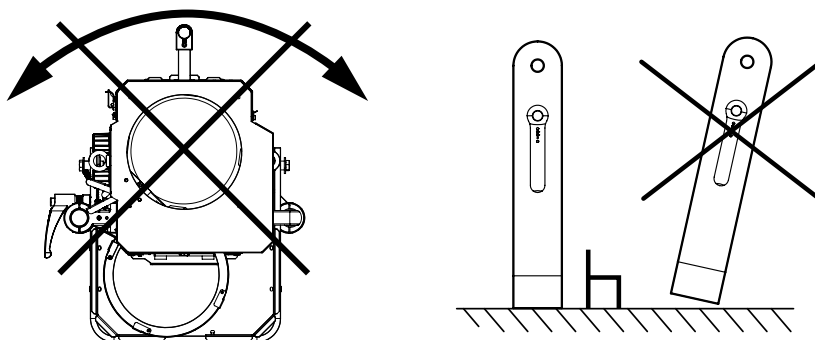

3.1.2 Minimum distance between a flammable material and the lighting unit

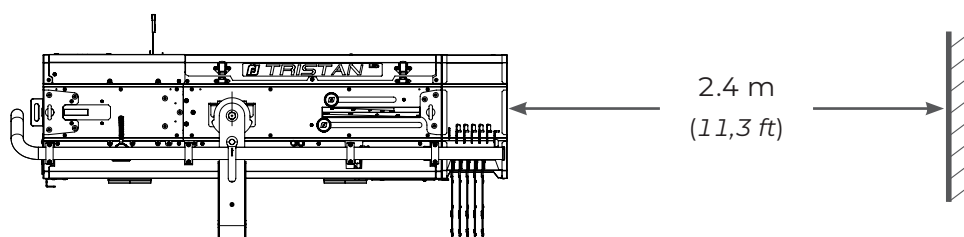

3.1.3 Instructions for use

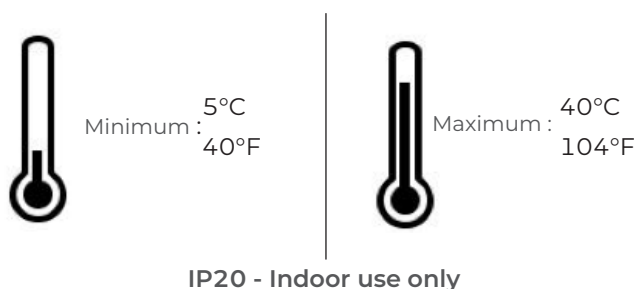


3.1.4 Lifting



• Net weight:
39 Kg (116.6 lbs)



Lifting ring DIN 580 M8
(x4 Not supplied)

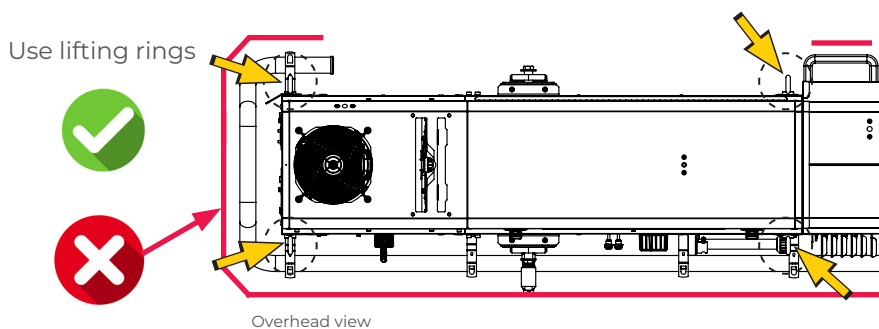


3.1.5 Safety cable

• Safety cable attachment point



Safety cable not supplied.

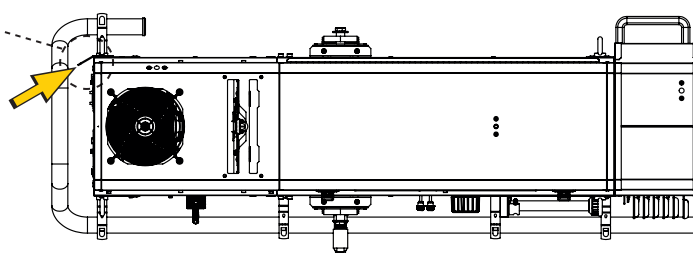


The unit must be installed only on a Robert Juliat compatible stand / head :

JPP	Monopod stand for overhead followspot
GT4000	Tripod stand with safety chain - SWL: 130 Kg - max. height: 1030 mm
GT4000S	Tripod stand without safety chain - SWL: 130 Kg - max. height: 1030 mm
GT4000R	Tripod stand with ball head rotation with security chain - SWL: 130 Kg - max. height: 1030 mm
T4000	Followspot mount for Ø50mm pipe (suspension or overhead) - SWL= 100 Kg
GT4000RSM	Tripod stand with ball head rotation with safety chain and SpotMe PAN sensor - SWL: 130 Kg - max. height: 1030 mm
T4000RSM	Followspot mount with ball head rotation and SpotMe PAN sensor - SWL= 100 Kg

• GT4000 / GT4000S / GT4000R

Please refer to the relevant stand technical files for further details.

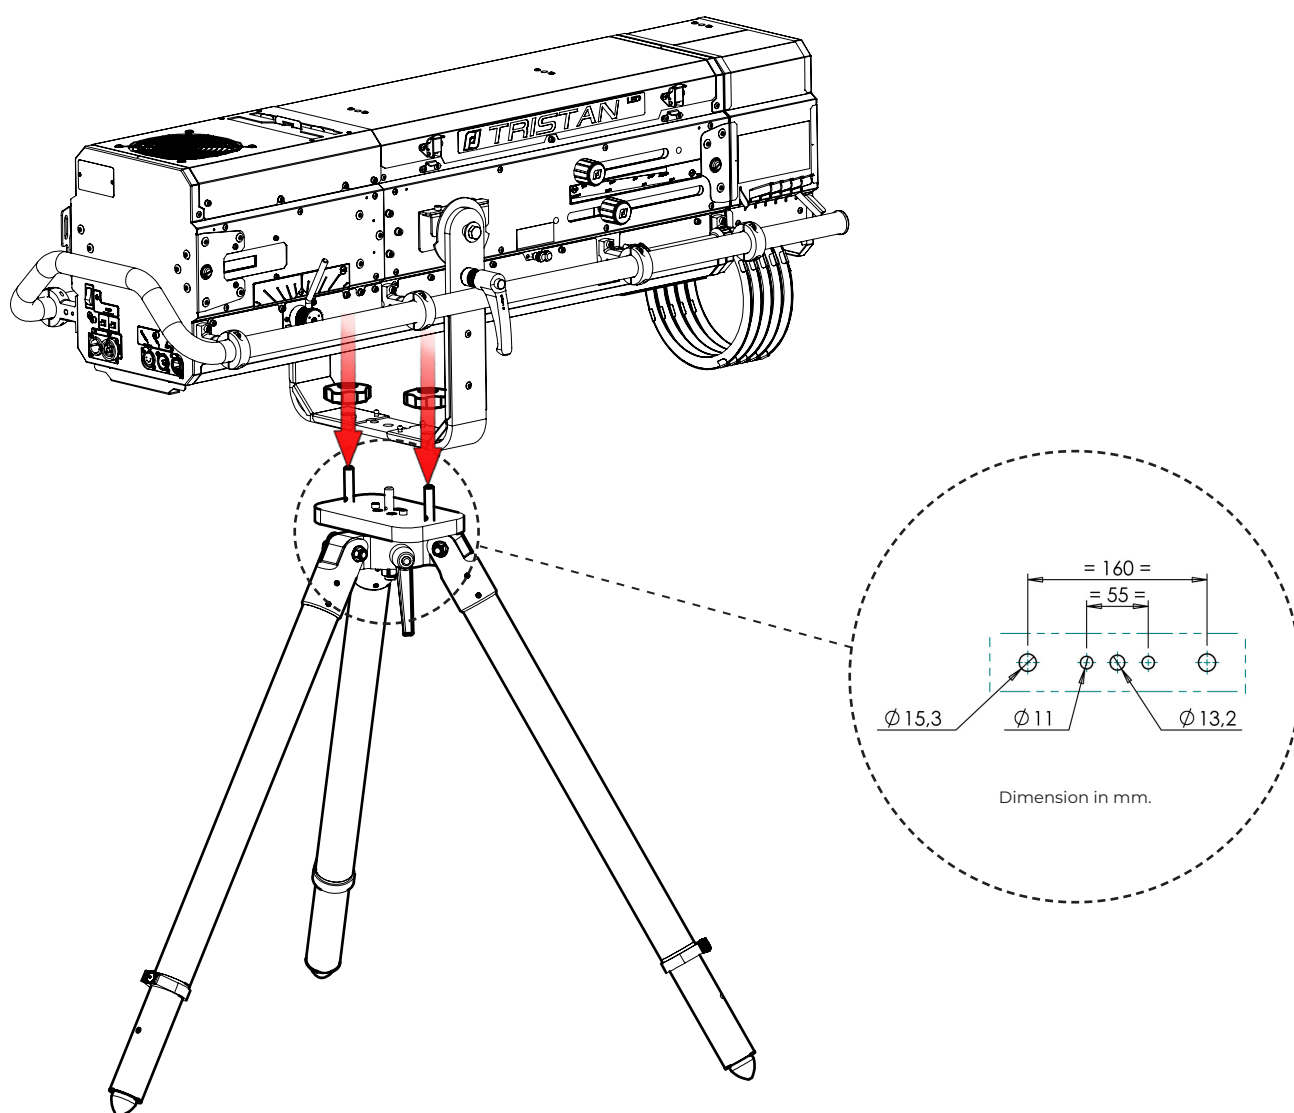

3.2 Electrical information







3.2.1 LED source




Never touch or scratch the LED surface.
See 6.1.4 LED source.

3.2.2 Power supply

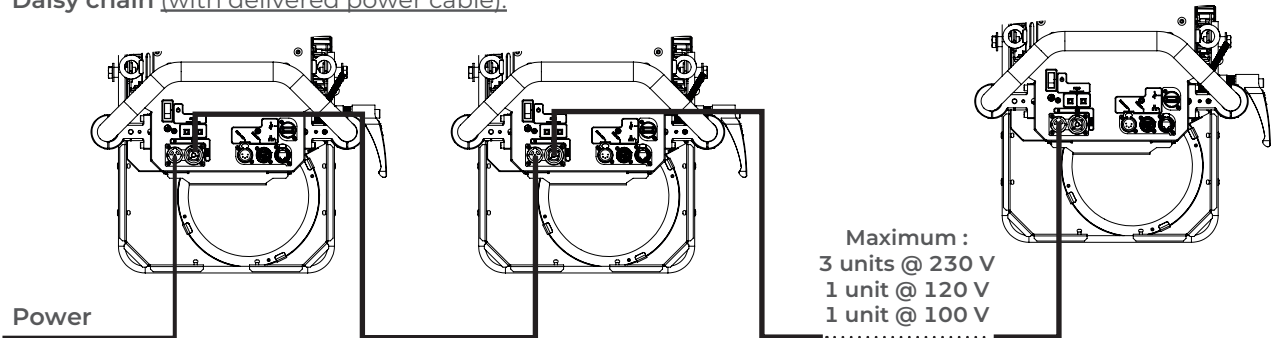Power supply			
Voltage	Frequency	Input power	Connectors
90 → 277 V	47-63 Hz	4,39 A / 958 W @ 230 V 9,27 A / 990 W @ 120 V 10,31 A / 1000 W @ 100 V Max. = 12 A Standby < 11 W	Neutrik powerCON TRUE1 TOP Input : ref. NAC3FPX-TOP
 • Class 1 product. This luminaire must be earthed. • Must be connected directly to AC power. Do not connect to dimmer power. • Automatic mains voltage detection.			
Daisy chain (with delivered power cable):  Maximum : 3 units @ 230 V 1 unit @ 120 V 1 unit @ 100 V			

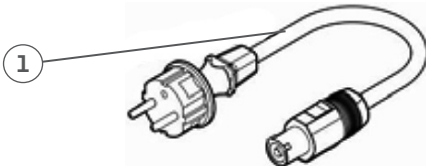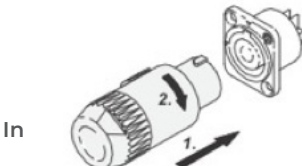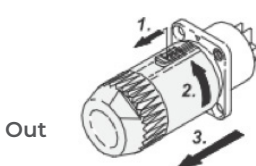Power cable						
 						
Power cable		Connector	Mains plug	Cable type	Cable length	Wiring
1	Standard version	Neutrik® powerCON TRUE1 TOP NAC3FX-W-TOP	CEE7/7	3G1.5 H07RNF	3 m 9.8 ft	Live: Brown Neutral: Blue Ground: Yellow/Green
2	North American version		-	14AWG SJ TYPE (UL/CSA)	1.5 m 4.9 ft	Live: Black Neutral: White Ground: Green
 						

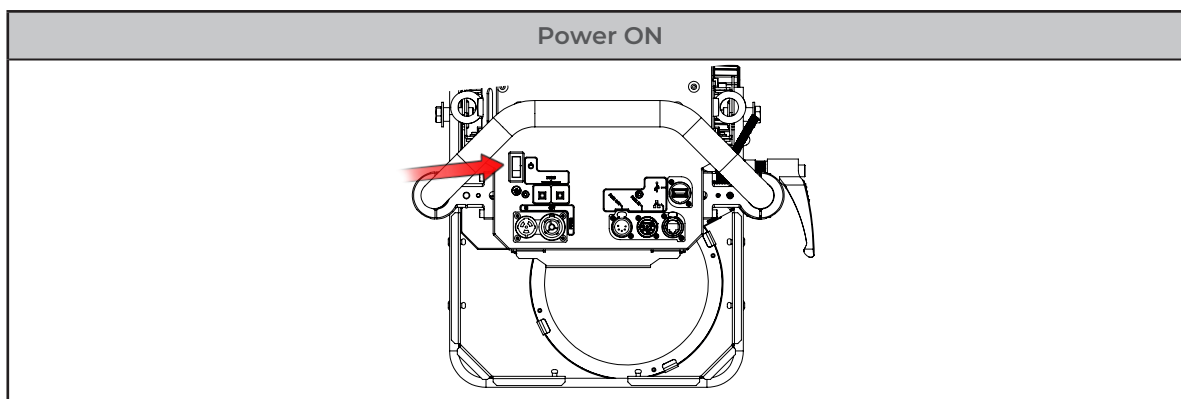


3.3 DATA


3.3.1 DMX 512-A / RDM

Protocol	Input connector	Output connector
USITT DMX 512-A RDM	XLR 5-pin	XLR 5-pin


DATA connectors			
PIN #	DMX	Description	
1	Shielding	Foil & Braided Shield	
2	DMX (-)	1st conductor of 1st twisted pair	
3	DMX (+)	2nd conductor of 1st twisted pair	
4	Not used	1st conductor of 2nd twisted pair	
5	Not used	2nd conductor of 2nd twisted pair	

Daisy chain:

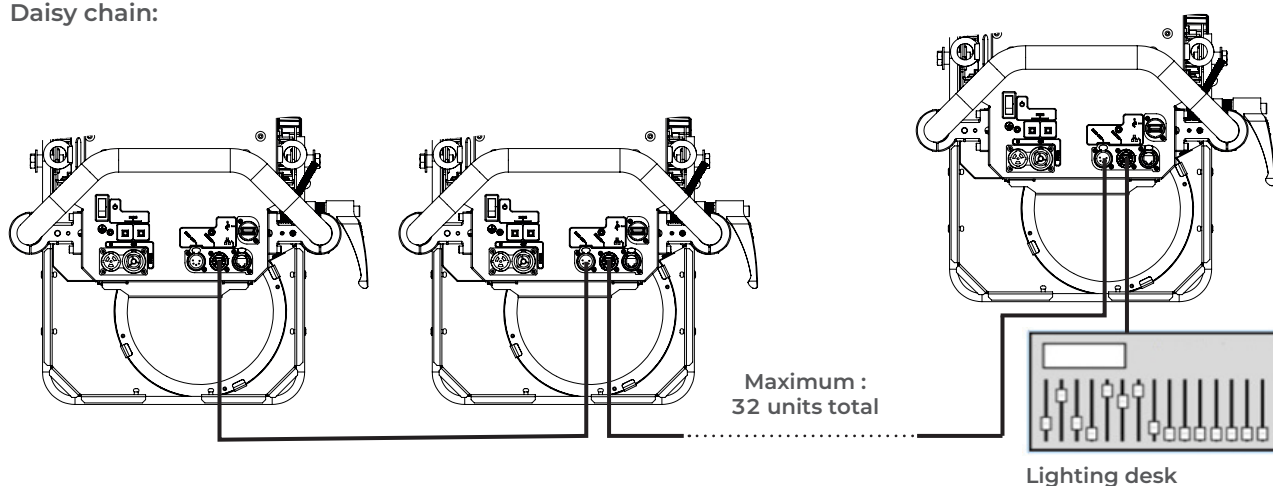


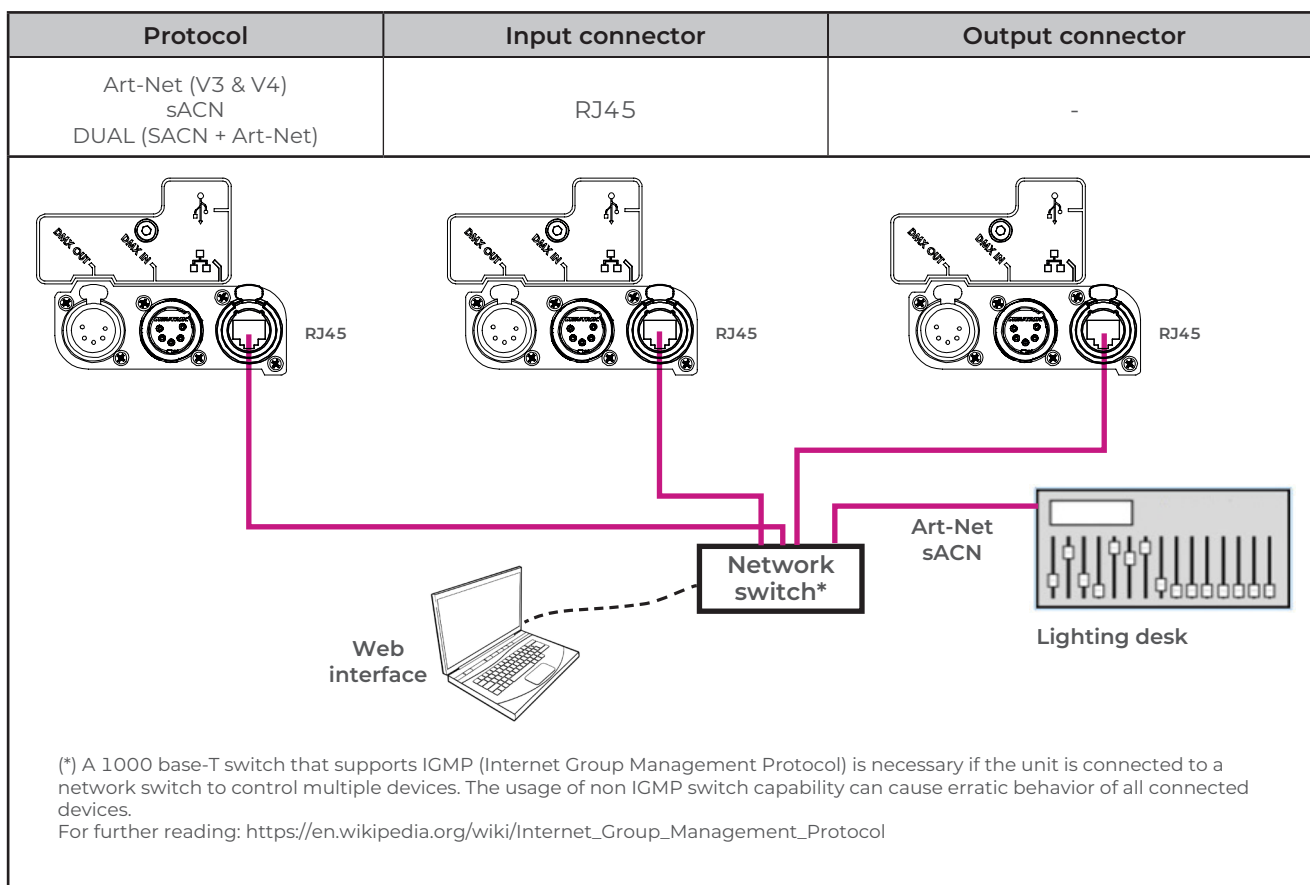



3.3.3 Ethernet / DMX node

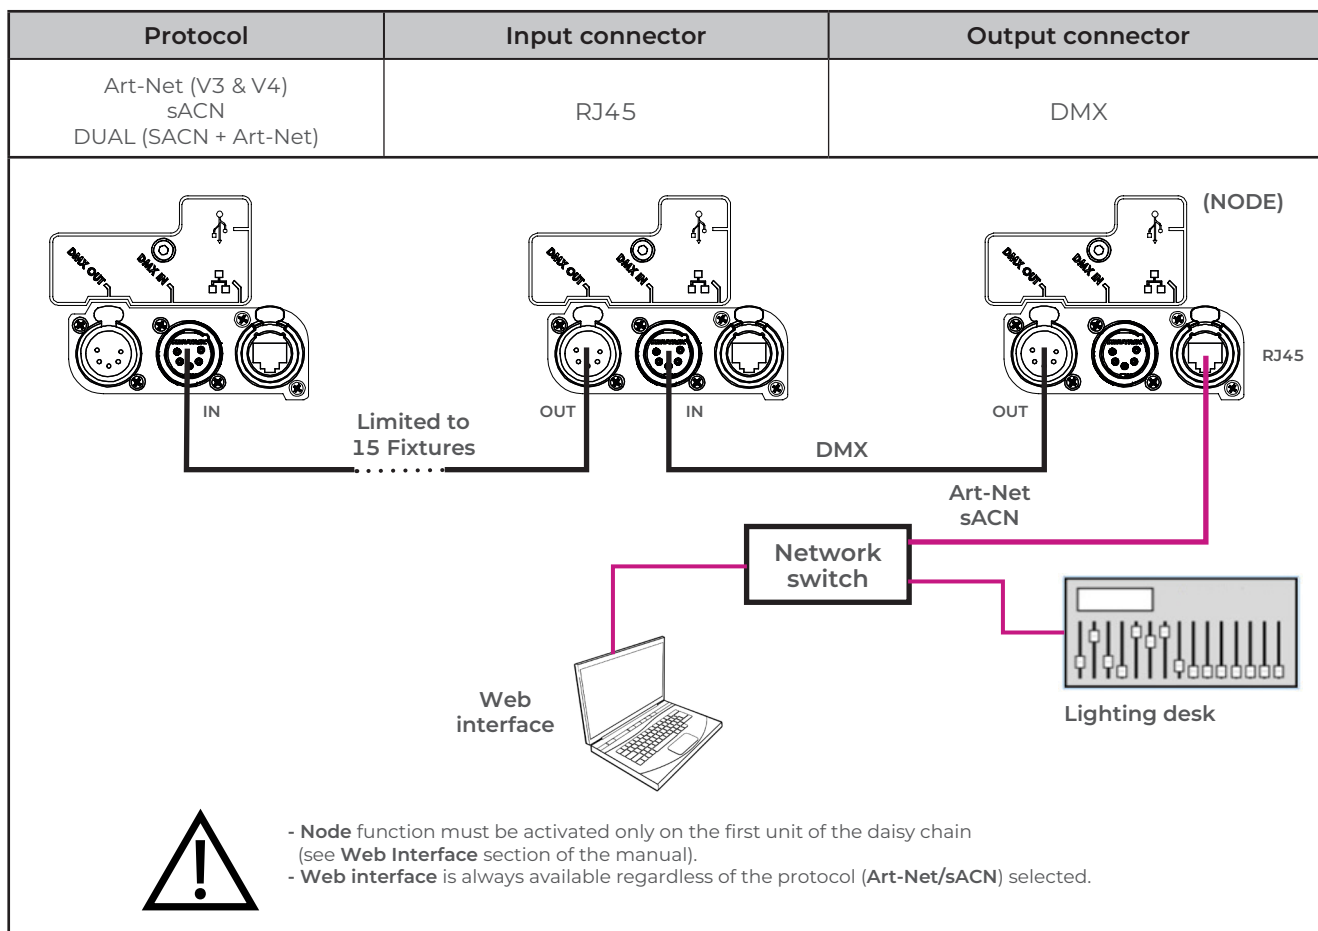

RJ-LED2 FIRMWARE PLATFORM (Node Mode) full manual is available for download at www.robertjuliat.com/LED/PDF_PAGE


3.4.1 Colour changer unit - boomerang

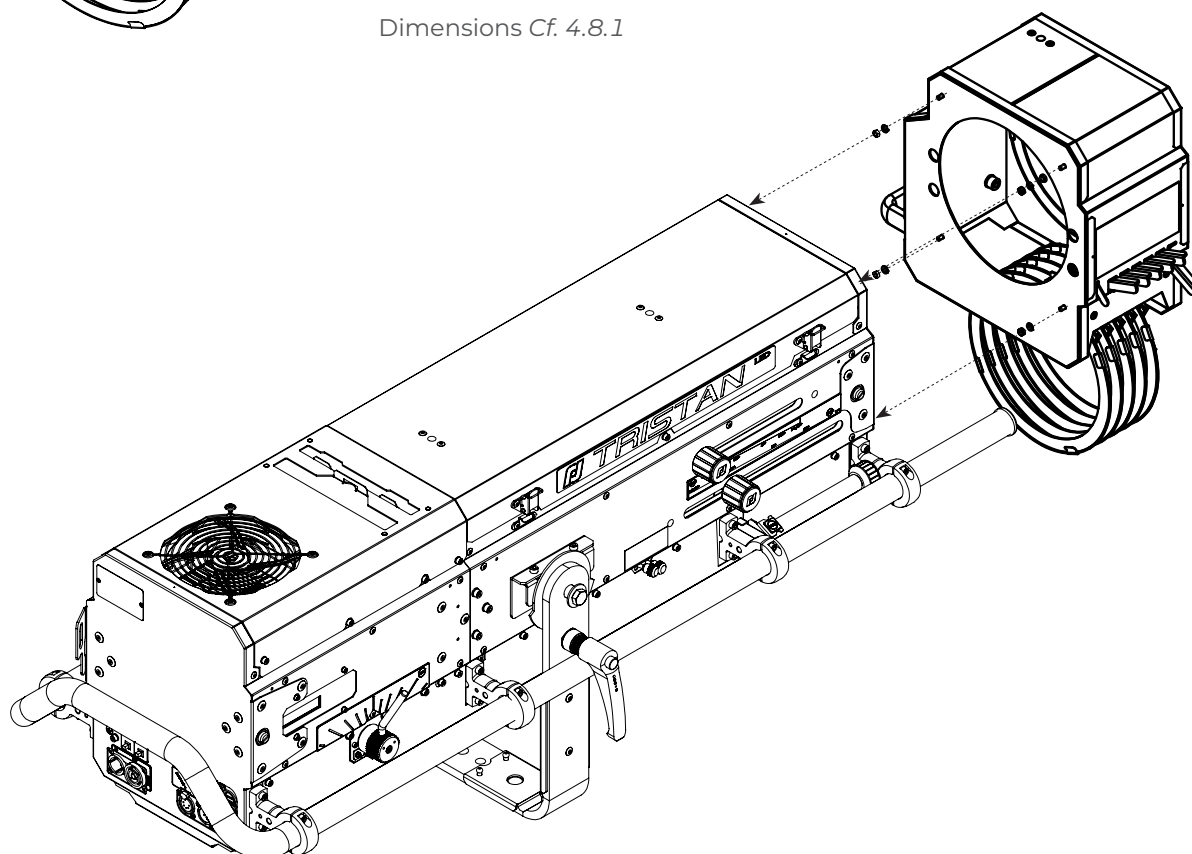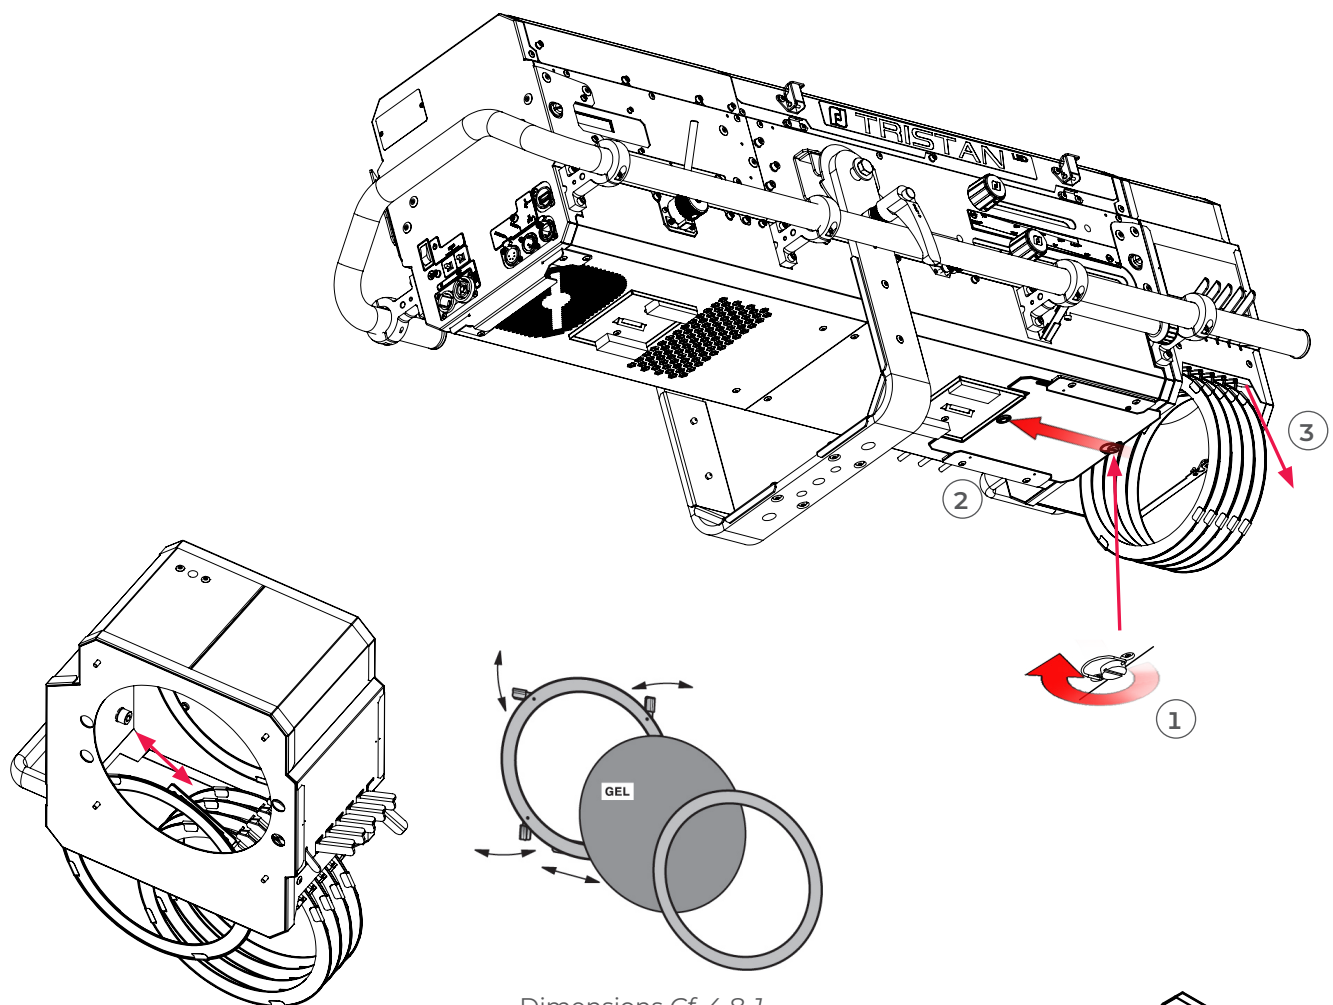

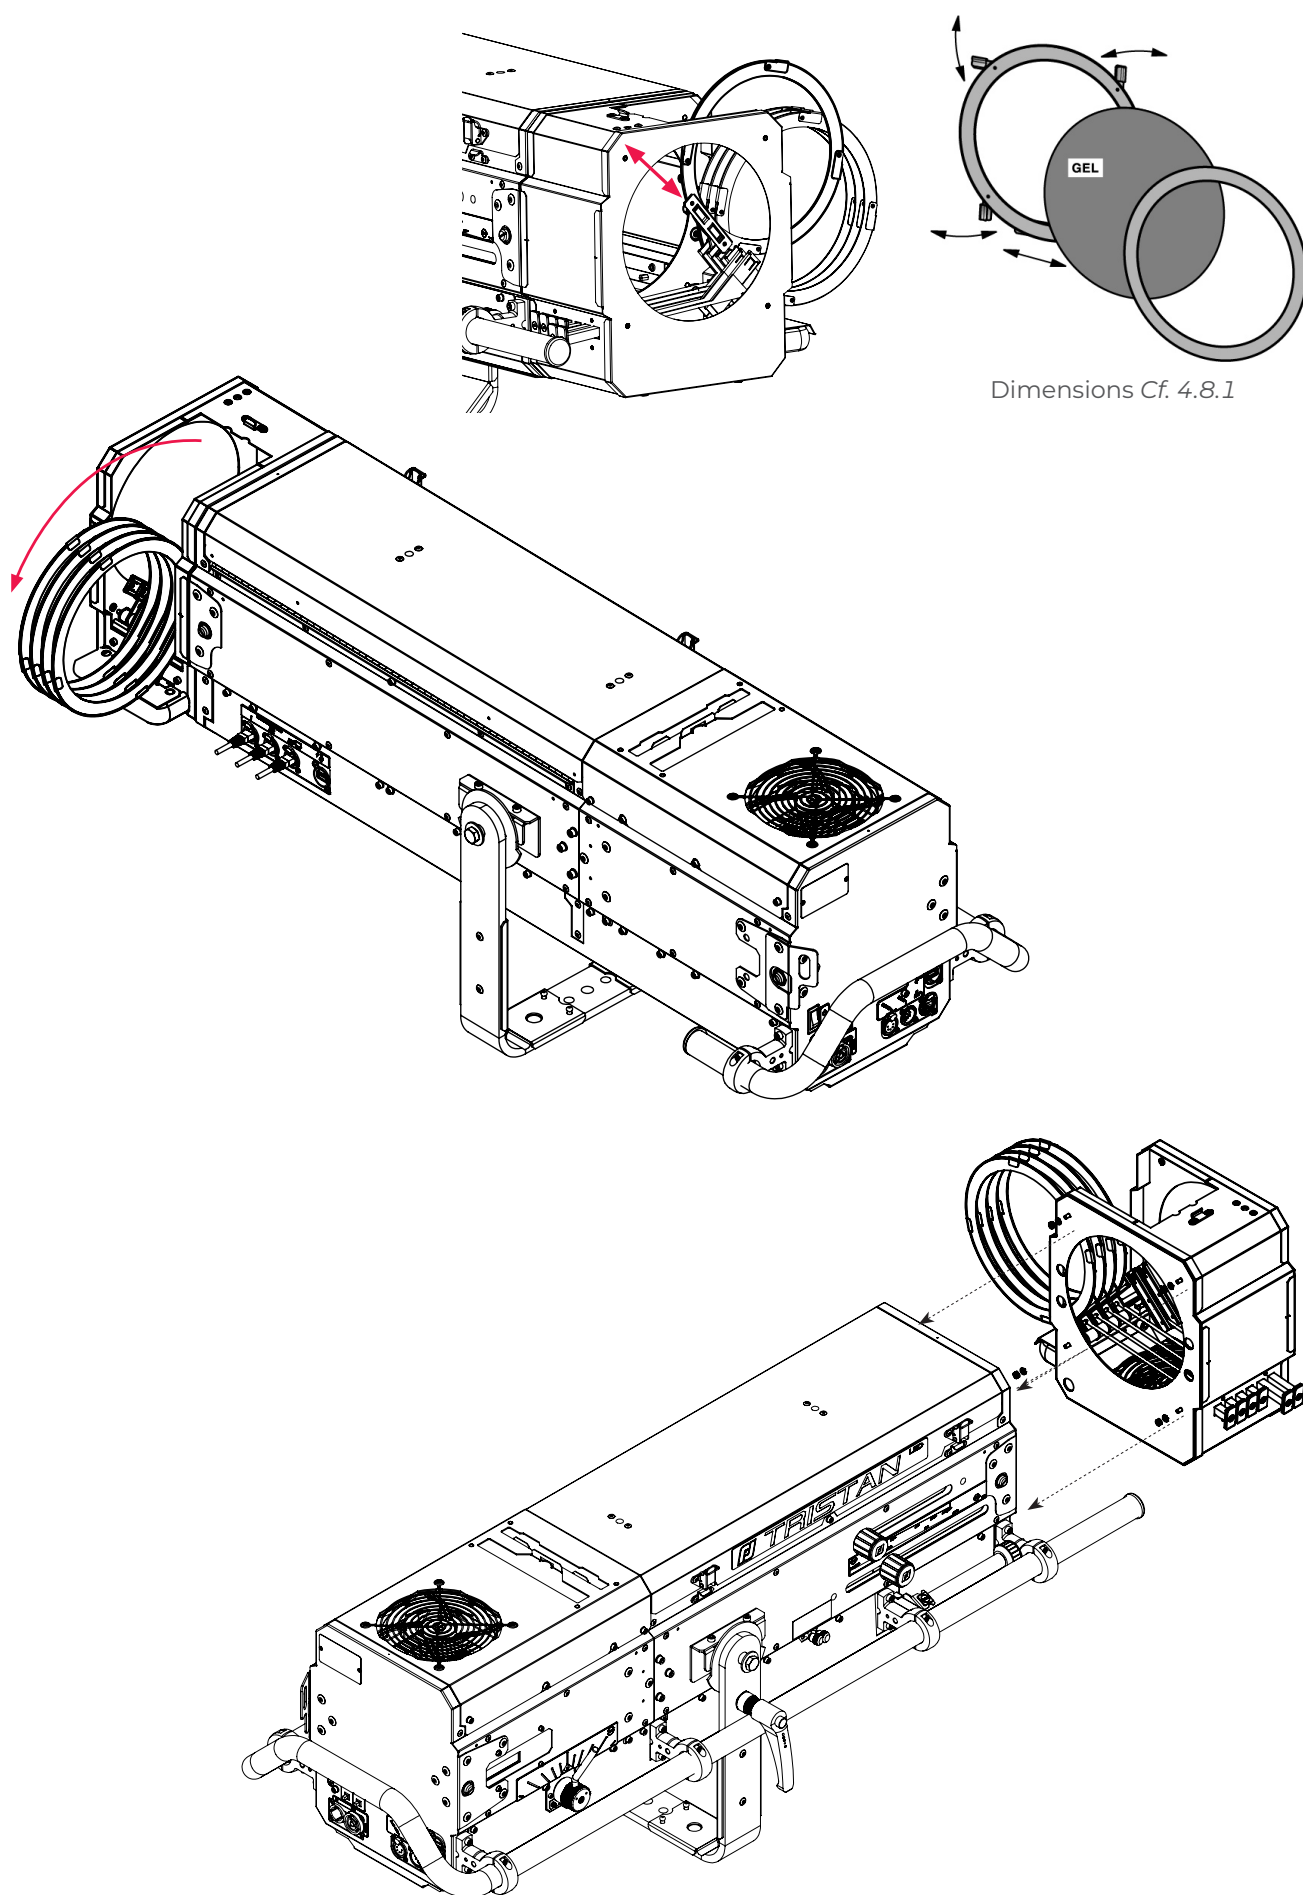



3.4.3 Gobo holder

EN

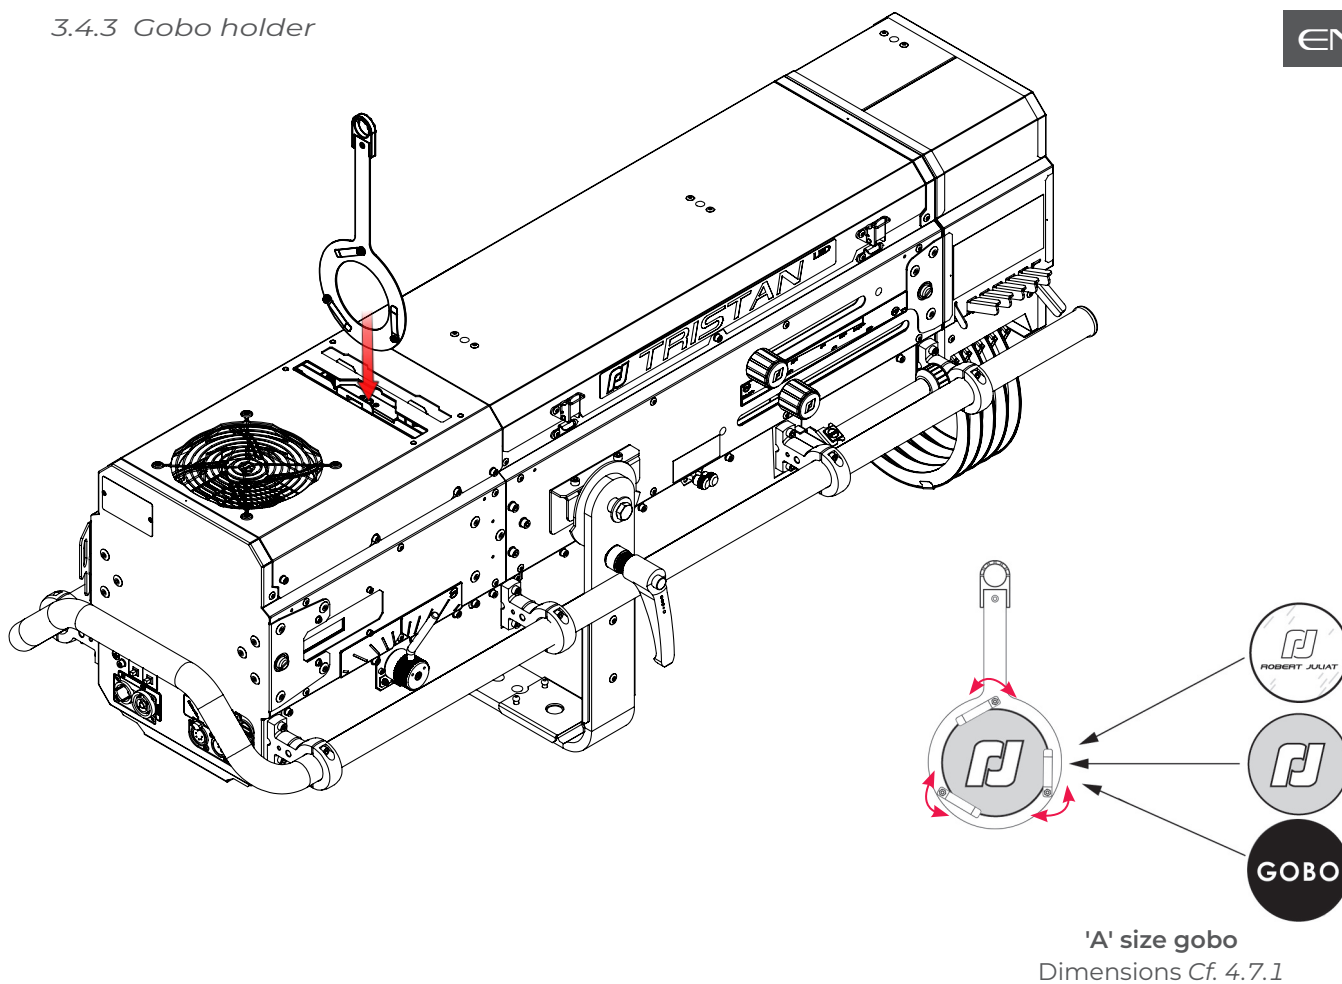


3.4.4 Frost / Correction filter

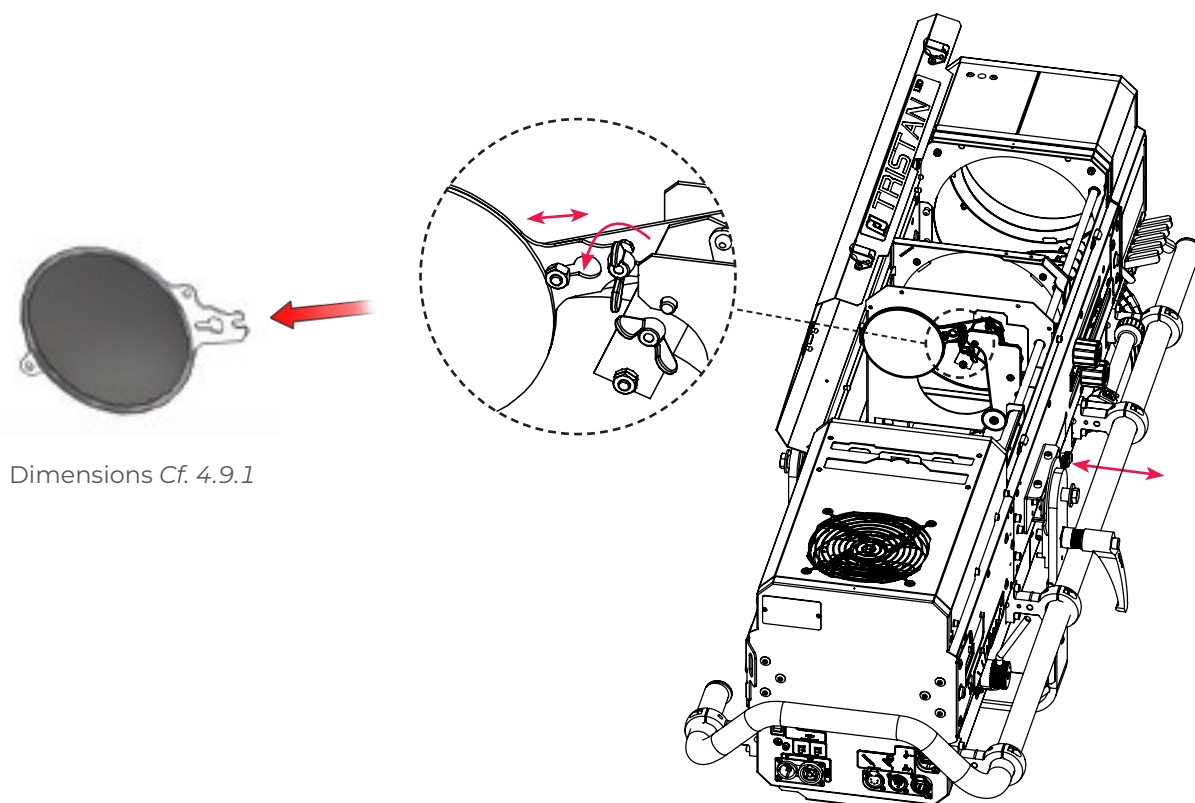

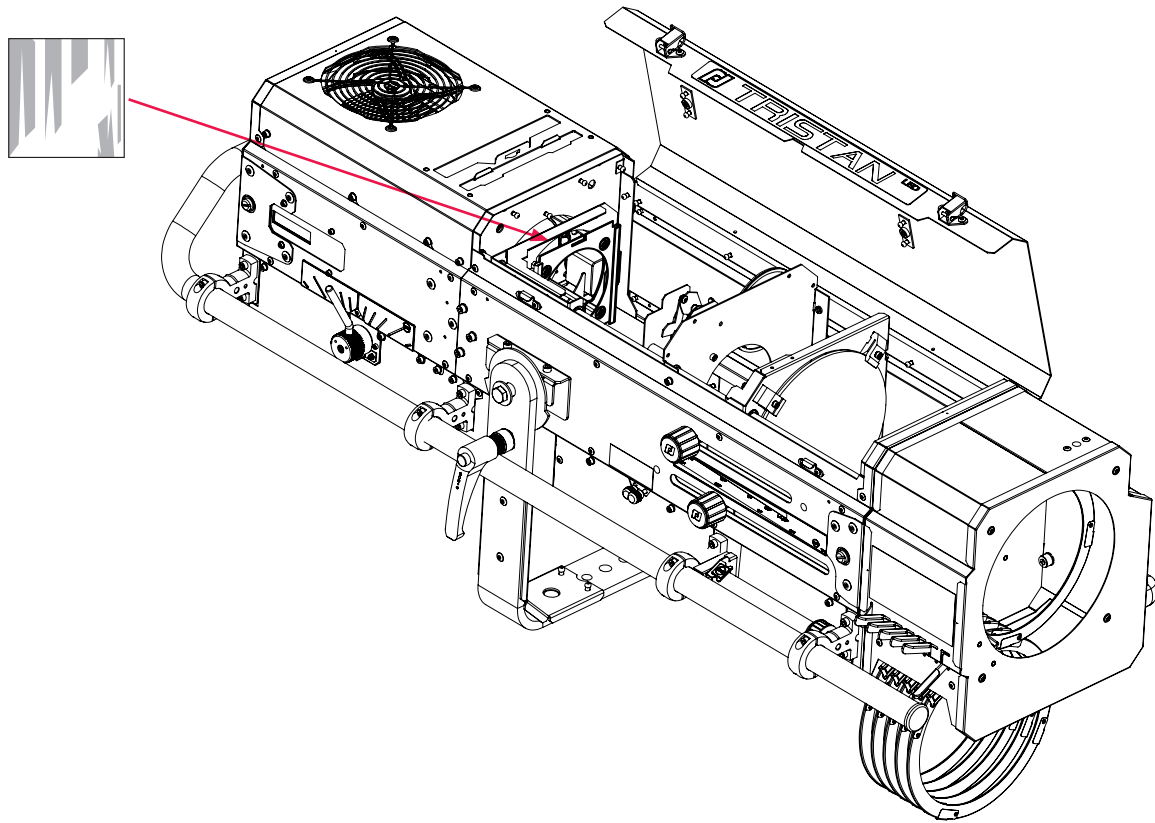


3.4.6 Remote controls

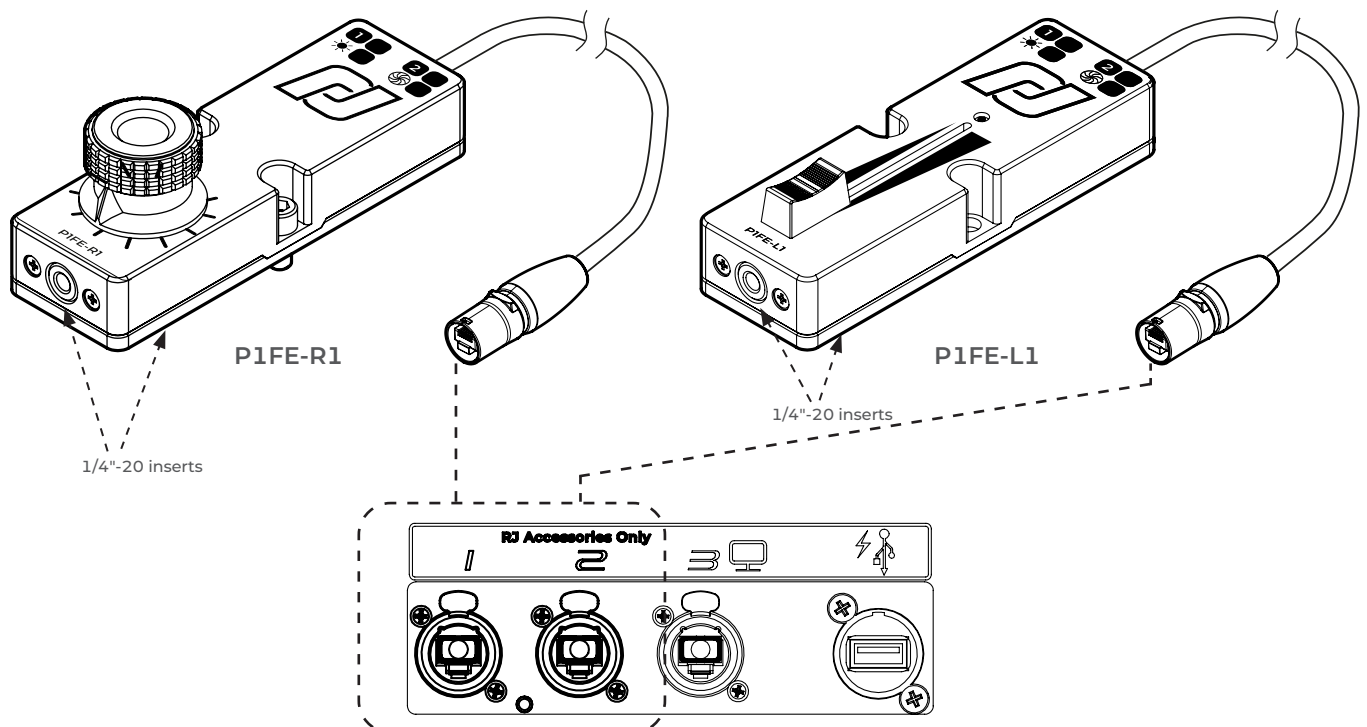


3.4.7 Remote display


EN

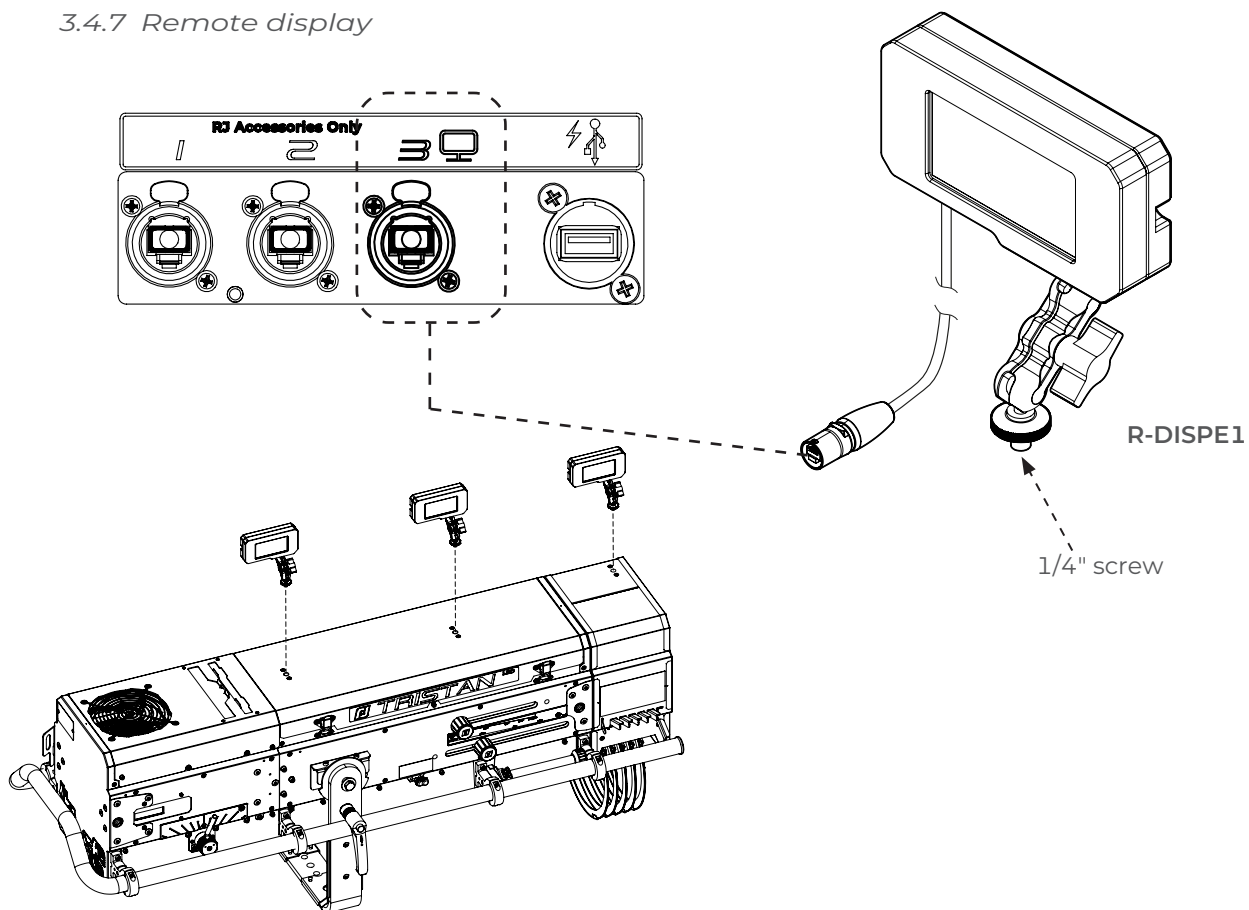


3.4.8 Top accessory plate

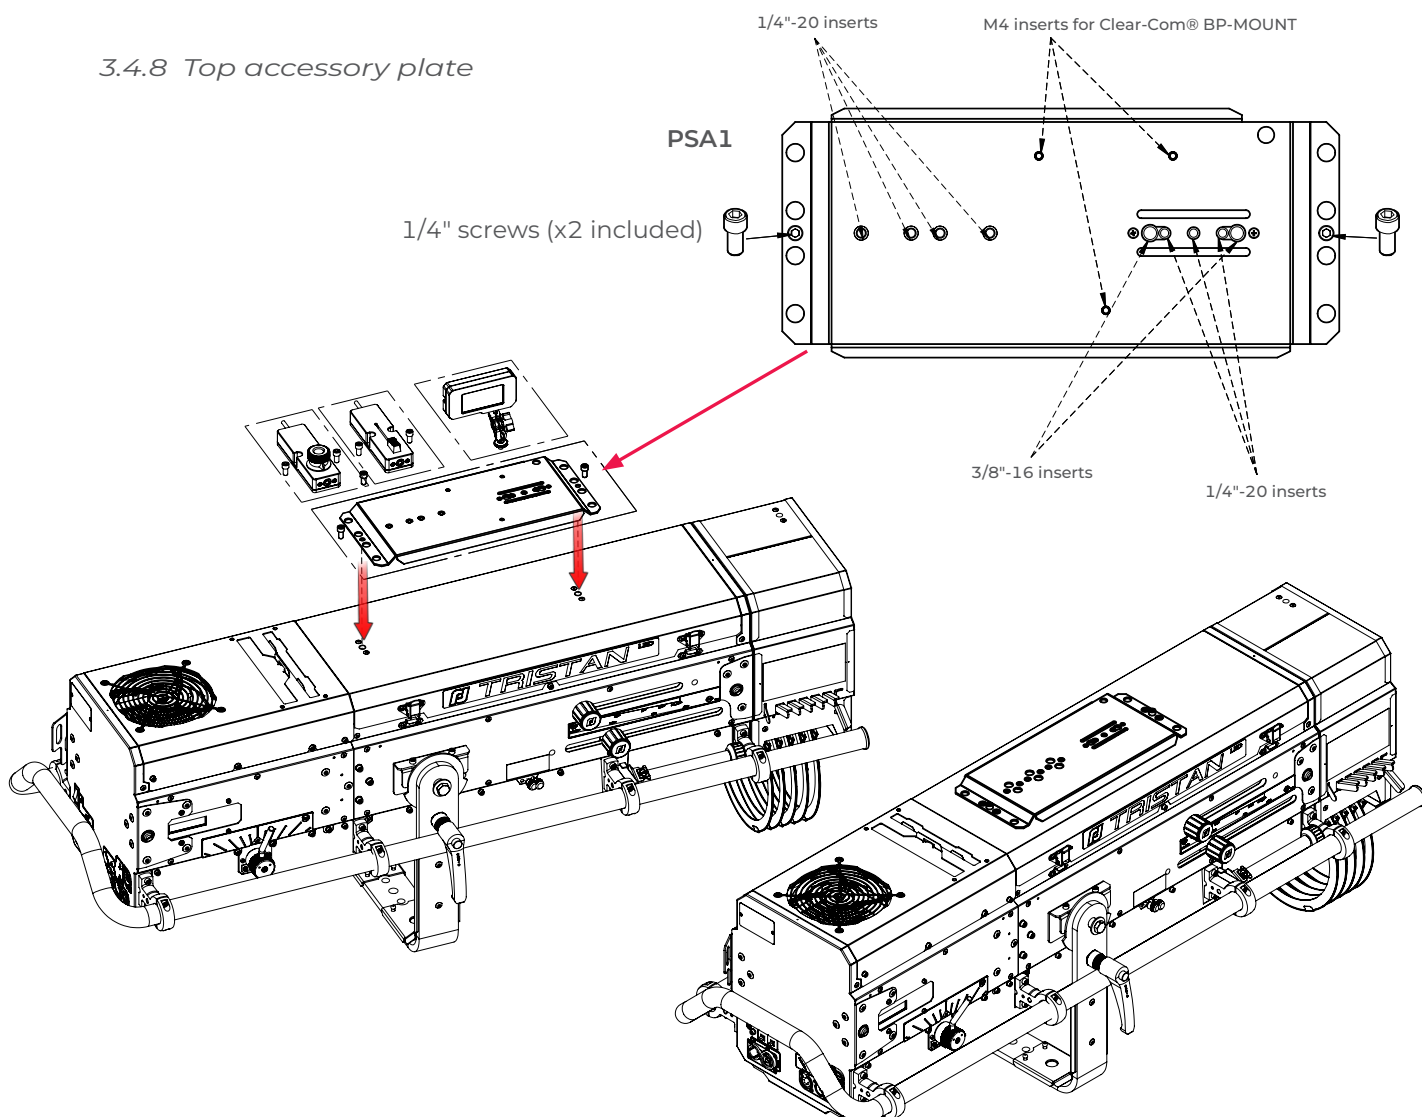


3.4.9 Double slot front cassette for accessories

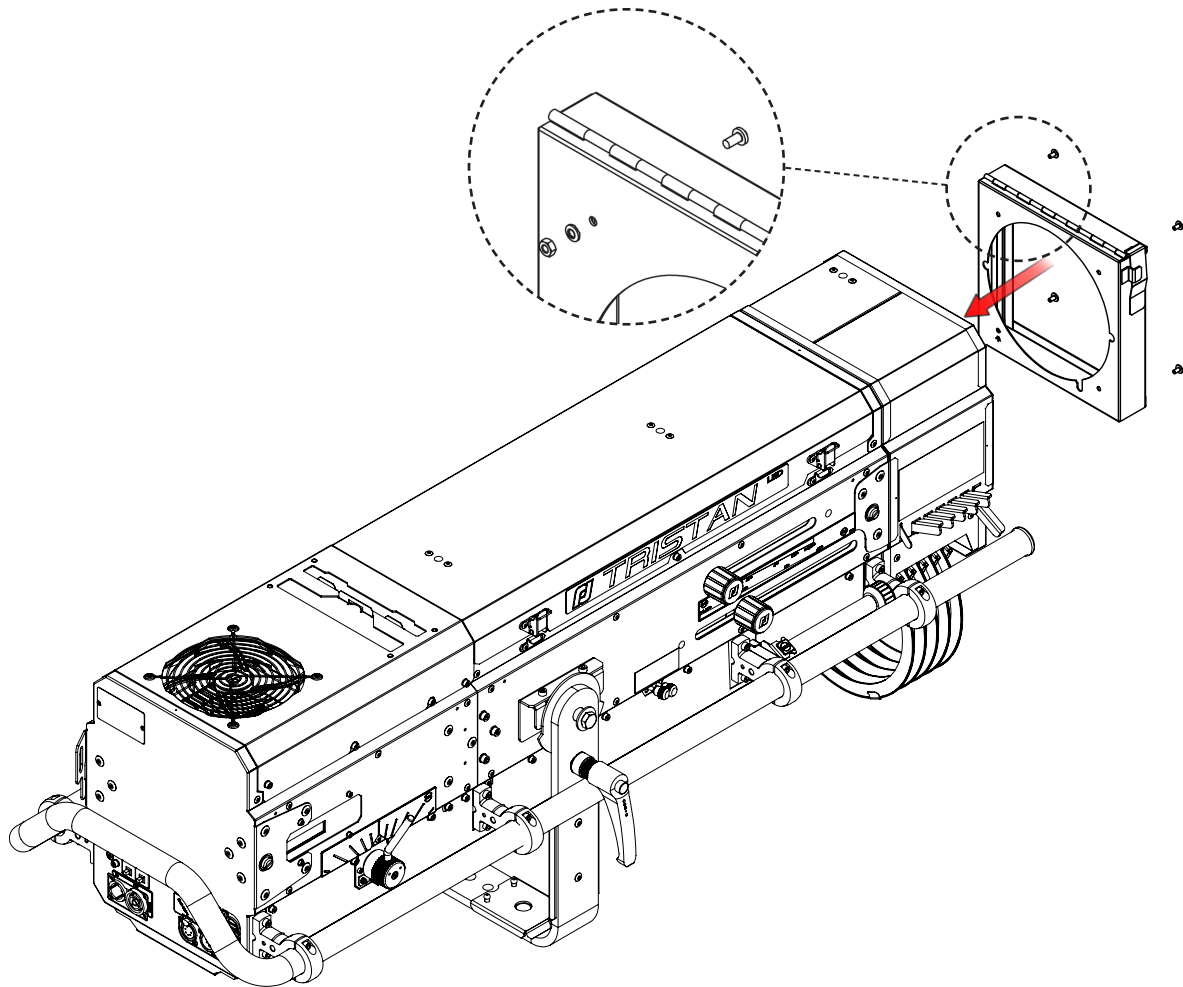


3.4.10 Counterweight

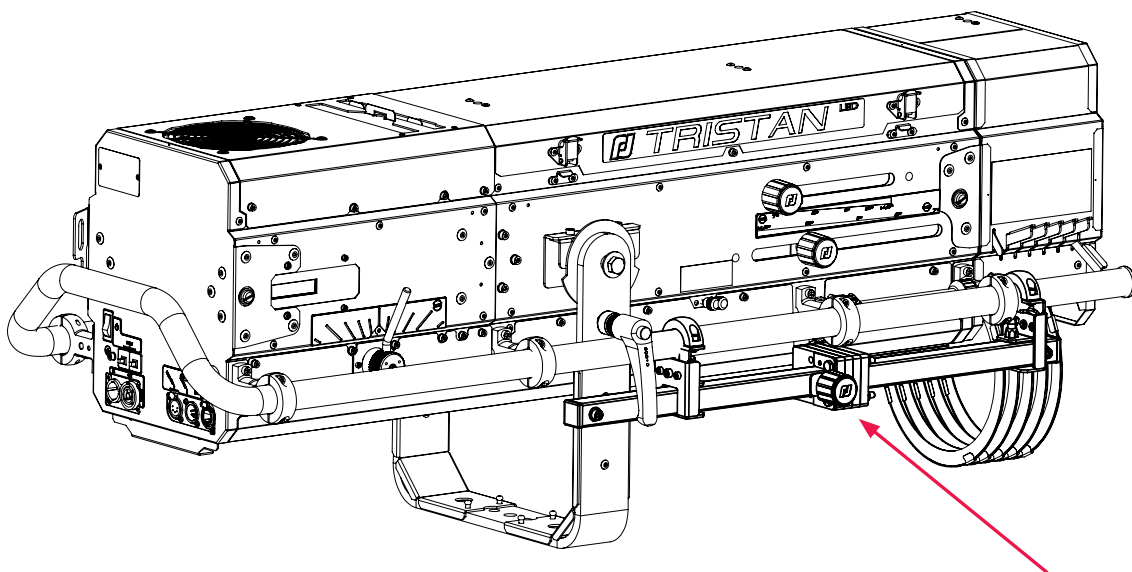

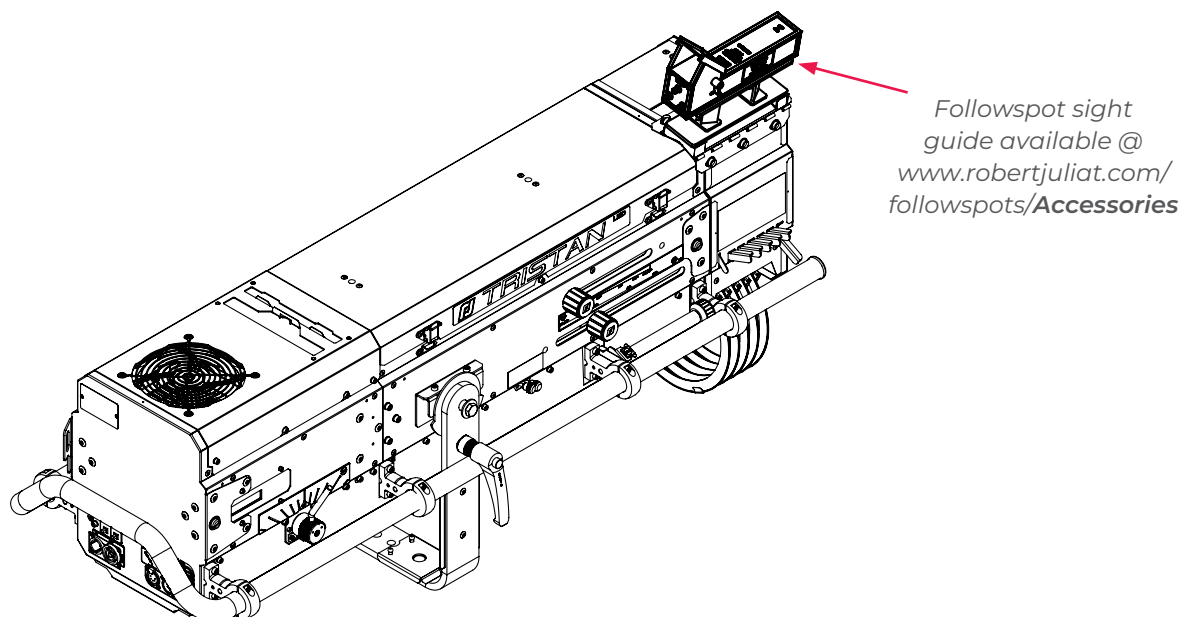


Caution: - Do not install the followspot sight on the lamp house to avoid blocking the ventilation vents.
- Secure the sight with a suitable safety cable.


3.4.12 RJ cable strap (accessory)

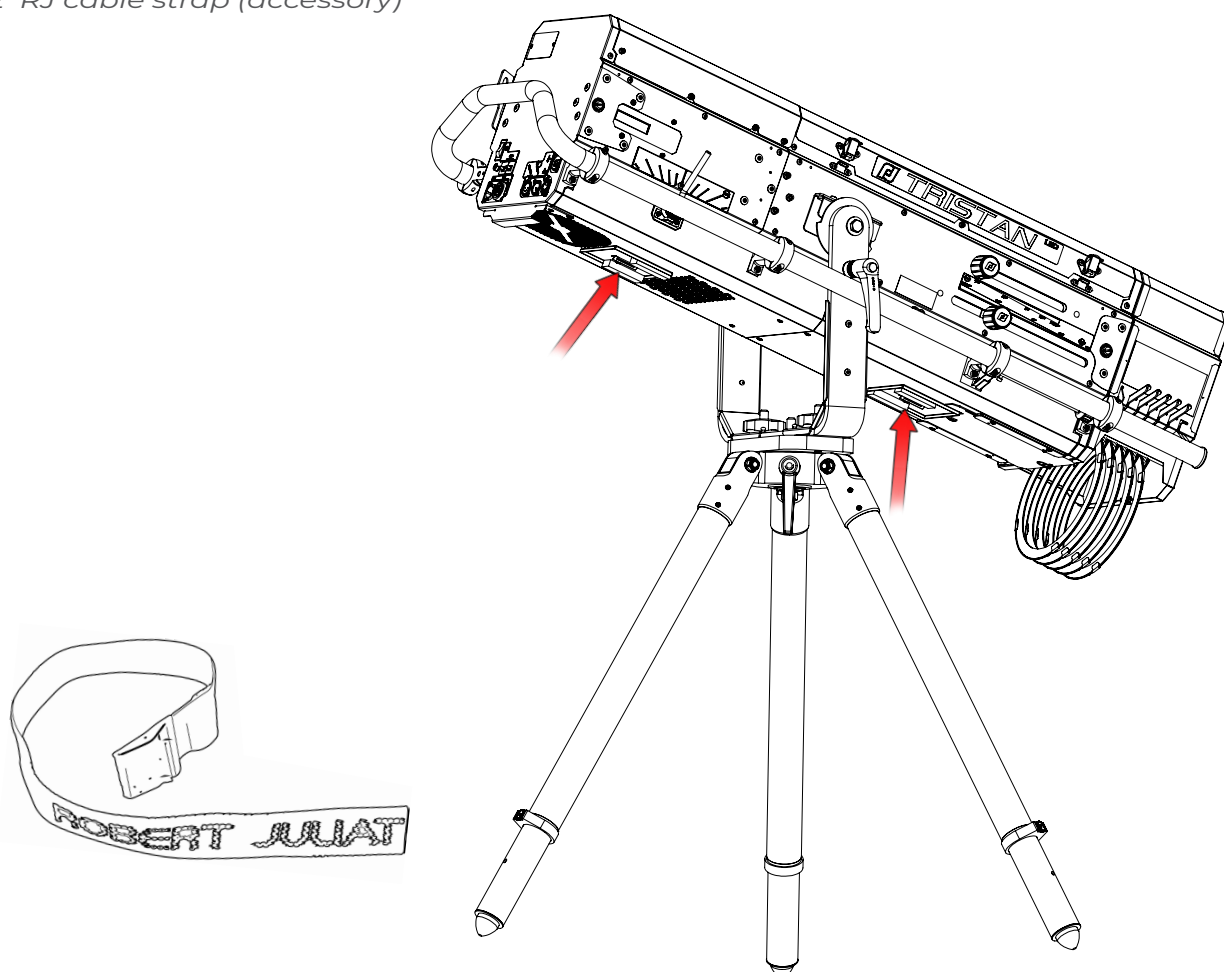


3.4.13 Flight-case

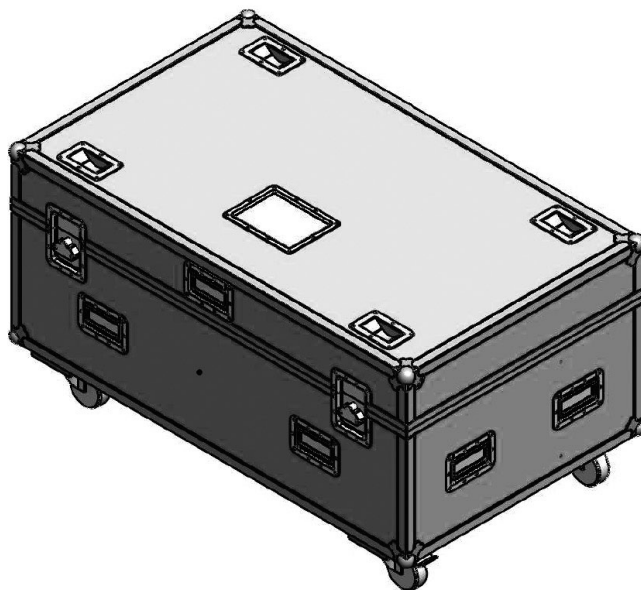

Inner side view

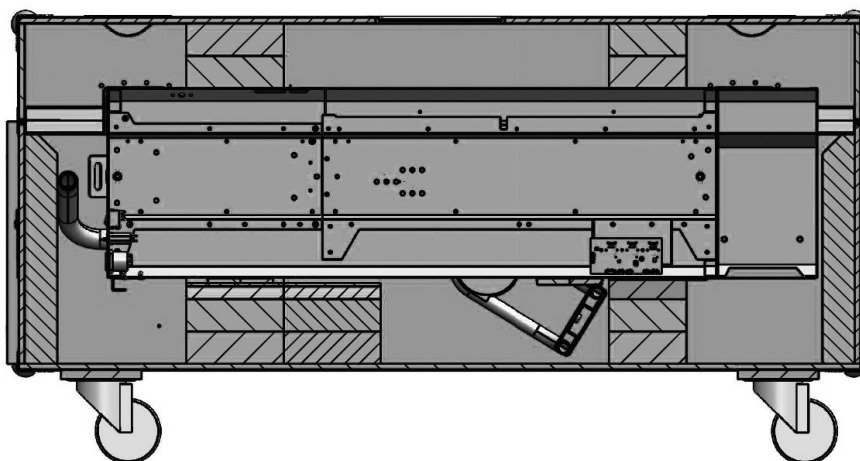

Inner overhead view

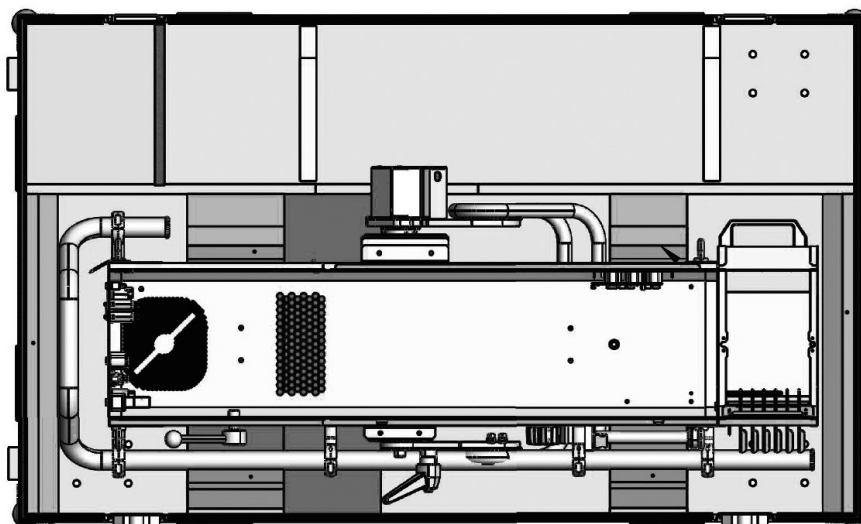

4.1 Light intensity


4.1.1 Range




4.1.2 Control

→ selection in DATA MODE / PROTOCOL

Remotely with DMX / Art-Net /sACN / DUAL protocols

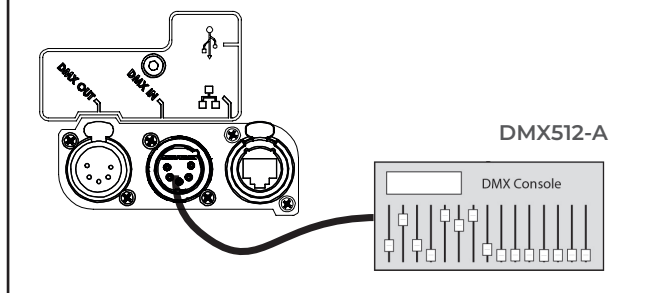

Locally via Standalone mode

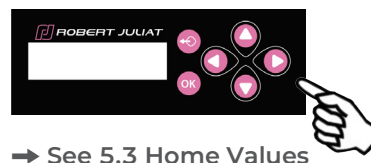

→ See 5.3 Home Values

Default Home Values:
- Dimmer @0
- Master dimmer @Full


Or

And

HTP mode (Highest Takes Precedence):
Light output is the highest value


→ selection in SETUP / DIMMER / PATCH

Local control - Back

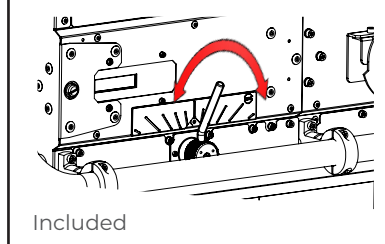

Included


Local control - Front*

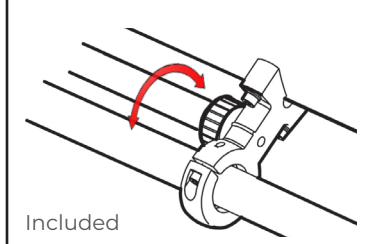


Included

With remote controls

 P1FE-R1



P1FE-L1

 

Optional accessories

Or

Or


(*) By default

4.1.3.1 Dimming resolution - DMX only

Resolution	DMX mode
8 bits – 255 steps	1
16 bits – 65 535 steps	2, 3, 4

4.1.3.2 Dimming curve

➔ selection in SETUP / DIMMER / CURVE menu: LINEAR or SQUARE

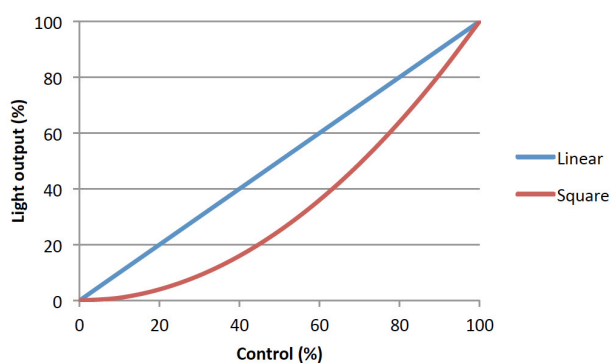

4.1.3.3 Master control


➔ DMX Mode 3 & 4

In order to supervise the operator from the console, master control DMX channel can be used.


This channel limits the maximum value of the dimmer shutter.

By using this function, it is possible to obtain synchronised fades with several spots or to give intensity limits (minimum and maximum) to the operator.

Master is only active when DMX is detected.

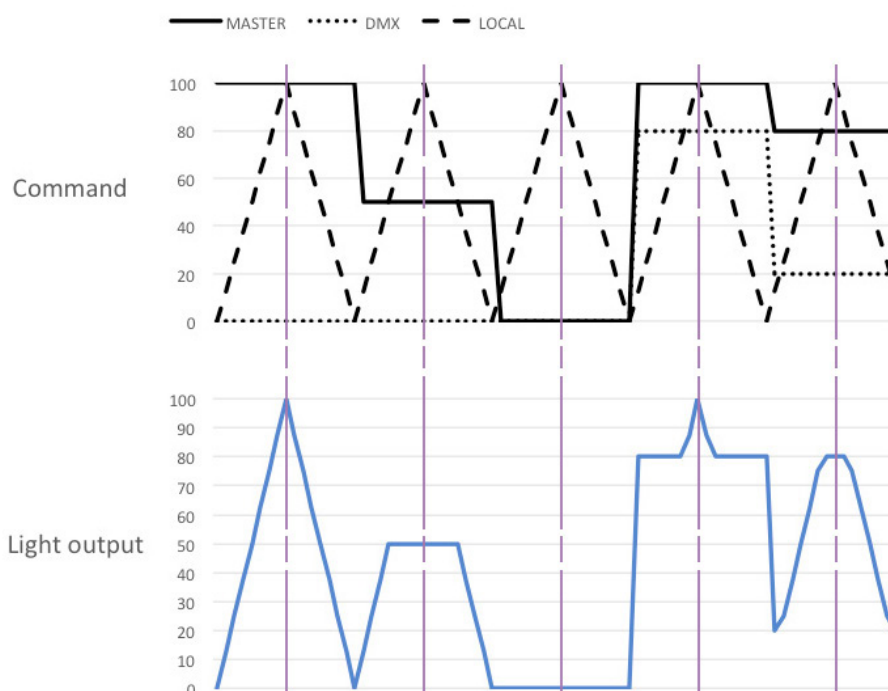

➔ Selection in SETUP / DIMMER / MAX menu

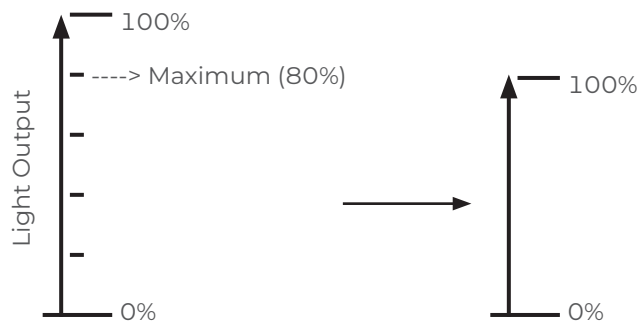


4.1.3.5 Dimming mode

➔ Selection in SETUP / DIMMER / DIMMING MODE menu


Mode	Result
Without PWM	Flicker-Free, perfect for filming
PWM 17 KHz	Good dimming quality (Default Value)
PWM 3.2 KHz	Very good dimming

4.2 Strobe

4.2.1 Range

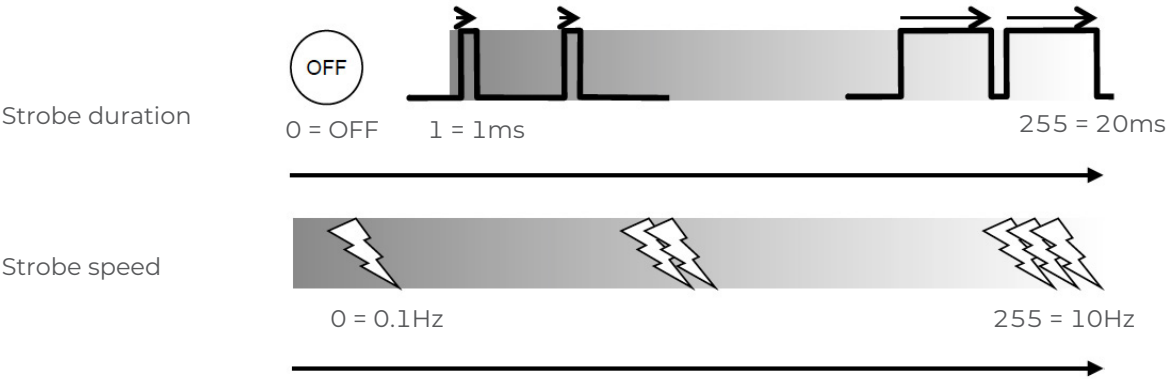


4.2.2 Control

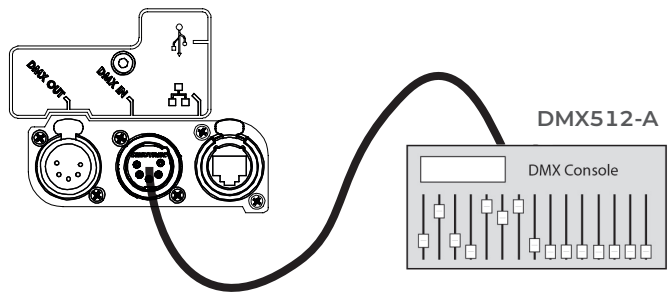


➔ Remotely with
DMX512-A / Art-Net / sACN protocols
Mode 2, 3 & 4

4.3 Response time


4.3.1 Range

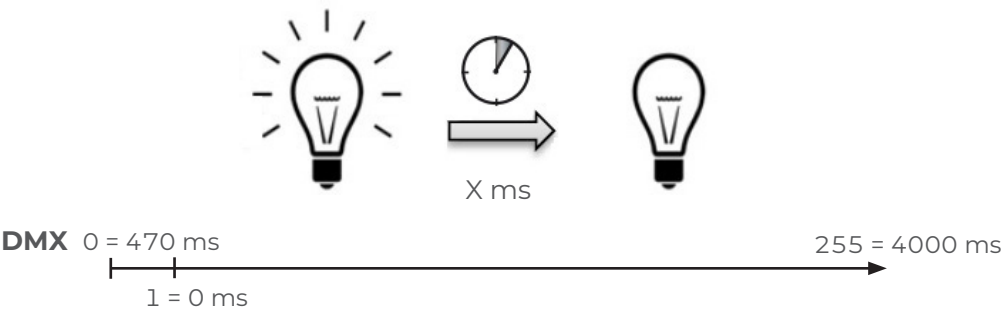

4.3.2 Control

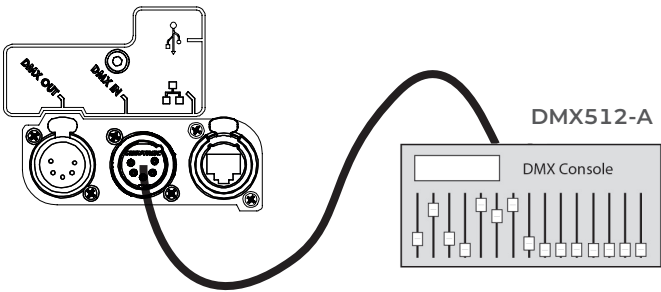

→ Remotely, with
DMX512-A / Art-Net / sACN protocols
Mode 2, 3 & 4

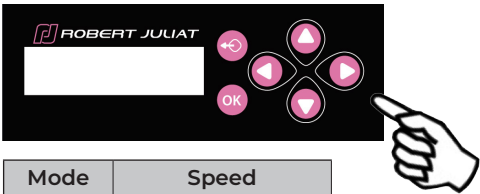


Mode	Speed
NONE	OFF
SLOW	700 ms
MEDIUM	470 ms
FAST	350 ms
CUSTOM	0 - 4000 ms

→ STANDALONE
or
DMX 512-A / Art-Net / sACN protocols
Mode 1
→ selection in
SETUP / DIMMER / RESPONSE TIME
(or HOME VALUE)




4.4 Beam size adjustment

4.4.1 Range

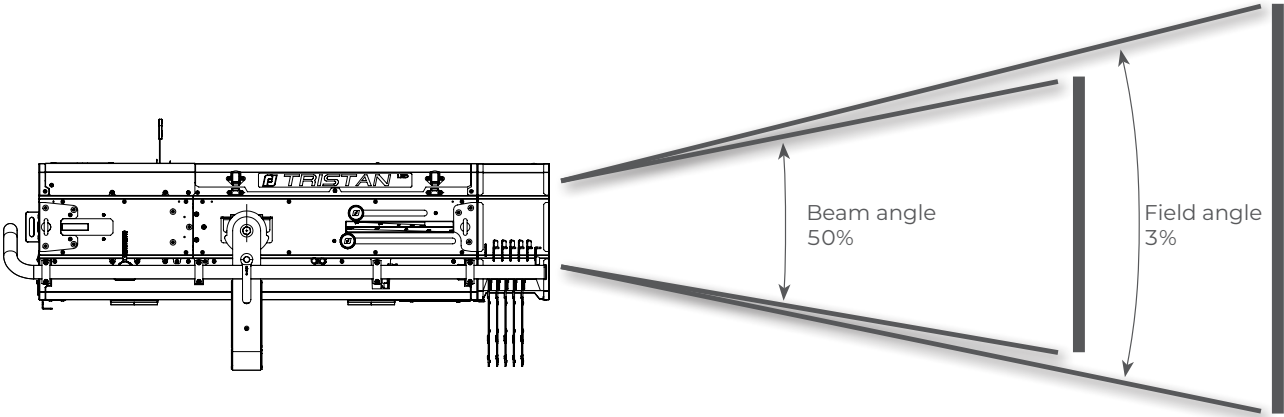

Model	Angles	Minimum angle	Maximum angle
TRISTAN 1189 & 1189C	Beam angle	7,1°	13,6°
	Field angle	7,3°	14,7°





4.4.2 Control

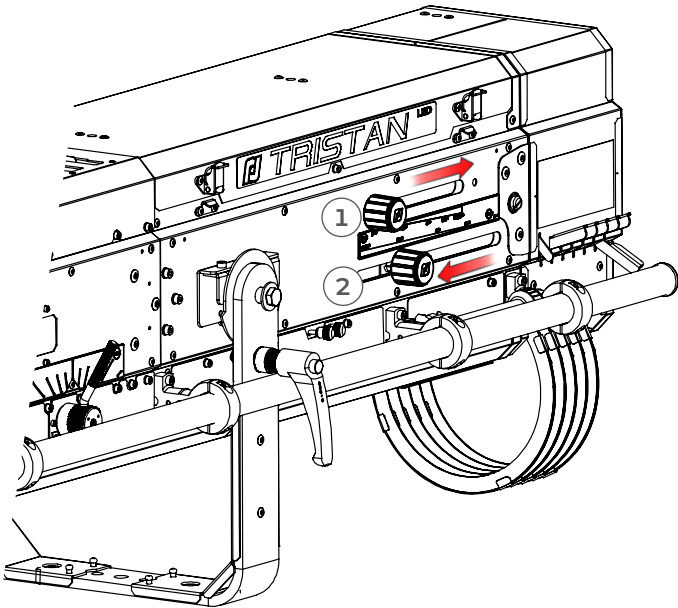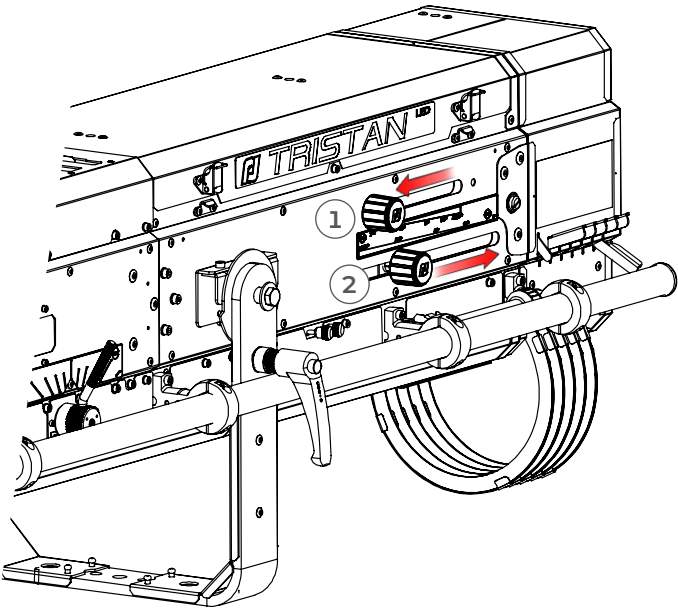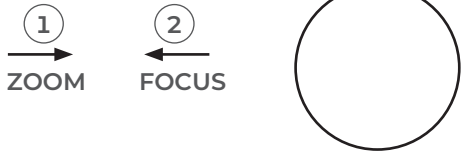


4.5 Pan / Tilt



4.5.1 Range

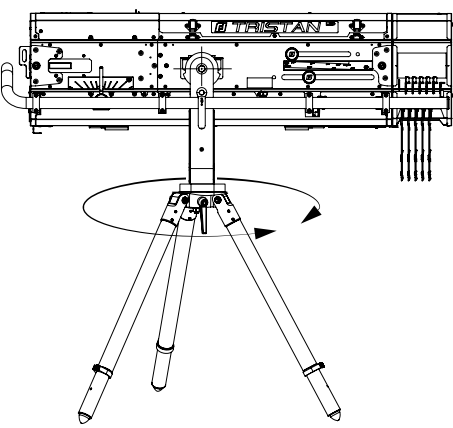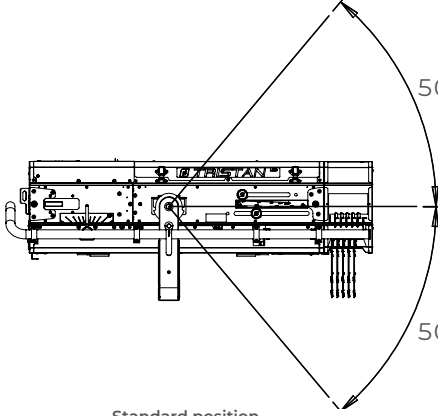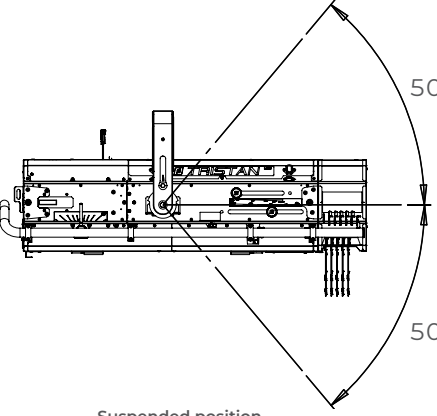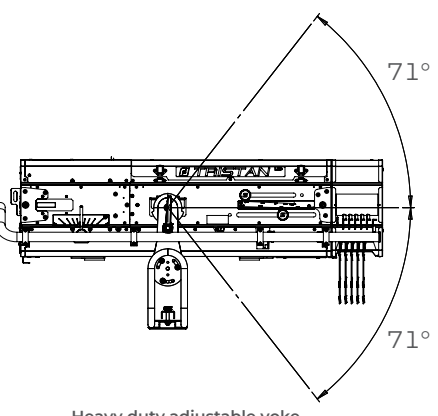Function	Range
PAN 	0 → 360°
TILT  Standard position  Suspended position  Heavy duty adjustable yoke (option)	

4.5.2 Control

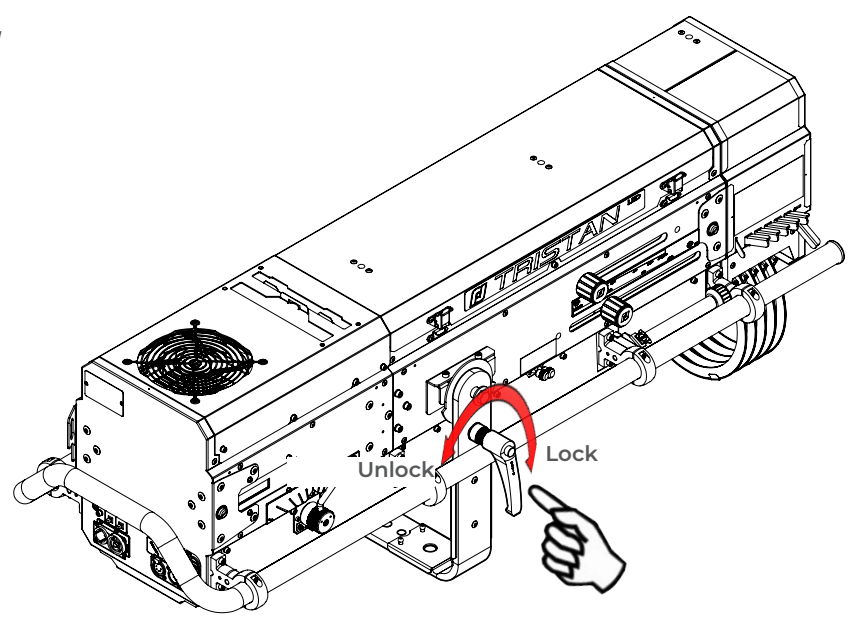

4.6 Iris

EN


4.6.1 Range



4.6.2 Control

→ selection in DATA MODE / PROTOCOL

Remotely with DMX / Art-Net / sACN / DUAL protocols - Mode 4

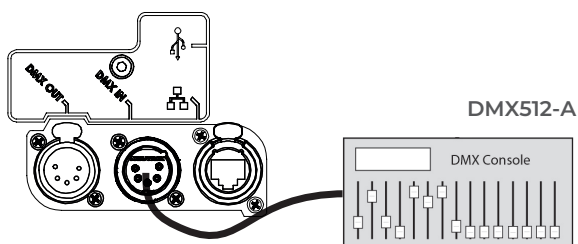

Locally via Standalone mode or DMX / Art-Net / sACN / DUAL protocols - Mode 1, 2 & 3



Default Home Values:
-Iris @0


Or

And


HTP mode (Highest Takes Precedence):
Light output is the highest value

→ selection in SETUP / DIMMER / PATCH

Local control - Back*

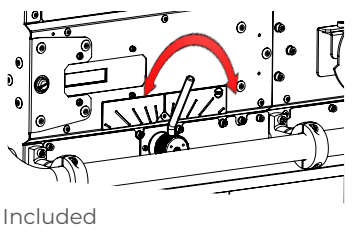

Local control - Front

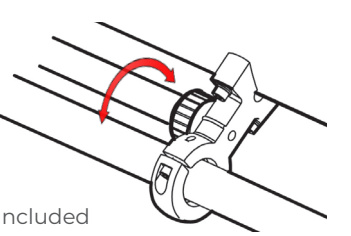


Or


Or

With remote controls

 P1FE-R1



P1FE-L1

 

Optional accessories



(*) By default

4.6.3.1 Iris mode



4 modes: Slow / Medium / Fast / None

Control:

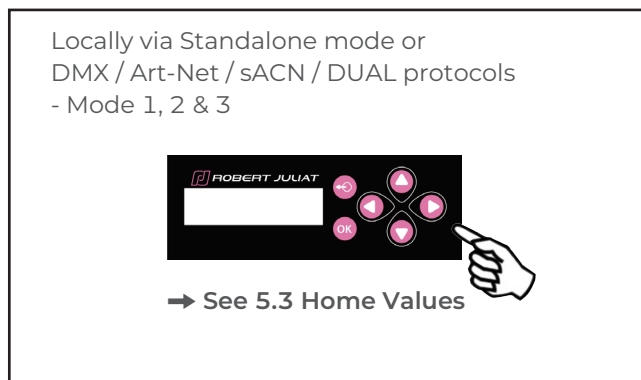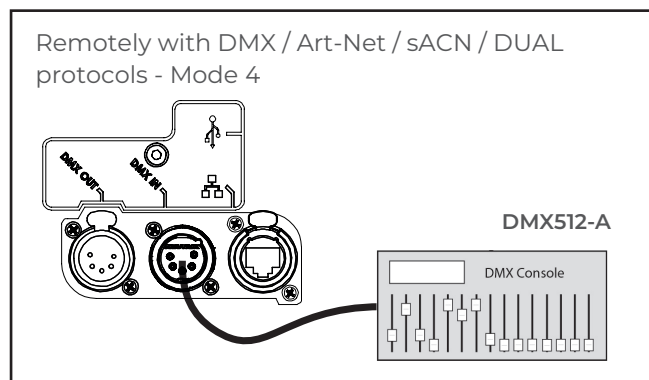

Or

4.6.3.2 Iris max

→ selection in SETUP / IRIS / RESET / IRIS MAX

Iris maximum opening value: 100% → 10%




4.6.3.3 Disable local

→ selection through SETUP / LOCAL POTENTIOMETER / IRIS / SETUP / DISABLE

"Control Mode" channel

IRIS LOCAL ON

IRIS LOCAL OFF

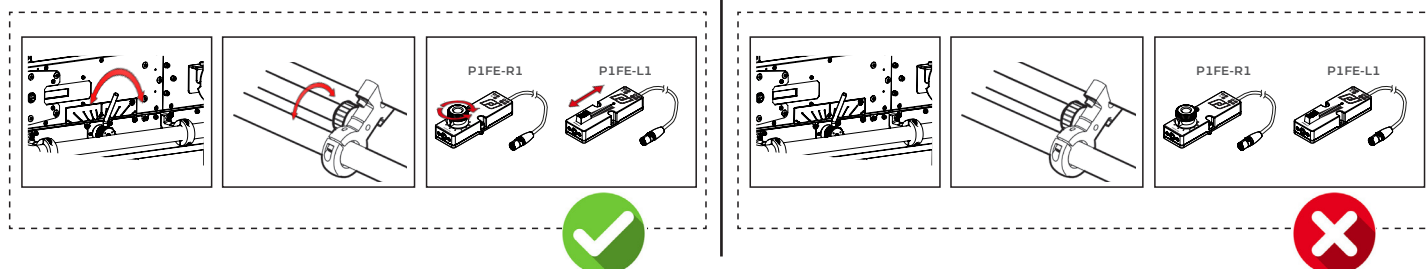

→ selection through DMX / Art-Net / sACN / DUAL protocols - Mode 2, 3 & 4

"Control Mode" channel

Or


→ selection in SETUP / IRIS / RESET

4.7 Gobo


4.7.1 Range

Type	Standard gobo - A size
Dimensions	Ø100 mm Ø72 mm Maximum image size • Metal • Glass
Installation	Cf. section: 3.4.4


4.7.2 Control

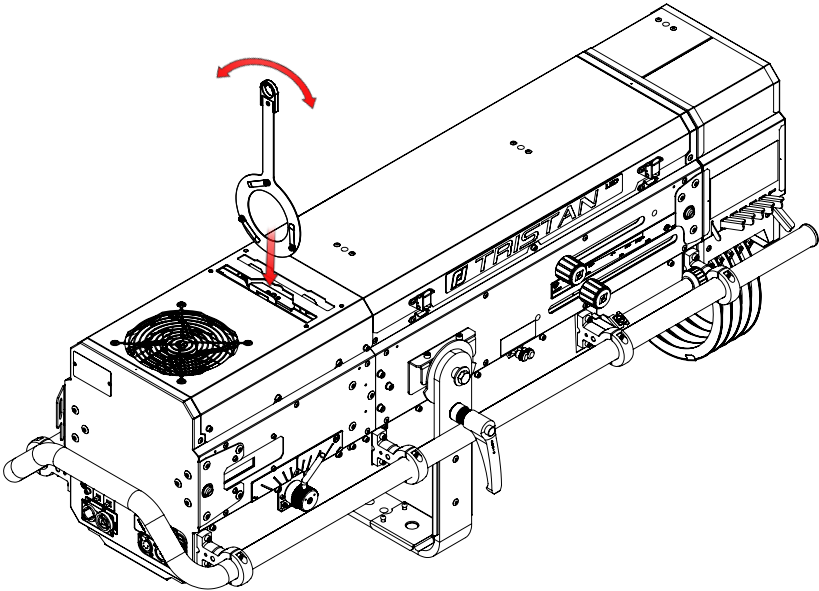


4.8.1 Range

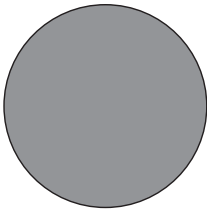Type	Coloured gel filter
Dimension	Ø210 mm 
Installation	Cf. section: 3.4.2 & section 3.4.3 Place dark colours towards the front end.


4.8.2 Control

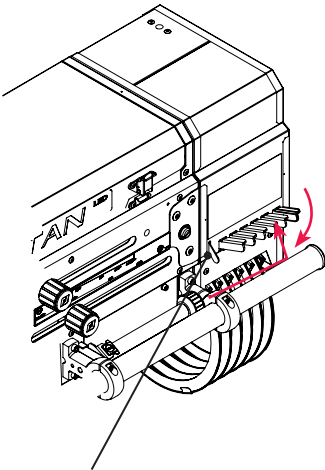

Unlock = release colours

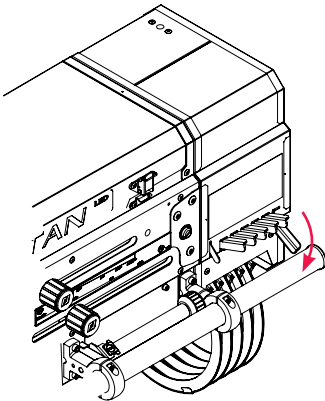

Colour engaged

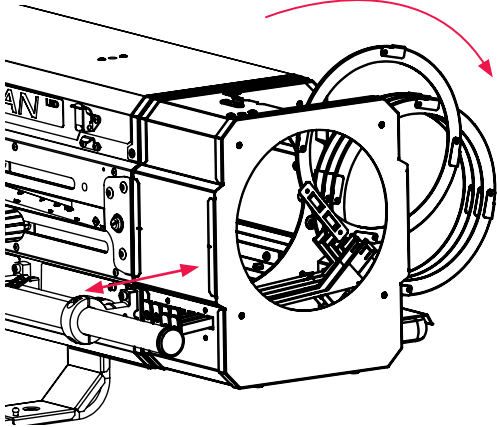


Push / Pull


4.9 Frost and correction filters



4.9.1 Range

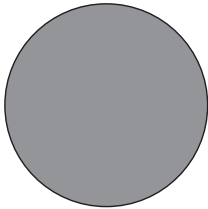
Type	Frost or Correction filter
Dimension	Ø97 mm 
Installation	Cf. section: 3.4.6

4.9.2 Control

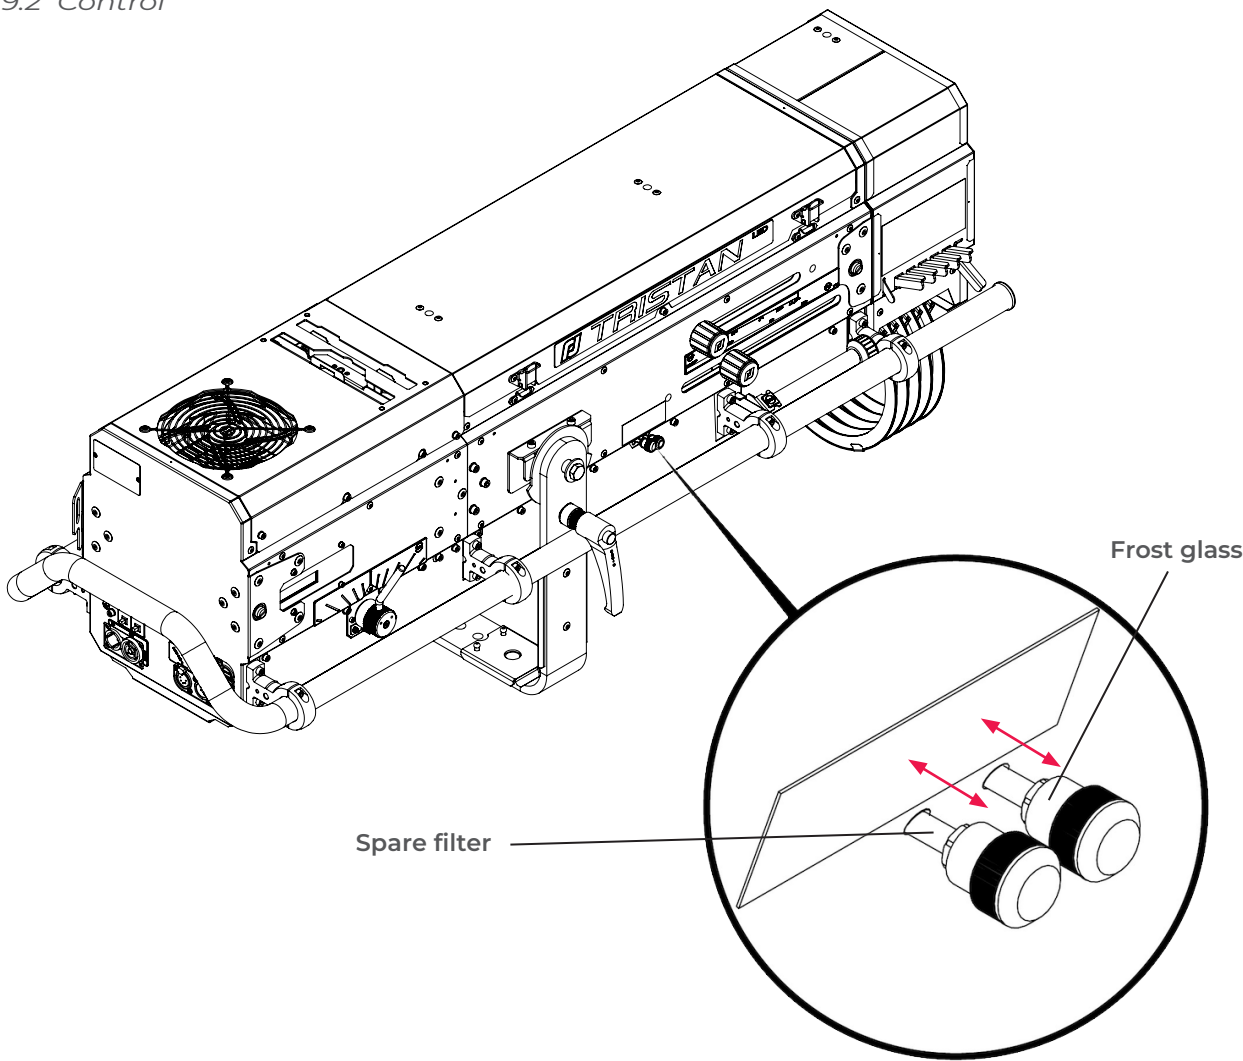

5.1 Local display and controls


5.1.1 Display

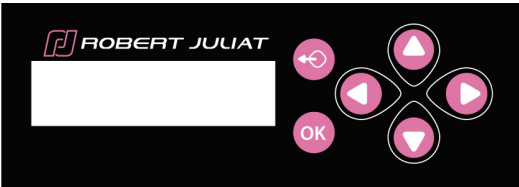



Function	
	Exit the current menu option and/or go back
	Enter the current menu option and/or valid
	Scroll through menus and/or Increase data value
	Scroll through menus and/or Decrease data value
	Scroll through menus and/or Increase data value
	Scroll through menus and/or Decrease data value

5.1.2 Home screen

Display	Mode	Description
DUAL : NO LINK HOLD NO DMX DIMMER: 00 : 6500K	Home	Main display (home screen)
Diagnostic Nothing to report	 x1 push	Diagnostics
Link status : NOK DHCP : OFF IP 192.168.000.013 MASK 255.255.255.000 GW 192.168.000.001	 x1 push	Network information
DUAL OFF RDM : ON Channel: 001 SACN Uni: 1 PROFILE 16B	 x2 push	DMX information
DIM 000% IRIS 000%	 x2 push	Followspot Mode

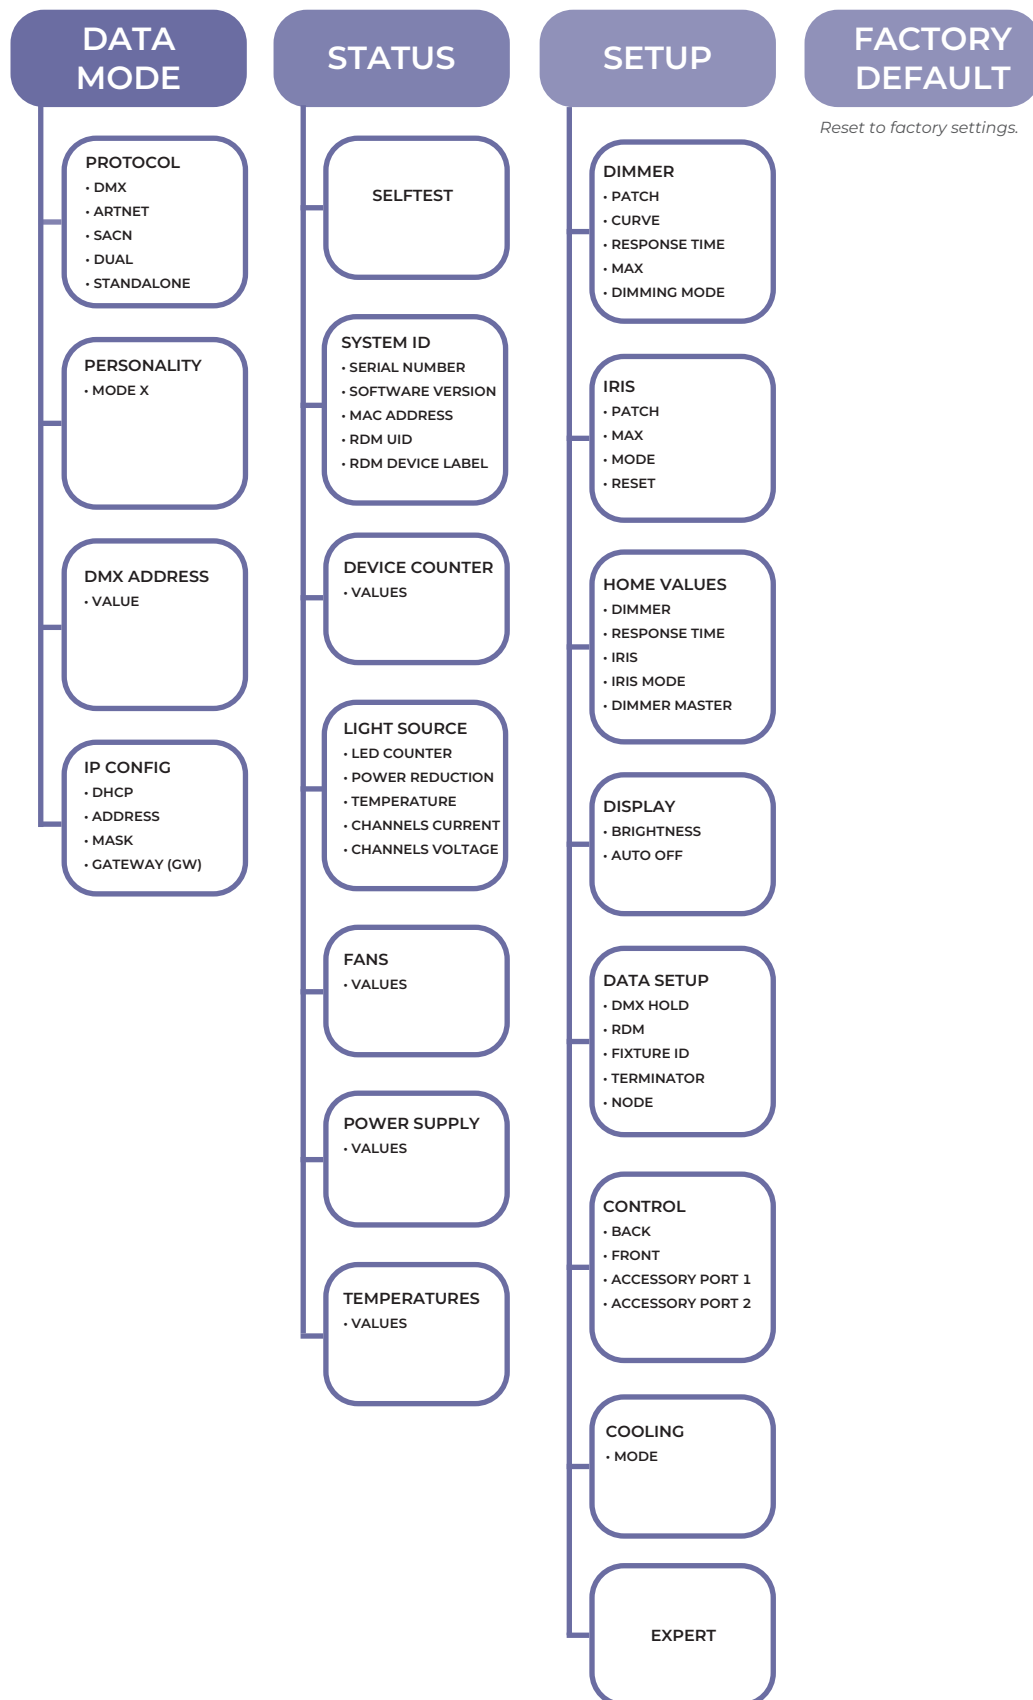

➔ Selection in menu: SETUP / DISPLAY

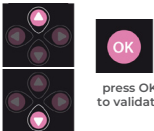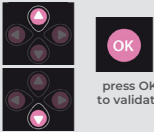
Display	Function	Description
SETUPDISPLAYBRIGHTNESS Brightness: 40% BightnessAuto-Off	Brightness	Adjust the intensity of the screen To change value, press buttons:  press OK to validate
SETUPDISPLAYAUTO OFF Always on Timer without warning	Auto-OFF	To keep the main display (home screen) always ON, select : Always ON Timer without warning Timer with warning  press OK to validate Main display turns OFF after 20 seconds

5.2 DMX512 - A remote control

5.2.1 Protocol


E1.11 – 2008, USITT DMX512-A

5.2.2 Configuration

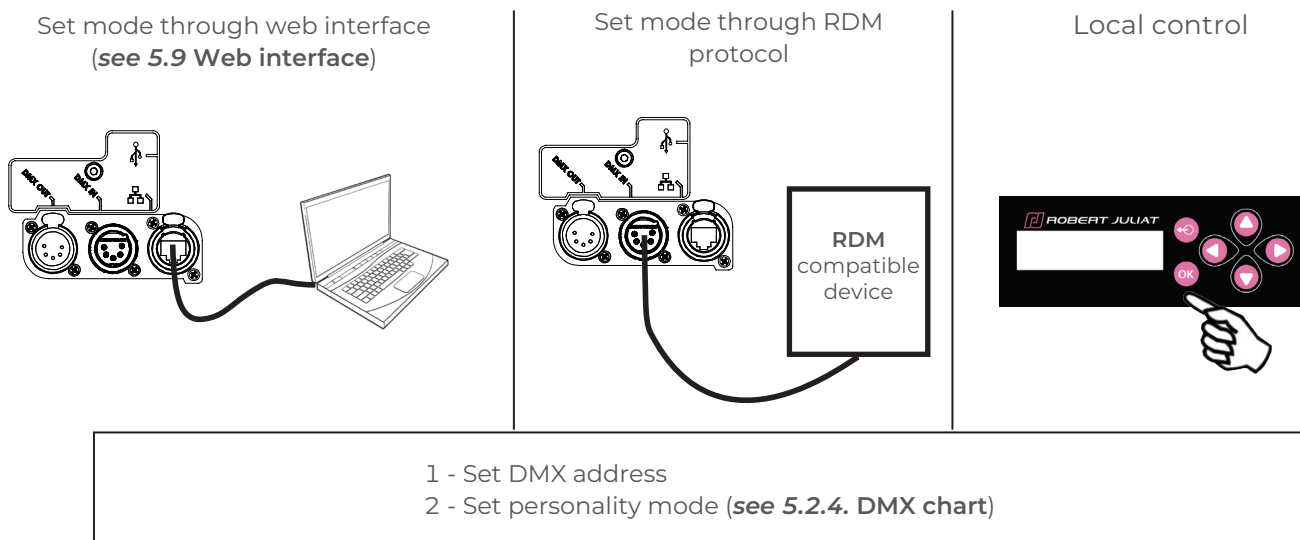


Caution:

Activate DMX in protocol mode beforehand.

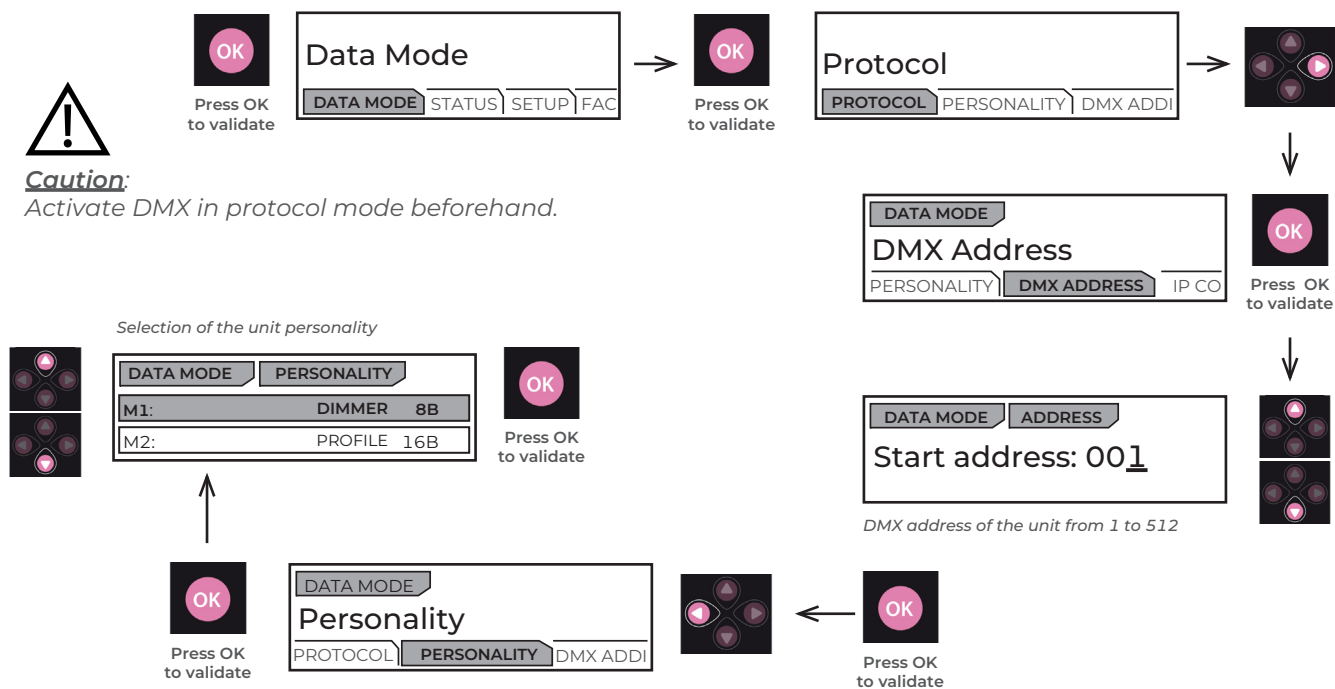

5.2.3.1 DMX Hold







→ Selection in **SETUP / Data Setup / DMX HOLD** menu

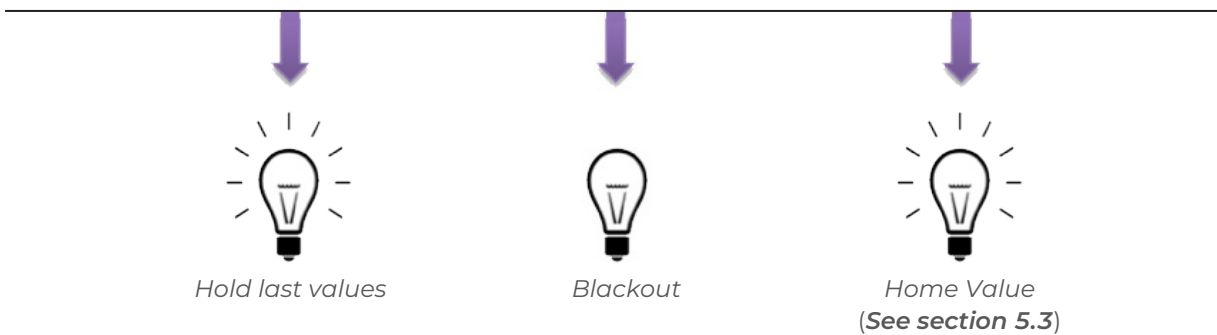

5.2.3.2 User ID

→ Selection in **SETUP / Data Setup / USER ID** menu

Each unit can be identified by a User ID number
– Once defined, the User ID is displayed on the Home screen.

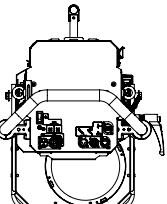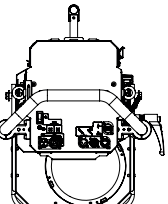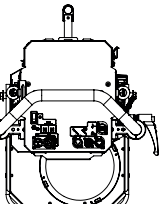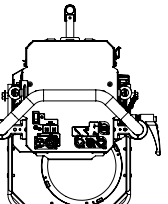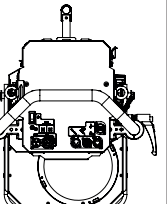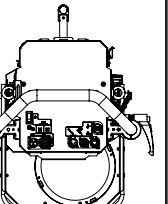Example: Installation with 6 units						
Home screen information	ID1 @ 101	ID2 @ 123	ID3 @ 145	ID4 @ 167	ID5 @ 189	ID6 @ 211
User ID	1	2	3	4	5	6
DMX address	101	123	145	167	189	211

5.2.4 DMX chart

DMX Channel	Mode 1: Dimmer 8B	Mode 2: Profile 16B	Mode 3: Followspot 16B	Mode 4: Followspot 16B IRIS
1	Dimmer	Dimmer	Dimmer	Dimmer
2		Dimmer fine	Dimmer fine	Dimmer fine
3		Strobe duration	Master	Master
4		Strobe speed	Master fine	Master fine
5		Response time	Strobe duration	Strobe duration
6		Control mode	Strobe speed	Strobe speed
7			Response time	Response time
8			Control mode	Control mode
9				Iris
10				Iris mode

5.2.5 DMX ranges

5.2.5.1 Strobe duration

Range min	Range max	Function
0	0	Strobe OFF
1	255	Strobe ON - 1 ms ➔ 20 ms

5.2.5.2 Strobe speed

Range min	Range max	Function
0	255	Frequency: 0,1 Hz ➔ 10 Hz

5.2.5.3 Response time

Range min	Range max	Function
0	0	470 ms (medium)
1	255	Response time: 0 s ➔ 4 s

5.2.5.4 Control mode*

Gamme min	Gamme max	Fonction
0	0	-
1	10	RDM OFF
11	20	RDM ON
21	30	Fixture Reset
31	40	Dimmer Curve Linear
41	50	Dimmer Curve Square
51	60	Not used
61	70	Not used
71	80	Not used
81	90	Not used
91	100	Not used
101	110	Cooling mode: Silent
111	120	Cooling mode: Normal
121	130	Cooling mode: Full power
161	170	Iris local off
171	180	Iris local on
181	190	Motor reset
131	255	Not used

(*) Function activated after 5 seconds - needs to go back to zero to activate second function.

5.2.5.5 Iris

Range min	Range max	Function
0	0	Iris open
0	255	Open → Closed
255	255	Iris closed

5.2.5.6 Iris mode

Range min	Range max	Function
0	9	Fast
10	19	Medium
20	29	Slow
30	39	None
40	255	Not used (= Fast)

5.2.6.1 Protocol

ANSI E1.20 – 2010 / ANSI E1.37 - 1

For more information about RDM protocol: <http://www.rdmprotocol.org/>

5.2.6.2 Functions

PID	Description	Standard	Get	Set	Queued_Message	Ack_Timer	VERSION 4.00
Network Management							
00 01	DISCOVERY_UNIQUE_BRANCH	E1.20					✓
00 02	DISCOVERY_MUTE	E1.20		✓			✓
00 03	DISCOVERY_UNMUTE	E1.20		✓			✓
00 15	COMMUNICATION_STATUS	E1.20	✓	✓			✓
Status Collection							
00 20	QUEUED_MESSAGE	E1.20	✓				✓
00 30	STATUS_MESSAGES	E1.20	✓				✓
00 31	STATUS_ID_DESCRIPTION	E1.20	✓				✓
00 32	CLEAR_STATUS_ID	E1.20		✓			✓
00 33	QUEUED_MESSAGE_SENSOR_SUBSCRIBE	E1.20-2023	✓	✓			
RDM Information							
00 50	SUPPORTED_PARAMETERS	E1.20	✓				✓
00 51	PARAMETER_DESCRIPTION	E1.20	✓				✓
Product Information							
00 60	DEVICE_INFO	E1.20	✓			✓	✓
00 70	PRODUCT_DETAIL_ID_LIST	E1.20	✓				✓
00 80	DEVICE_MODEL_DESCRIPTION	E1.20	✓				✓
00 81	MANUFACTURER_LABEL	E1.20	✓				✓
00 82	DEVICE_LABEL	E1.20	✓	✓	✓	✓	✓
00 90	FACTORY_DEFAULTS	E1.20	✓	✓		✓	✓
00 C0	SOFTWARE_VERSION_LABEL	E1.20	✓			✓	✓
00 C2	BOOT_SOFTWARE_VERSION_LABEL	E1.20	✓				✓
DMX512 Setup							
00 E0	DMX512_PERSONALITY	E1.20	✓	✓	✓	✓	✓
00 E1	DMX512_PERSONALITY_DESCRIPTION	E1.20	✓				✓
00 F0	DMX512_STARTING_ADDRESS	E1.20	✓	✓	✓	✓	✓
01 20	SLOT_INFO	E1.20	✓				✓
01 21	SLOT_DESCRIPTION	E1.20	✓				✓
Sensors							
02 00	SENSOR_DEFINITION	E1.20	✓				✓
02 01	SENSOR_VALUE	E1.20	✓				✓
Dimmer Settings							
03 40	DIMMER_INFO	E1.37-1	✓				✓
03 42	MAXIMUM_LEVEL	E1.37-1	✓	✓	✓	✓	✓
03 43	CURVE	E1.37-1	✓	✓	✓	✓	✓
03 44	CURVE_DESCRIPTION	E1.37-1	✓				✓
03 45	OUTPUT_RESPONSE_TIME	E1.37-1	✓	✓	✓	✓	✓
03 46	OUTPUT_RESPONSE_TIME_DESCRIPTION	E1.37-1	✓				✓
03 47	MODULATION_FREQUENCY	E1.37-1	✓	✓	✓	✓	✓
03 48	MODULATION_FREQUENCY_DESCRIPTION	E1.37-1	✓				✓
Power / Lamp Settings							
04 00	DEVICE_HOURS	E1.20	✓				✓
04 01	LAMP_HOURS	E1.20	✓	✓			✓
Display Settings							
05 01	DISPLAY_LEVEL	E1.20	✓	✓	✓	✓	✓

PID	Description	Standard	Get	Set	Queued_Message	Ack_Timer	SULLY 4.00
Control							
10 00	IDENTIFY_DEVICE	E1.20	✓	✓	✓		✓
10 01	RESET_DEVICE	E1.20		✓		✓	✓
10 20	PERFORM_SELFTEST	E1.20	✓	✓	✓	✓	✓
10 21	SELF_TEST_DESCRIPTION	E1.20					✓
RDMnet Management							
07 00	LIST_INTERFACES	E1.37-2	✓				✓
07 01	INTERFACE_LABEL	E1.37-2	✓				✓
07 02	INTERFACE_HARDWARE_ADRESS_TYPE1	E1.37-2	✓				✓
07 03	IPV4_DHCP_MODE	E1.37-2	✓	✓		✓	✓
07 05	IPV4_CURRENT_ADDRESS	E1.37-2	✓			✓	✓
07 06	IPV4_STATIC_ADDRESS	E1.37-2	✓	✓			✓
07 09	INTERFACE_APPLY_CONFIGURATION	E1.37-2		✓			✓
07 0A	IPV4_DEFAULT_ROUTE	E1.37-2	✓	✓		✓	✓
07 0B	DNS_IPV4_NAME_SERVER	E1.37-2	✓	✓		✓	✓
PID Manufacturer							
85 58	SELFTEST_RESULT	E1.20	✓				✓
85 59	CURRENT_IP_ADDRESS	E1.20	✓			✓	✓
85 5A	CURRENT_NETMASK	E1.20	✓			✓	✓
85 5B	CURRENT_DRIVER_STATUS	E1.20	✓			✓	✓
85 5C	CUSTOM_RESPONSE_TIME_DESCRIPTION	E1.20	✓				✓
85 5D	CUSTOM_RESPONSE_TIME_VALUE	E1.20	✓	✓	✓	✓	✓
85 60	DATA_MODE_DESCRIPTION	E1.20	✓				✓
85 61	DATA_MODE_VALUE	E1.20	✓	✓	✓	✓	✓
85 62	STANDALONE_VALUE_DESCRIPTION	E1.20	✓				✓
85 63	STANDALONE_VALUE	E1.20	✓	✓	✓	✓	✓
85 64	SACN_UNIVERSE_VALUE_DESCRIPTION	E1.20	✓				✓
85 65	SACN_UNIVERSE_VALUE	E1.20	✓	✓	✓	✓	✓
85 66	ARTNET_UNIVERSE_VALUE_DESCRIPTION	E1.20	✓				✓
85 67	ARTNET_UNIVERSE_VALUE	E1.20	✓	✓	✓	✓	✓
85 68	SERIAL_DESCRIPTION	E1.20	✓				✓
85 69	SERIAL	E1.20	✓	✓	✓		✓
85 6A	DMX_HOLD_DESCRIPTION	E1.20	✓				✓
85 6B	DMX_HOLD	E1.20	✓	✓	✓	✓	✓
85 6C	COMMAND_LOCK_DESCRIPTION	E1.20	✓				✓
85 6D	COMMAND_LOCK_VALUE	E1.20	✓	✓	✓	✓	✓
85 6E	DRIVER_CALIBRATE_DESCRIPTION	E1.20	✓				✓
85 6F	DRIVER_CALIBRATE_VALUE	E1.20	✓	✓	✓	✓	✓
85 70	NODE_DESCRIPTION	E1.20	✓				✓
85 71	NODE_VALUE	E1.20	✓	✓	✓	✓	✓
85 72	TERMINATOR_DESCRIPTION	E1.20	✓				✓
85 73	TERMINATOR	E1.20	✓	✓	✓	✓	✓
85 74	DMX_ERROR_COUNTER_DESCRIPTION	E1.20	✓				✓
85 75	DMX_ERROR_COUNTER	E1.20	✓	✓	✓	✓	✓

“Home values” represent a selection of values manually entered into the device via the keypad to produce a defined state.

These Home values can be set in the following modes:

Parameters / control modes:	DMX - Dimmer mode (mode 1)	DMX - Profile mode (mode 2)	Followspot 16B	Followspot 16B Iris	Standalone*
Dimmer	DMX	DMX	DMX	DMX	HOME VALUE
Strobe duration	NA	DMX	DMX	DMX	NA
Strobe speed	NA	DMX	DMX	DMX	NA
Responsive time	HOME VALUE	DMX	DMX	DMX	HOME VALUE
Iris	HOME VALUE	HOME VALUE	HOME VALUE	DMX	HOME VALUE
Iris Mode	HOME VALUE	HOME VALUE	HOME VALUE	DMX	HOME VALUE
Dimmer Master	HOME VALUE	HOME VALUE	DMX	DMX	HOME VALUE

If the function is not controlled by DMX, the Home value is automatically activated.



HTP mode between DMX, local and HOME VALUES

(*) Defines a standalone operating mode in the following cases:

- As default values when used without data Data mode → Protocol → Standalone
- As reference values following a data signal loss. Set up → Data set up → DMX hold → Standalone

5.4 Network

Our network stack can handle several flows of protocol at the same time.

Protocol always available:

- Web page to set up parameters - *See section 5.4.4*
- LLRP (Low Level Recovery Protocol) for IP network configuration - *See section 5.4.5*

A selection of Protocols dedicated to lighting:

- Art-Net V4 - *See section 5.4.1*
- sACN - *See section 5.4.2*
- Dual: Sacn + Art-RDM (DMX512 data signal + RDM) - *See section 5.4.3*

From July 2024 the Robert Juliat equipment based on RJ LED2 platform is configured as follows:

- DHCP (**D**ynamic **H**ost **C**onfiguration **P**rotocol - **RFC1531**) ON
→ <https://www.rfc-editor.org/rfc/rfc1531>
- Zeroconf (**Z**ero-**c**onfiguration **n**etworking – **IPv4LL/APIPA – RFC3927**) ON
→ <https://www.rfc-editor.org/rfc/rfc3927>

IP Addressing of Parameters

Default:

- At startup, the device's IP address is set to 000.000.000.000 with a subnet mask of 000.000.000.000
- After connecting to the network, the device awaits the assignment of an IP address and subnet mask by the DHCP server.
- If there is no DHCP server, a unique IP address and subnet mask are automatically assigned.
IP : 169.254.XXX.XXX Mask : 255.255.0.0

Most personal computers are configured with DHCP and Zeroconf enabled, so the IP address defaults to 169.254.X.X with a subnet mask of 255.255.0.0.

When connected to a Robert Juliat device, since the IP address/mask range are in the same class, network communication works seamlessly.

This configuration was chosen to make it easier for non-IT technicians.

Static IP;

It's possible to configure a static IP address, but be sure to select a unique IP address with the correct subnet mask.

Configuration can be done via the Web Page, RDM, LLRP, Art-Net, or locally.

Default IP Address:

When DHCP mode is OFF and no static IP address has been selected, the device will default to a Class A IP address of 2.XXX.XXX.XXX with a subnet mask of 255.0.0.0.


This address can be found on a label near the ID plate or by pressing the right arrow on the local control.

Default Settings:

DHCP = OFF

Address = 2.XXX.XXX.XXX

Mask = 255.0.0.0

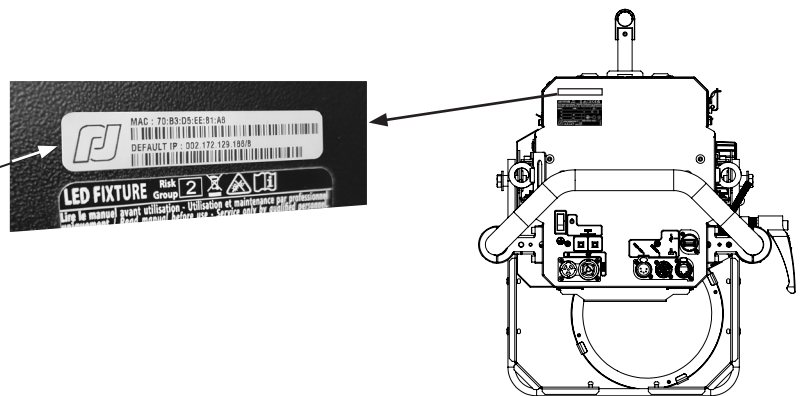

Changing the Controlling Computer's IP Address:

- The IP address and subnet mask of both the fixture and the computer must be on the same network class.
- The computer's IP address must be different.
- Refer to your operating system's support to modify IPv4 settings:

Change your IP address on Windows

➔ <https://support.microsoft.com/en-us/windows/change-tcp-ip-settings-bd0a07af-15f5-cd6a-363f-ca2b6f391ace>

Change your IP address on Mac

➔ <https://support.apple.com/en-ae/guide/mac-help/mh14129/mac>

Example: Using the fixture's default IP address

1 - Computer IP address: 2.2.2.2

2 - Computer subnet mask: 255.0.0.0


5.4.1.1 Protocol

Artistic Licence Art-Net v4.


For more information about Art-Net protocol: <http://art-net.org.uk/>

5.4.1.2 Configuration


Set mode through Web interface
(see 5.9 Web interface)

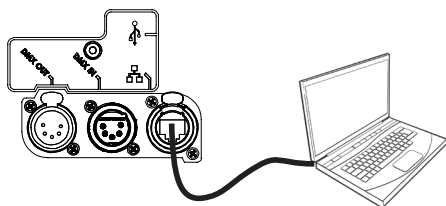

Set mode through RDM
protocol

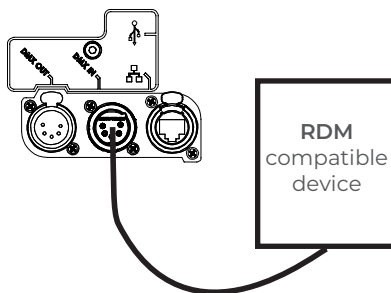


Local control

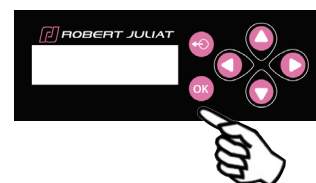

- 1 - If necessary, change IP settings
- 2 - Set Art-Net Universe
- 3 - Set DMX address
- 4 - Set personality mode (see 5.2.4. DMX chart)

**Caution:**

(*) Activate Art-Net in protocol mode beforehand.

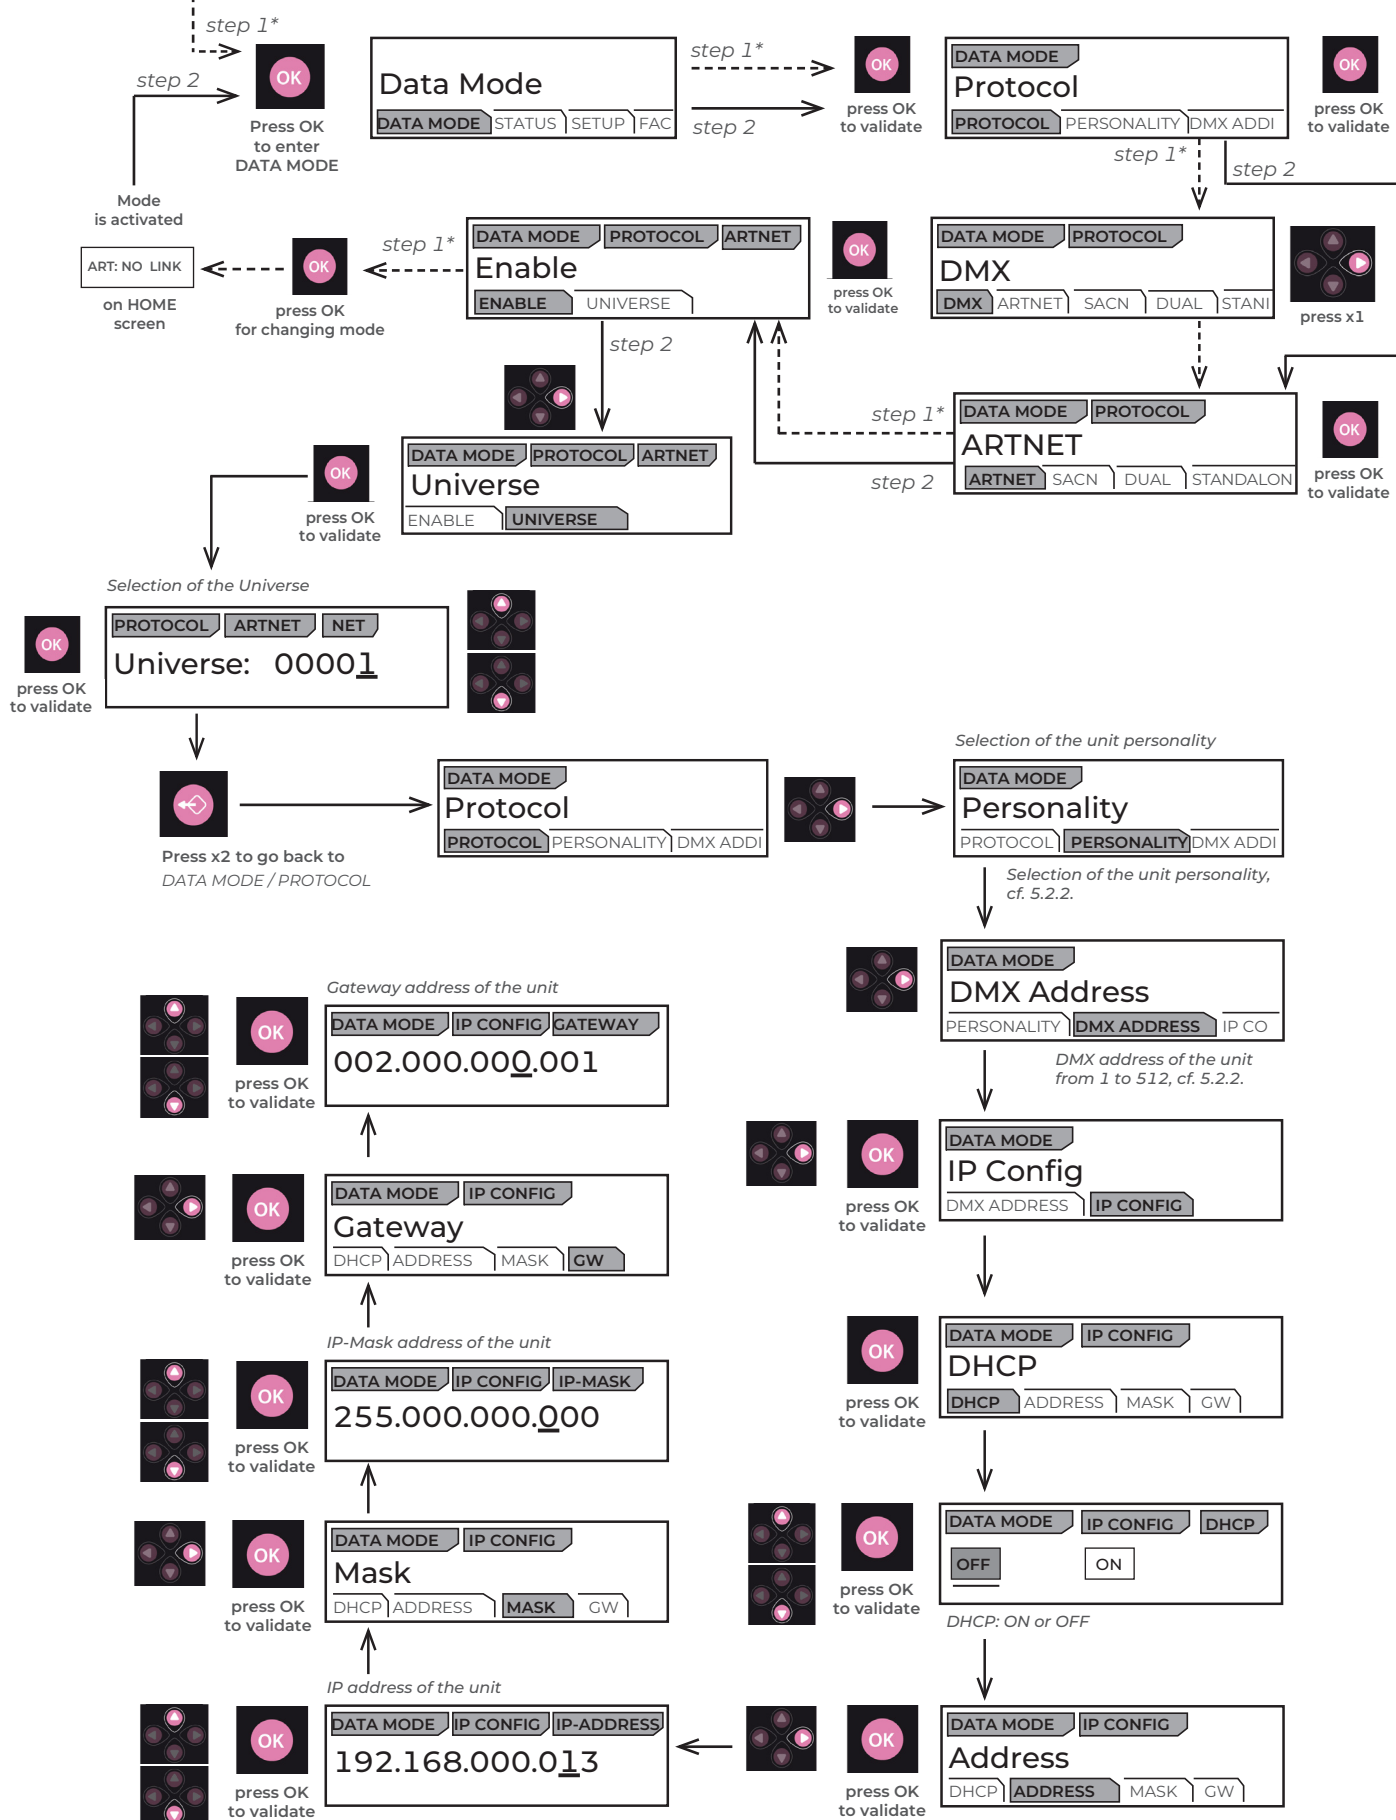


5.4.2.1 Protocol


ANSI E1.31 – 2009 sACN (Streaming-ACN)

5.4.2.2 Configuration


Set mode through Web interface
(see 5.9 Web interface)

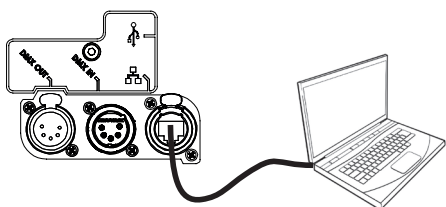

Set through local control

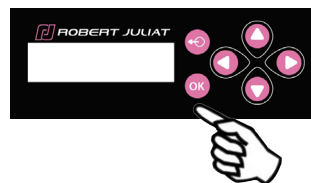

- 1 - If necessary, change IP settings
- 2 - Set sACN universe
- 3 - Set DMX address
- 4 - Set personality mode (see 5.2.4. DMX chart)

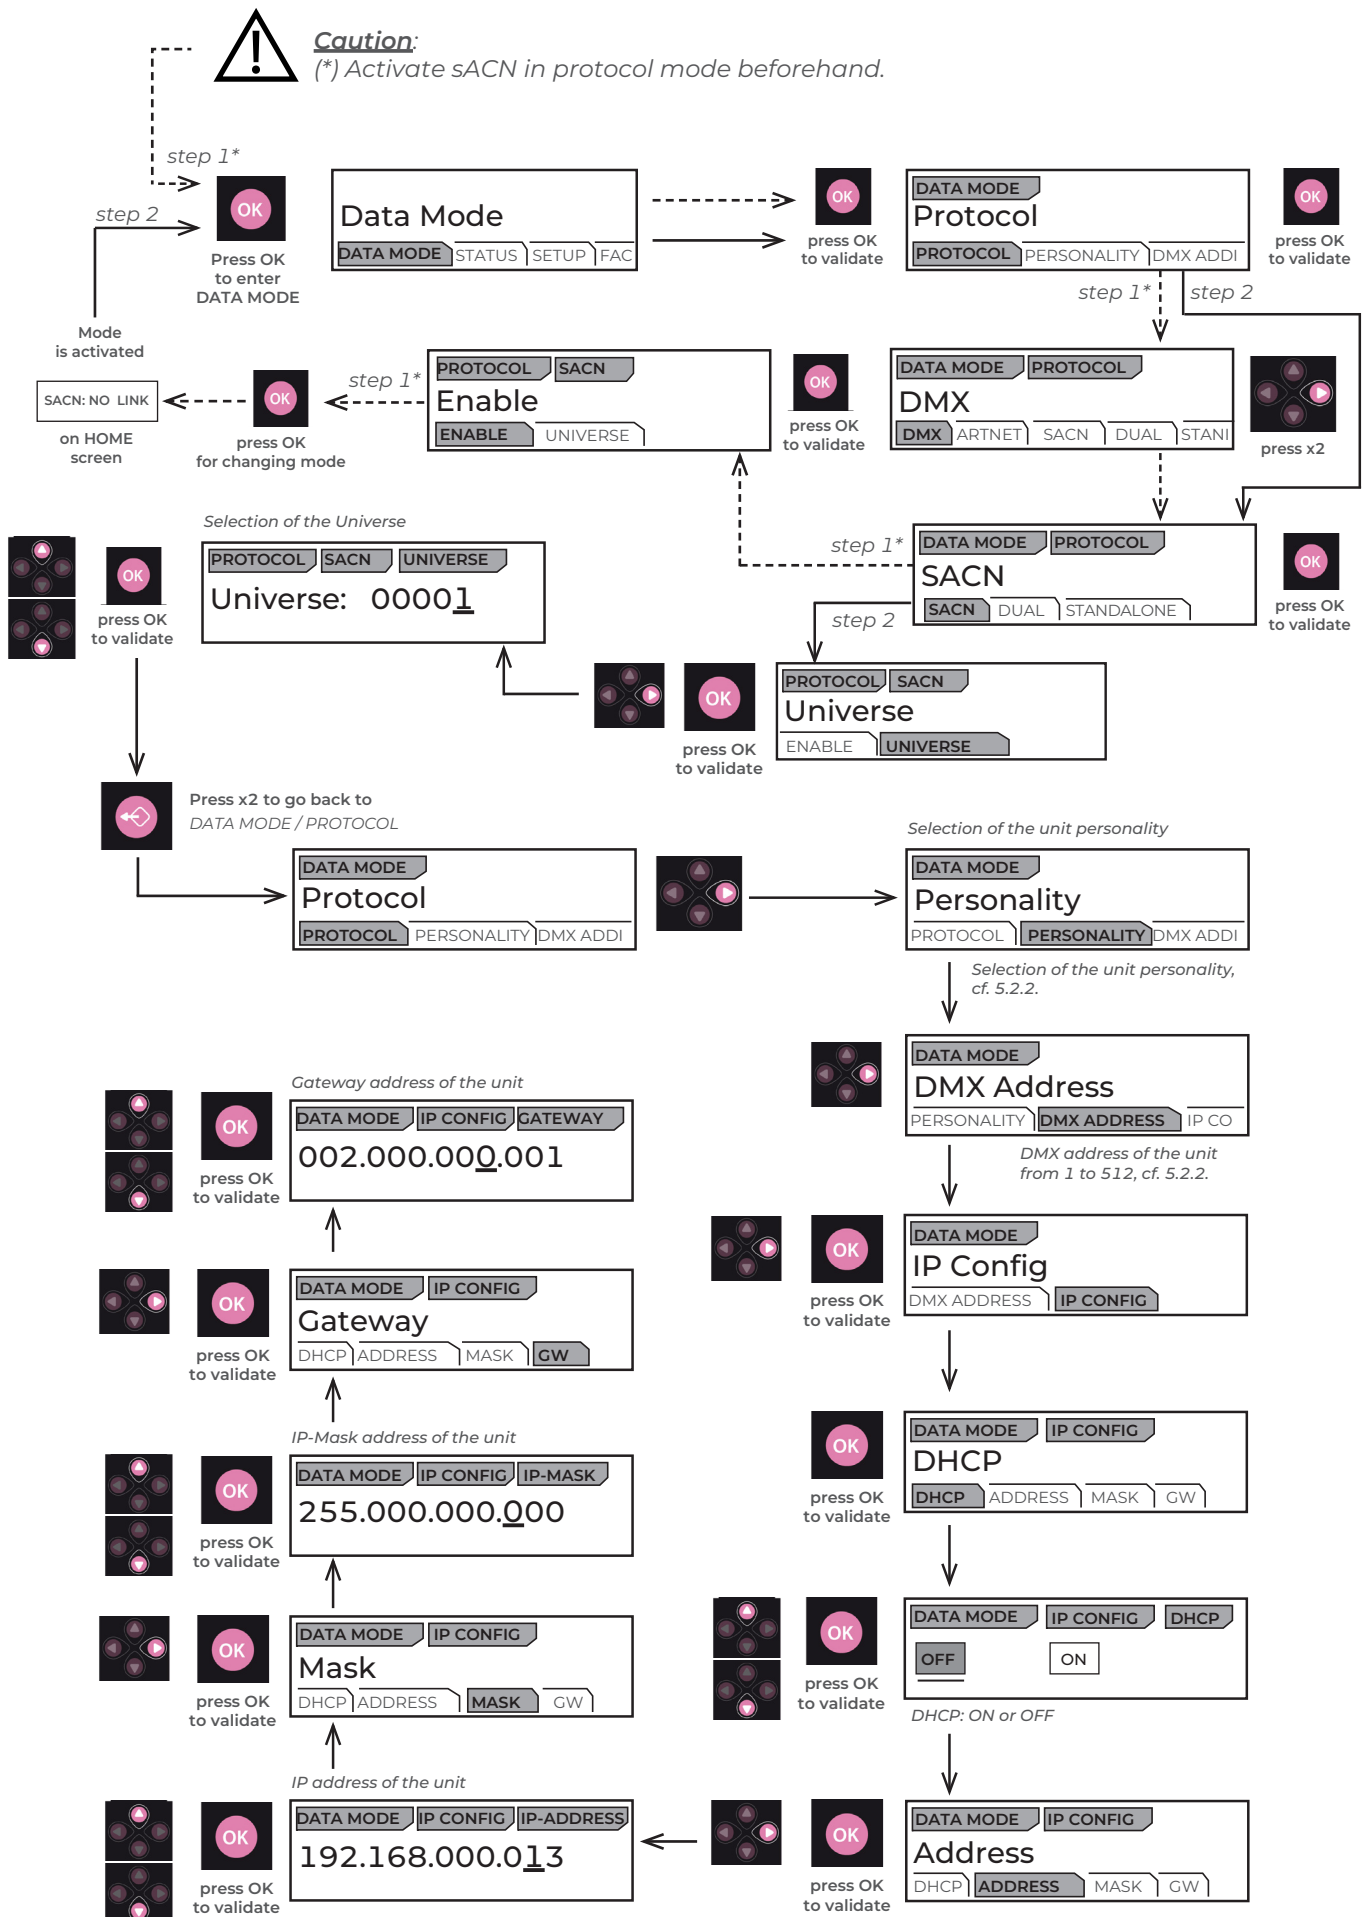

5.4.3.1 Protocol


Dual Mode: Available only on an Ethernet network

It allows to send a DMX 512 signal through a sACN data stream and at the same time to use an Artnet/ArtRdm data stream to control, set and monitor the equipment via RDM.


This mode can be set by Web interface or the local control screen.

5.4.3.2 Configuration


Set mode through Web interface
(see 5.9 Web interface)

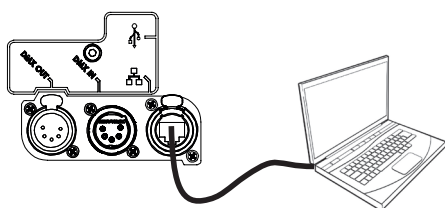


Set through local control

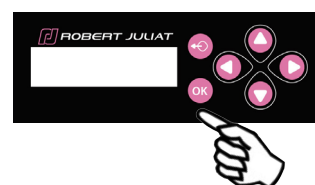

- 1 - If necessary, change IP settings
- 2 - Set DUAL universe
- 3 - Set DMX address
- 4 - Set personality mode (see 5.2.4. DMX chart)

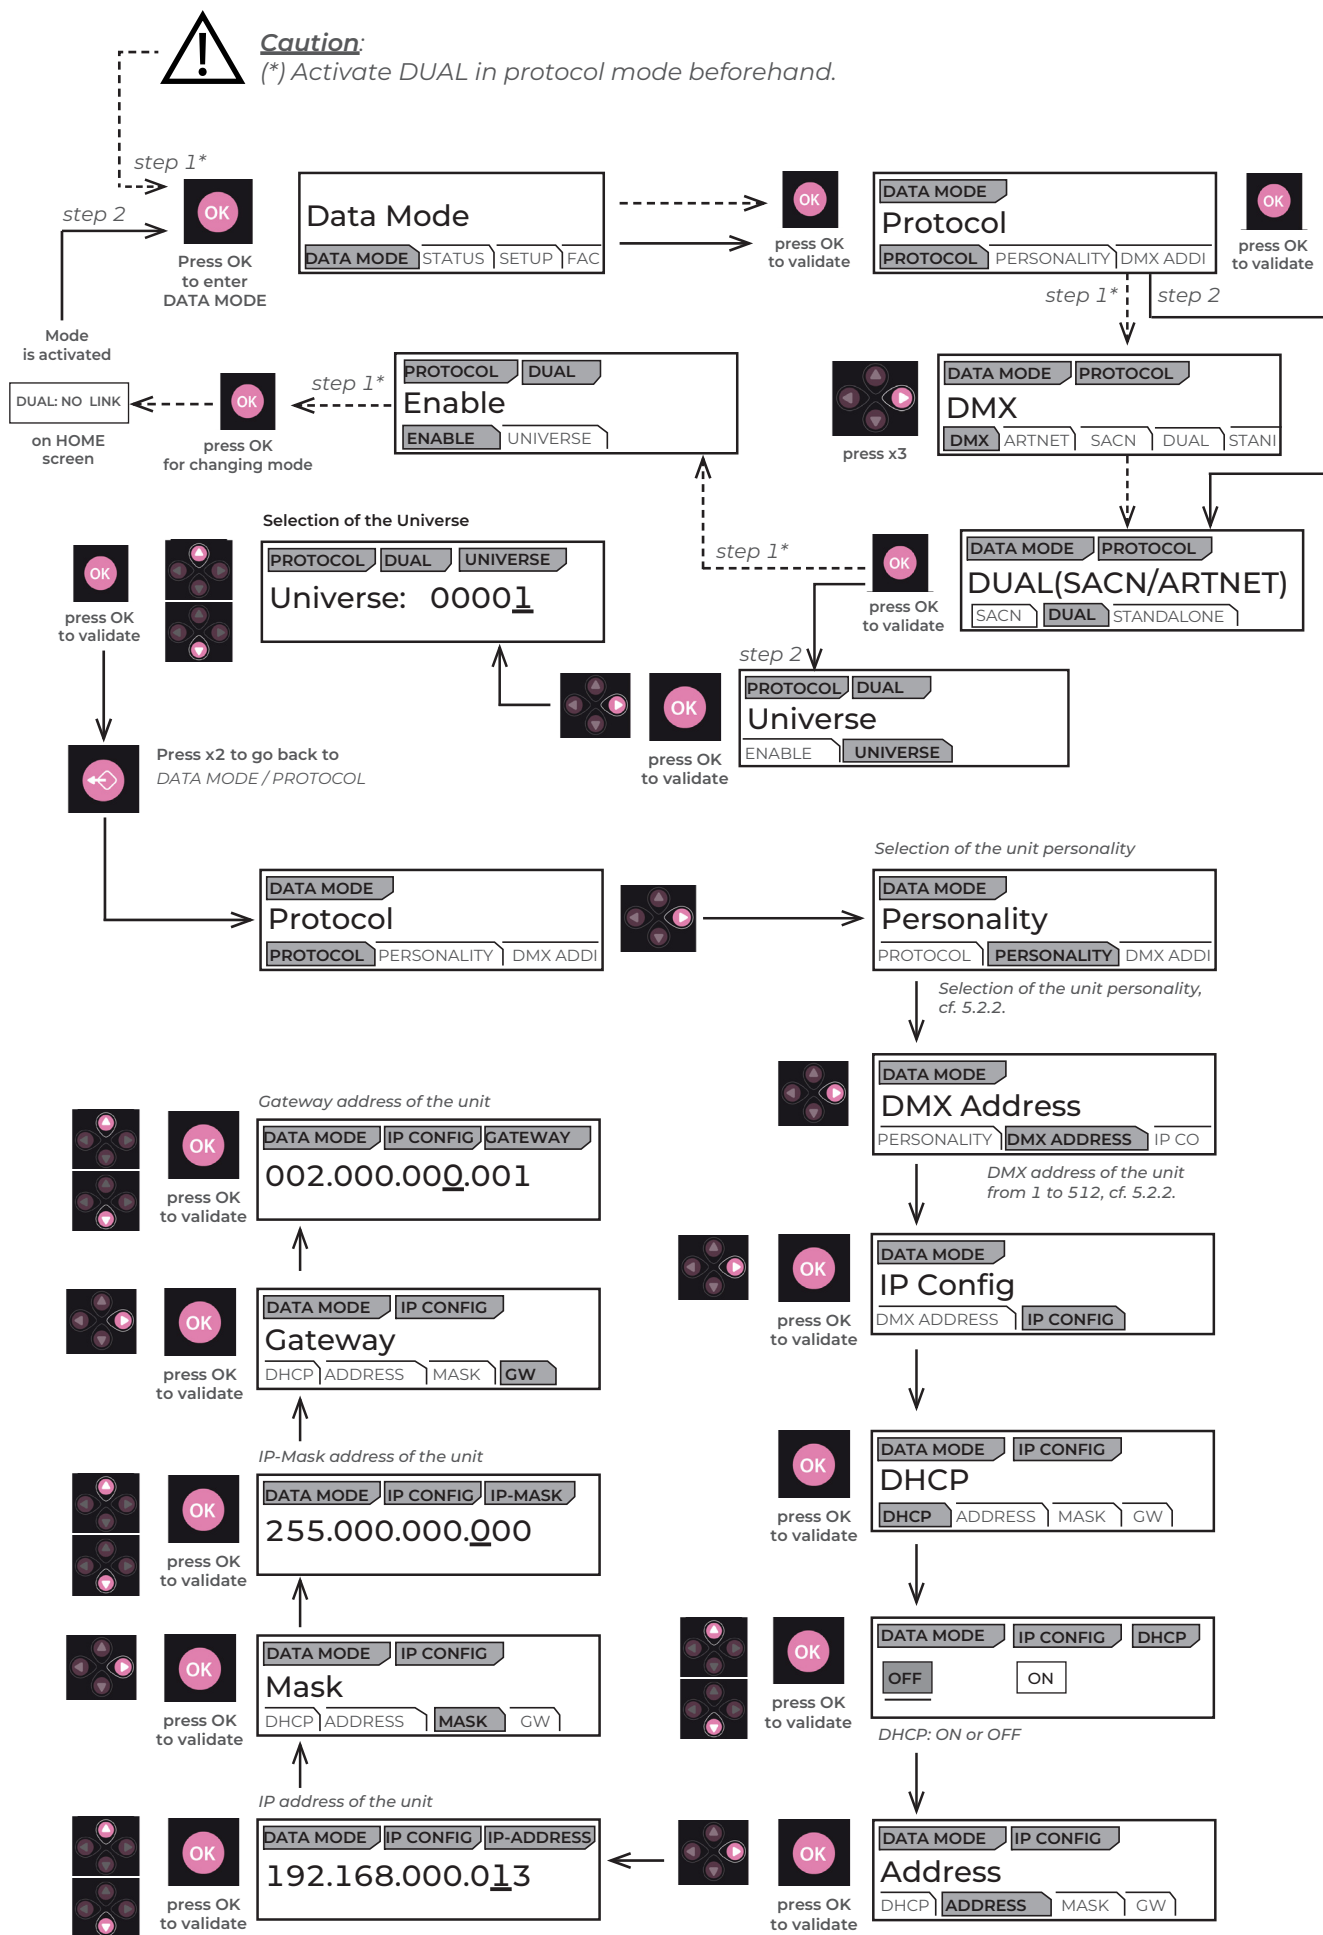

5.4.4.1 Control

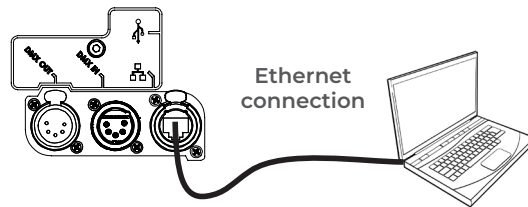


The fixture must be connected to a compatible network or directly linked to a computer with an RJ45 Ethernet cable.

The fixture's IP address: *see section 5.4. Network*


5.4.4.2 Connection to the Web interface




- 1 - Open a web browser (Microsoft Edge, Firefox, Apple Safari...)
- 2 - Enter the fixture's IP address in the browser's address bar
 - "00X" is read as "X".
 - Never type a zero (0) before the numbers XX or X (*see 5.4.4*)
- 3 - The HOME page will appear, and all settings can now be viewed and modified.

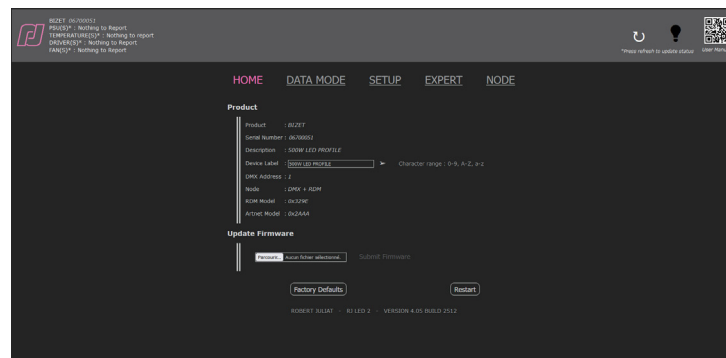


HOME Page

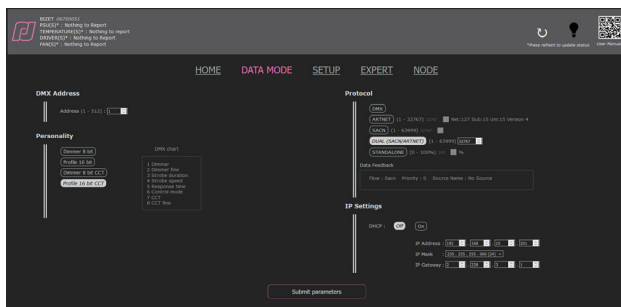


DATA MODE Page

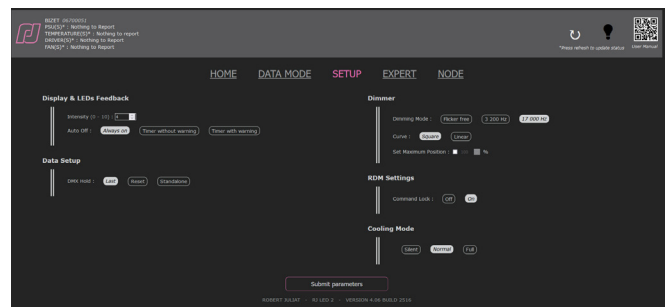

SETUP Page

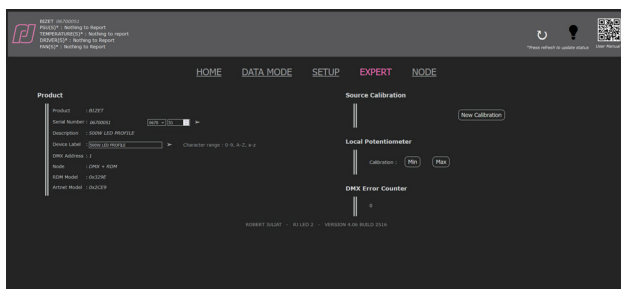

EXPERT Page, password-protected (1280).

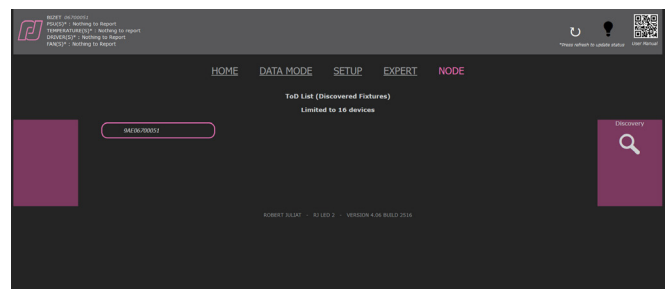

NODE Page

UID* list of devices detected by RDM on the DMX OUT link;
the first UID is the fixture.

(*) UID : RDM Unique Identifier

5.4.5 LLRP (Low-Level Reader Protocol)

LLRP is a multicast protocol that facilitates basic IP configuration. It is part of the ESTA E1.33 RDMnet standard.

LLRP can be used for the initial configuration of networked equipment. It provides a low-level mechanism for discovering and configuring the network parameters of devices, including IP settings and basic RDMnet configuration settings.

LLRP Targets expose these parameters for configuration and respond to discovery requests from LLRP Managers. Once an LLRP Manager discovers one or more LLRP Targets, it can use LLRP to send RDM commands to retrieve or modify these parameters.

A SOLUTION FOR INCORRECT OR UNKNOWN IP CONFIGURATION

Network connectivity issues are often caused by misconfigured network addresses, with improperly configured subnet masks being the most common problem.

LLRP uses two multicast IP addresses, enabling communication even when all other network communication has failed.


Since multicast addresses are unaffected by a misconfigured subnet mask, LLRP provides an efficient and reliable solution to recover from network misconfiguration.

In summary, LLRP simplifies the process of identifying and configuring the IP addressing of LLRP-compatible devices on your network.

All Robert Juliat equipment based on the RJ LED2 platform includes LLRP functionality.

Two LLRP Manager software tools are available for free:

- DMXworkshop by Wayne Howell from Singularity (UK): <https://singularity-uk.com/product/dmx-workshop/>

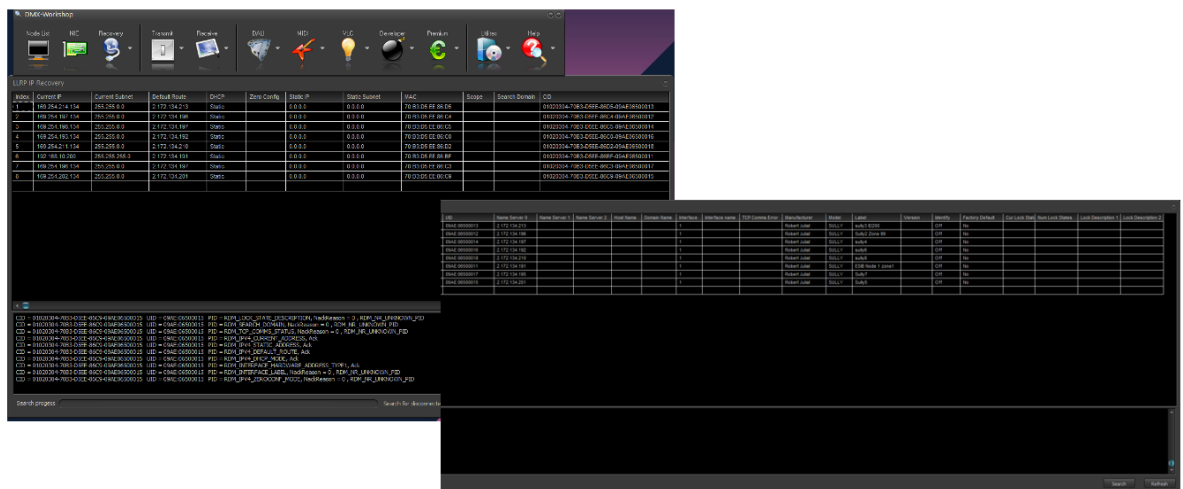

- CLU/Netron from Obsidian : <https://obsidiancontrol.com/netron-clu>


clu									
NETRON									
	Device Type	Device Name	IP Address	Subnet	Firmware	Web	Manufacturer	Identify	
●	SULLY	sully3 ID200	169.254.214.134	255.255.0.0	--	--	Robert Juliat	○	
●	SULLY	sully8	169.254.211.134	255.255.0.0	--	--	Robert Juliat	○	
●	SULLY	Sully2 Zone	169.254.197.134	255.255.0.0	--	--	Robert Juliat	○	
●	SULLY	ESIB Node 1	192.168.10.200	255.255.255.0	--	--	Robert Juliat	○	
●	SULLY	sully6	169.254.193.134	255.255.0.0	--	--	Robert Juliat	○	
●	SULLY	sully4	169.254.198.134	255.255.0.0	--	--	Robert Juliat	○	
●	SULLY	Sully5	169.254.202.134	255.255.0.0	--	--	Robert Juliat	○	
●	SULLY	Sully7	169.254.196.134	255.255.0.0	--	--	Robert Juliat	○	

5.5 Fan cooling modes


5.5.1 Range

Mode	Fan Speed 
SILENT	Minimum – constant speed
NORMAL	Regulated – depending on ambient temperature
FULL	Maximum – constant speed

5.5.2 Control

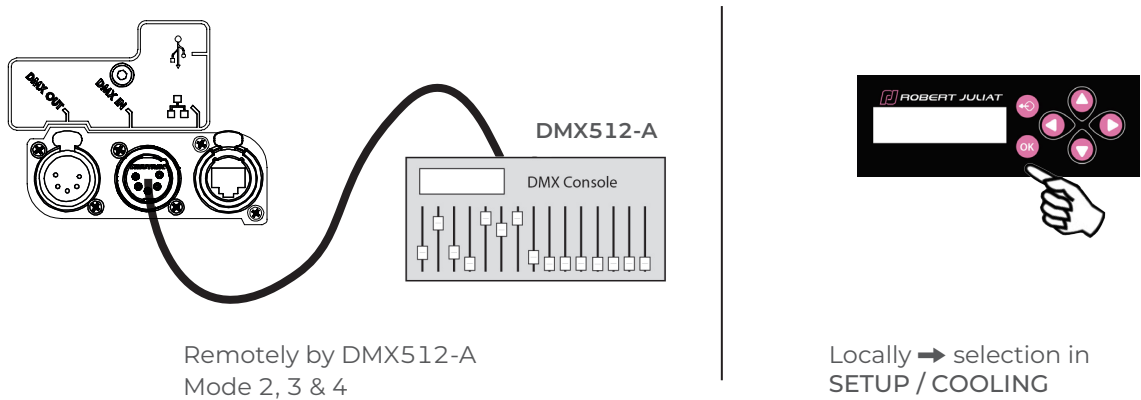

→ selection in SETUP / CONTROL

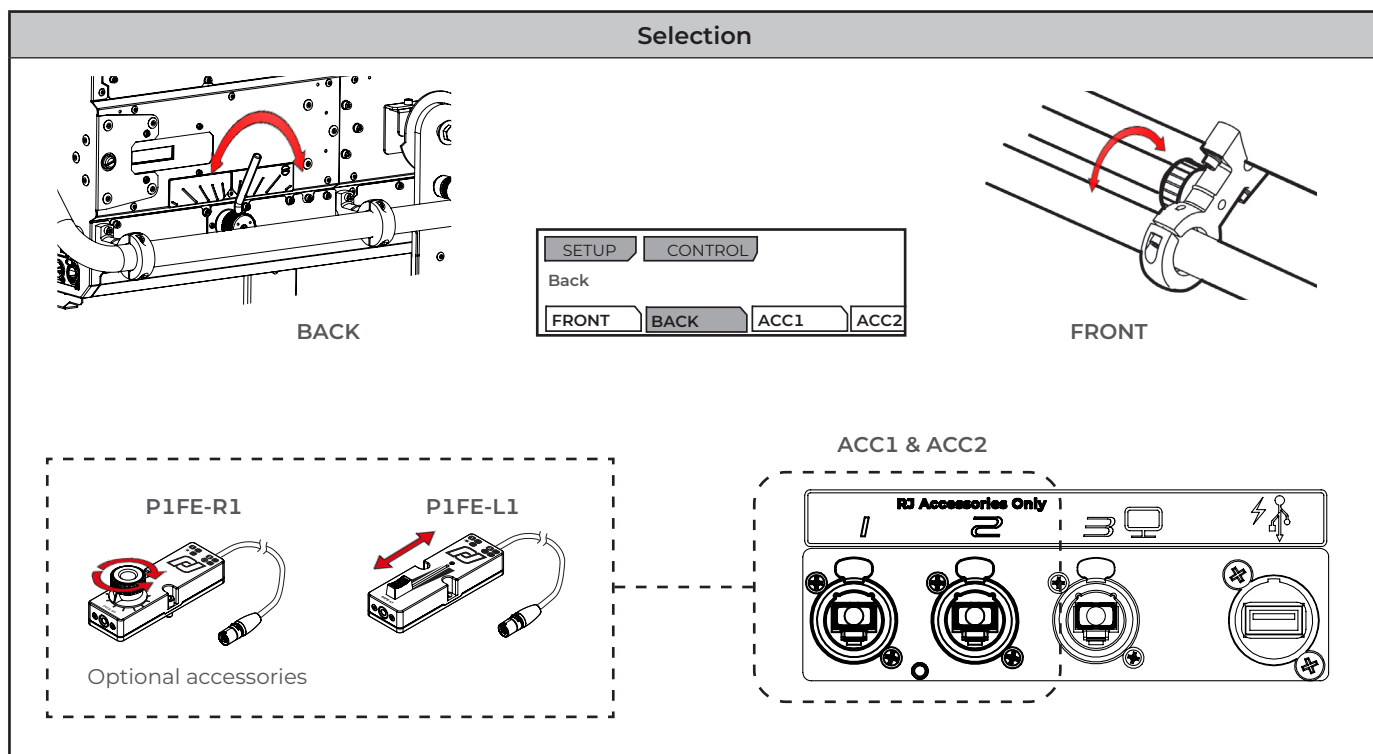

Function	Parameters	Description
Rotation		Normal (CW): Clockwise Invert (CCW): Anticlockwise
Calibration		Adjust to the minimum position Adjust to the maximum position

6.1 Preventive maintenance

6.1.1 Frequency

General maintenance should be performed at least once a year or more frequently if the equipment is operated in adverse conditions (smoke, heat, humidity, touring, etc.).

6.1.2 General cleaning

Remove dust from the unit.

6.1.3 General visual check




- No trace of heat.
- No loose contacts.
- No missing parts.
- Tighten mechanical assemblies (screws, bolts and nuts, etc.).

6.1.4 LED source

- Do not touch the surface of the LED source (no contact with your hands or any tools).
- Do not put compressed air directly on the source.
- Contact a certified RJ distributor in case of residuals or other objects located on the surface of the LED source.


6.1.5 Optics

Only use solutions containing alcohol to clean optical parts (lenses).

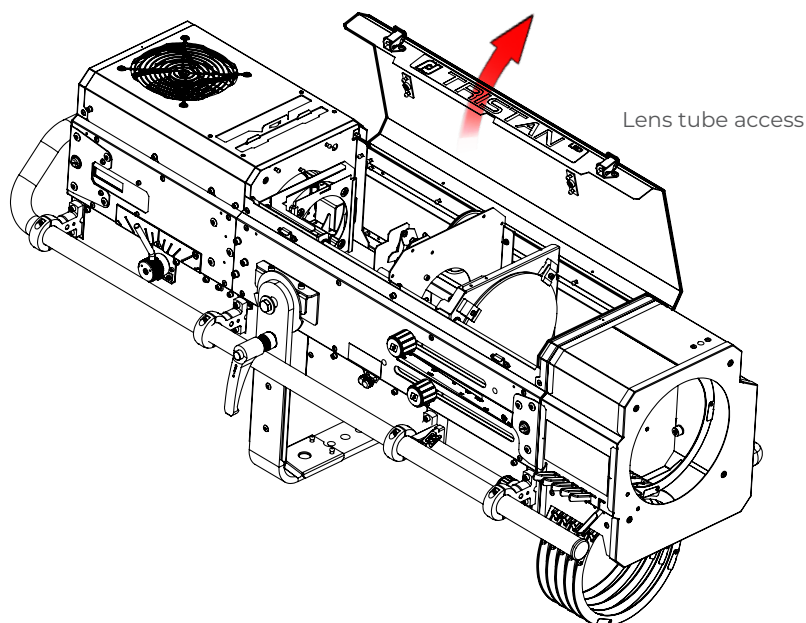

- To clean the optical parts, use a soft cloth in combination with distilled water or isopropyl alcohol recommended for coated optics. Do not use any cleaning product that contains solvents or abrasives, as these can cause surface damage.
- Dry with a soft lint-free cloth.

Removing the LED housing cover: 1 → 2

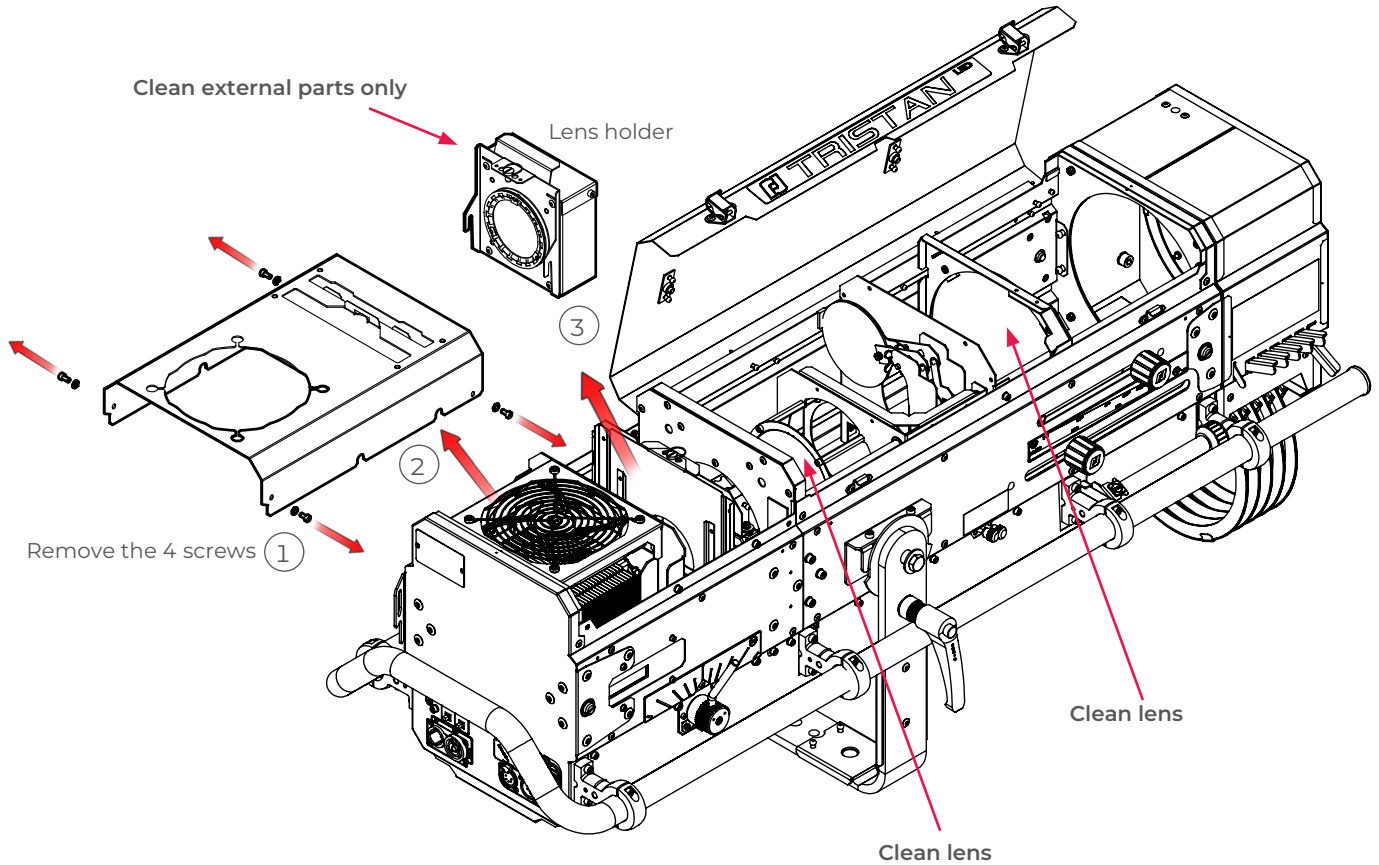

In case of problem, contact RJ distributor with the following information:

- Model, version and serial number of the product.
- From the menu status:
 - Software version
 - LED board IDs
 - Device hours
 - Picture of the Selftest Report (Cf. section 6.6 Selftest)
- Description of the problem.



6.3 Electronic thermal management system

In case of overheating, light intensity will be reduced by the system.

“Power reduction X%” will be shown on the display with the reducing percentage.

6.4 Firmware update

1. Firmware available on www.robertjuliat.com/followspots/Tristan
2. Download and unzip the file

There are 4 files:

- Firmware (.upd2 format)
- Firmware history
- Update procedure
- User manual from firmware version V4.0x onwards


3. Switching on the lighting fixture
4. Connect Network from computer to the fixture
5. Open a Web browser (Microsoft Edge, Firefox, Apple Safari....)
6. Enter the fixture's IP address in the browser's address bar.



- “00X” is read as “X”.
- Never type a zero (0) before the numbers XX or X (**see 5.4.4**)

7. Upload your firmware file (.upd2)


In the “Update firmware” window, select the update file and click on “Submit firmware”.

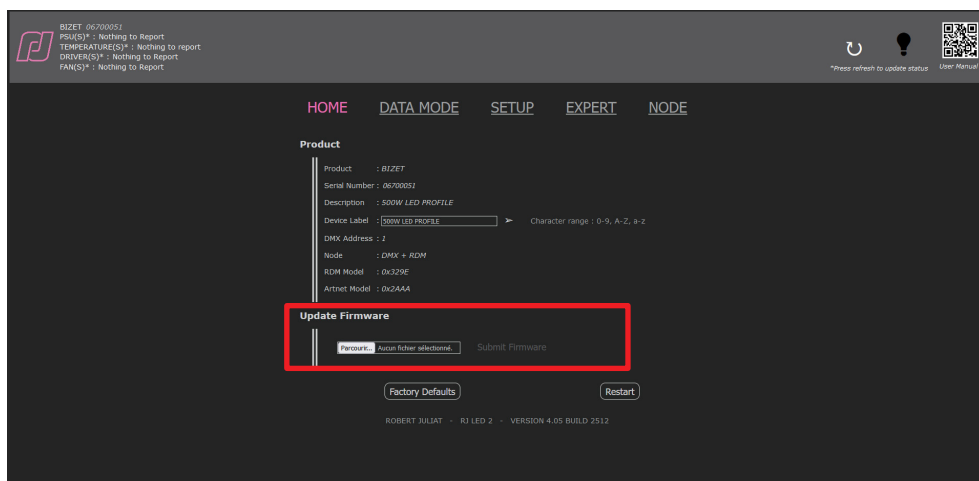


6.5 Factory defaults

Select **FACTORY DEFAULT** in the main menu to reset all values and parametres


Set to factory defaults /
reset through web interface
(Home page)

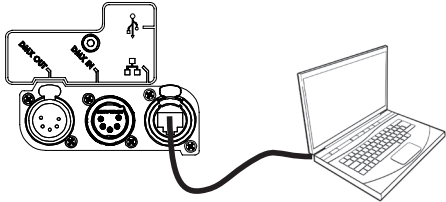

Set to factory defaults /
reset through RDM protocol

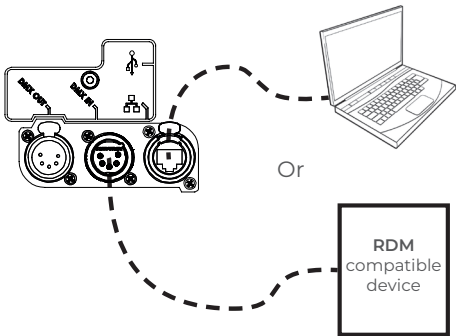

Set to factory defaults /
reset through local control

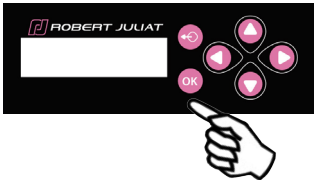

6.6 Selftest

Select **SELFTEST** in the STATUS menu :



Press OK
to start
SELFTEST



At the end of each test, a **PASS/FAIL** message will be displayed.

If the DMX and network functions need to be tested, the system will prompt you to perform certain operations.

test report: Fail				P=Pass F=Fail			
fans	P	pow	P	temp	P	dmxi	P
dmxo	F	net	F	drv	P		

Test Report

An "F" (FAIL) or "P" (PASS) will be displayed at the end of the self-test (SELFTEST).

If the problem persists, please take a photo of the test result and send it either to your Robert Juliat dealer or to the Robert Juliat After-Sales Service, if requested (email: service@robertjuliat.fr)