

Moonlite 80 Flush mount bracket installation procedure


Remove bracket from wrapping



With a deep 7mm socket remove and discard the 4 nyloc nuts




Unscrew the 4 screws completely so the fascia panel is now apart from the retaining section

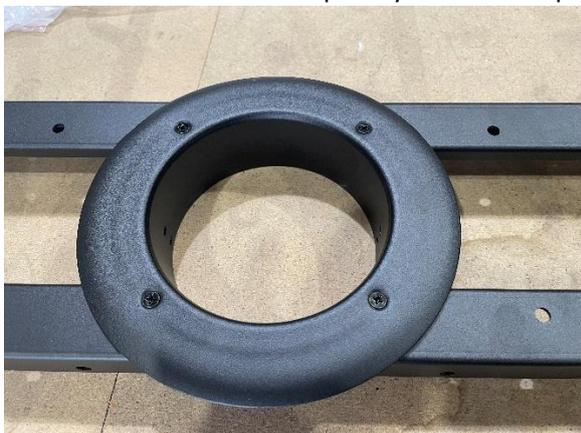

With the 4 short screws supplied fix the fascia panel to the Moonlite 80 and secure tight also completely remove the hanging bracket of the Moonlite 80 and discard



Now drill 160mm diameter hole in the surface you plan to install the fixture into

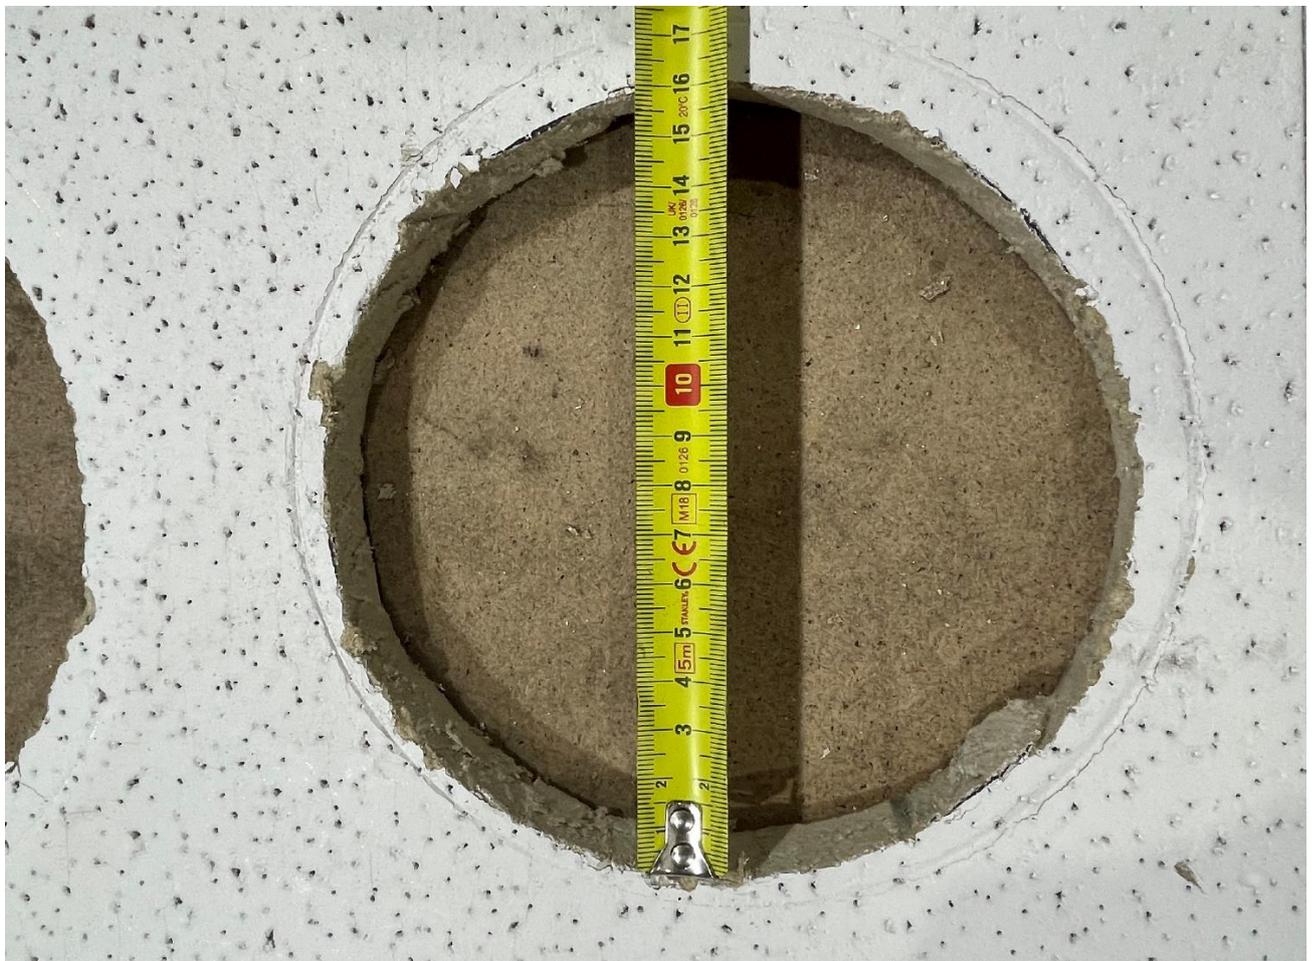

Now feed the retaining section of the bracket through the 160mm hole ensuring it is perfectly placed in the centre of the hole



Complete your wiring of the fixture via the hole connect power and data to the Moonlite 80 and install and secure the Moonlite 80 with the 4 long screws to the retaining section.



Installation complete

